

Getting Started

Learn about your HiKey960 board as well as how to prepare and set up for basic use

Setup - What you will need

Need

- [HiKey960](#)
 - Board based on the Kirin 960 Processor
- [Power adapter](#)
 - 96Boards specifications requires a 8V-18V with 2000mA Power adapter
- USB Type-A (Host Machine) to USB Type-C (HiKey960) cable
 - This is needed for interfacing with fastboot/adb commands
- [USB Keyboard and Mouse](#)
 - With two USB-A connectors, all 96Boards can be equipped with a full sized keyboard and mouse
- Monitor and HDMI Cable
 - All 96Boards are equipped with a full sized HDMI connector, HDMI capable monitor is recommended
- Jumpers / DIP Switches
 - J2001 Header on the HiKey960 comes with two pin-jumpers, does not apply for DIP Switches


Optional

- [Mezzanine Products](#)
 - These devices allow you to expand your experience with any 96Boards by adding peripherals and enhancing onboard components
- USB to MicroUSB cable

- This is needed for serial console interfacing
 - USB to ethernet adapter and ethernet cable
 - For connecting to a network without using WiFi
-

Out of the Box

The following subsections should describe how to get started with the HiKey960 using the release build shipped with the boards. The HiKey960 board is ready to use “out of the box” with a preinstalled version of AOSP.

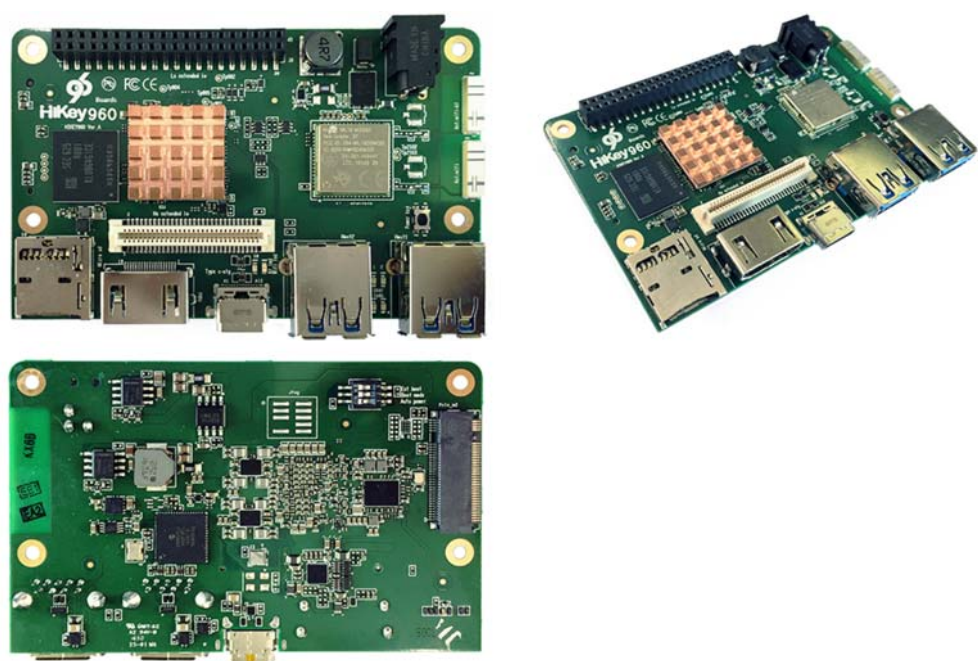

Features

COMPONENT	DESCRIPTION
SoC	Kirin 960
CPU	4 Cortex A73 + 4 Cortex A53 Big.Little CPU architecture
GPU	ARM Mali G71 MP8
RAM	3GB LPDDR4 SDRAM

COMPONENT	DESCRIPTION
PMU	Hi6421GWCV530 PMU
Storage	32GB UFS Flash Storage
Wireless	WiFi (2.4- and 5-GHz dual band with two antennas) and Bluetooth 4.1
USB	2 x USB 3.0 type A (host mode only) and 1 x USB 2.0 type C OTG
Display	1 x HDMI 1.4 (Type A - full), 1 x 4L-MIPI DSI and HDMI output up to FHD 1080P
Video	Inside Encoder: H.265/H.264 3840 x 2400@30fps 4 x 1080p @ 30 fps, Inside Decoder: H.265, HEVC MP/High Tier, Main 10/High Tier, H.264 BP/MP/HP, MPEG1/2/4, VC-1, VP6/8
Audio	HDMI output
Camera	1 x 4-lane MIPI CSI and 1 x 2-lane MIPI CSI
Expansion Interface	40 pin low speed expansion connector: +1.8V, +5V, DC power, GND, 2UART, 2I2C, SPI, I2S, 12xGPIO and 60 pin high speed expansion connector: 4L-MIPI DSI, I2C x2, SPI (48M), USB 2.0, 2L+4LMIPI CSI
LED	1 x WiFi activity LED (Yellow), 1 x BT activity LED (Blue) and 4 x User LEDs (Green)
Button	Power Button : Button Power on/off & Reset the system
Power Source	Recommend a 12V@2A adapter with a DC plug which has a 4.75mm outer diameter and 1.7mm center pin with standard

COMPONENT	DESCRIPTION
	center-positive (EIAJ-3 Compliant)
OS Support	AOSP/LINUX
Size	85mm x 55mm

Please visit the [HiKey960 Hardware User Manual](#) for more information

IMPORTANT NOTES

- HDMI EDID display data is used to determine the best display resolution. On monitors and TVs that support 1080p (or 1200p) this resolution will be selected. If 1080p is not supported the next available resolution reported by EDID will be used. This selected mode will work with **MOST but not all** monitors/TVs.
- As there is only one USB controller on the HiKey960, there are limitations on the usage of the USB ports, such that either the USB-C OTG port **OR** the USB-A/mezzanine ports can be used at one time. If anything is plugged into the USB-C port, the other ports will stop functioning.

Starting the board for the first time

Modes

Your HiKey960 has 3 modes: **normal**, **fastboot** and **recovery**.

NAME	LINK / SWITCH	NORMAL MODE	FASTBOOT MODE	RECOVERY MODE
Auto Power up	Link 1-2 / Switch 1	closed / ON	closed / ON	closed / ON

NAME	LINK / SWITCH	NORMAL MODE	FASTBOOT MODE	RECOVERY MODE
Recovery	Link 3-4 / Switch 2	open / OFF	open / OFF	closed / ON
Fastboot	Link 5-6 / Switch 3	open / OFF	closed / ON	open / OFF

- Normal Mode: Select this mode to have HiKey960 boot OS from onboard storage
- [Fastboot Mode](#): Select this mode to flash a new Operating system using the OTG (USB Type-C) port and fastboot commands
- [Recovery Mode](#): Select this mode to recover HiKey960 from bricked state. Also use when updating base firmware

First boot

- HiKey960 is not connected to power
- Ensure HiKey960 is in Normal Mode
- Connect HDMI cable to compatible monitor
- Connect Keyboard and Mouse
- Power on with 96Boards compliant power supply

Board should boot up into AOSP.

Explore your HiKey960

If you are already familiar with the HiKey960 board and would like to change out the stock operating system, please proceed to one of the following pages:

- [HiKey960 96Boards Home page](#)
- [Downloads page](#): This page lists all Linaro and 3rd party operating systems

available for HiKey960

- [Installation page](#): If you already have the images you need, this page has information on how to install the different operating systems onto your HiKey960 board
- [Board Recovery](#)
 - If at any time your board is having unexplainable issues, it is suggested to attempt a board recovery. These instructions will guide you through a succesfull board recovery.
- [Support](#)
 - From bug reports and current issues, to forum access and other useful resources, we want to help you find answers

Return to the [HiKey960 Documentation home page](#)