AMPROBE®

Data Sheet



AMB-50 5000V Basic Insulation Resistance Tester

Amprobe AMB-50 High-Voltage Insulation Tester has the necessary features for professional insulation diagnostics. It features calculation of PI, and DAR parameters. The PASS/FAIL comparison function helps to improve testing productivity. Readings are clearly displayed on a large backlit LCD display. Windows compatible PC Software and USB communications port serve for connecting the instrument to the PC and management of the recorded test data.

- Test insulation of wires, cables, transformers, motors, surge arrestors and generators
- Selectable testing voltages one testing instrument for low and high voltage systems from 500/1000/2500 and 5000V
- Insulation resistance measurement up to $1T\Omega$
 - User selectable Programmable Timer (10s to 30 min)
 - Automatic discharge of test object after completion of measurement
- Diagnostic tools
 - Polarization index (PI)
 - Dielectric Absorption Ratio (DAR)
 - Comparison feature to set PASS / FAIL thresholds for quick measurement and verification
- Dual power source receptacle or batteries
- **Built in internal memory storing 18 measurements**
- Comes as a complete kit: Power Adapter, Software, USB Interface Cable, Hard Carrying case, Batteries, complete set of test leads, and instruction manual
- CAT III 600V

No hassle warranty

No waiting.





Our commitment to high-quality products and customer service is demonstrated by our industry exclusive "No Hassle" warranty. In the unlikely event that an Amprobe Test Tool requires warranty service, any of our local dealers are authorized to replace it, on the spot.

(note: \$500 MSLP limit)





AMB-50 5000V Basic Insulation Resistance Tester

Data Sheet

General Specifications

| Display (LCD) | 1999 counts. Analog bar graph. | | |
|-----------------------|--|--|--|
| Operating Temperature | -10°C~40°C (14°F ~104°F) | | |
| Storage Temperature | -20°C ~60°C (-4 °F~152°F) | | |
| Relative Humidity | < 85% @ -10°C ~40°C below; < 90% @ 0°C ~40°C : | | |
| Battery Type | 8pcs X 1.5V (LR14) batteries or power adaptor (input voltage 230V, 50/60Hz, 75mA, input DC14V, 1.0A). Power adaptor is not included | | |
| Storage Environment | -20°C to 60°C, 0 to 70% R.H. with battery removed from meter. | | |



AMB-50 5000V Basic Insulation Resistance Tester

Data Sheet

| | | _ | | |
|------|--------|-----|-------|-------|
| IAC | าทเผลโ | \ne | CITIC | ation |
| 1001 | micai | JPC | | ation |

| eature | | | | | |
|-------------------------|--|------------|--|--|--|
| Insulation Resistance @ | 500V 1000V 2500V 5000V | | | | |
| Range | $0.5 \ M\Omega - 20 \ G\Omega$ $2 \ M\Omega - 40 \ G\Omega$ $5 \ M\Omega - 100 \ G\Omega$ $100 \ M\Omega - 1000 \ G\Omega$ | | | | |
| Open Circuit Voltage | DC 500V 0%~+20% DC 1000V 0%~+20% DC 2500V 0%~+20% DC 5000V 0%~+20% | | | | |
| Test Current | 1mA~1.2mA @ 500k Ω 1mA~1.2mA @ 1M Ω 1mA~1.2mA @ 2.5M Ω 1mA~1.2mA @ 5M Ω | | | | |
| Accuracy | | | | | |
| 500V | 0.50M ~99.9M : (3%+5) 100M ~9.99G : (5%+5) 10.0G ~20.0G : (10%+5) | | | | |
| 1000V | 2.0M ~99.9M : (3%+5) 100M ~9.99G : (5%+5) 10.0G ~40.0G : (10%+5) | | | | |
| 2500V | 5.0M ~99.9M : (3%+5) 100M ~99.9G : (5%+5) 10.0G ~100G : (10%+5) | | | | |
| 5000V | 10.0M ~29.9M: (For reference only) 30.0M ~99.9M: (3%+5) 100M ~9.99G: (5%+5) 10.0G ~99.9G: (10%+5) Above 100G: [(20%+5) Humidity:Below 50%] | | | | |
| oltage | Range | Resolution | Accuracy | | |
| DC | ±30 ~ ±600V | 1V | (±2%+5) Among them 30~100V(50/60Hz)±(2%+8) | | |
| AC | 30V~600V (50/60Hz) | 1V | (±2%+5) Among them 30~100V(50/60Hz)±(2%+8) | | |
| imensions | 220(L) X 155 (W) X94(H)mm (7.95 X 6.1 X 3.7 inch) | | | | |
| /eight | Approx. 2kg (4.4 Lbs) (including battery) | | | | |
| ncluded Accessories | AMB-50 Insulation Resistance Tester, Test Leads (1 set), Test Probe (1 set), Plug type test Lead with Alligator clip (Green), Plug type test Lead with Alligator clip (Red), 8 Batteries (1.5V, LR14), Users Manual, Tool Box, Software, USB Cable, Power adaptor. | | | | |



AMB-50 5000V Basic Insulation Resistance Tester

Data Sheet



Amprobe® Test Tools

website: www.Amprobe.com email: info@amprobe.com Everett, WA 98203

Tel: 877-AMPROBE

Amprobe® Test Tools Europe

In den Engematten 14 79286 Glottertal, Germany Tel.: +49 (0) 7684 8009 - 0

©2010 Amprobe Test Tools. All rights reserved. 6/2010 AMB-50_DS Rev A