Features

- Fully Compliant to VAN Specification ISO/11519-3
- Handles All Specified Module Types
- Handles All Specified Message Types
- Handles Retransmission of Frames on Contention and Errors
- 3 Separate Line Inputs with Automatic Diagnosis and Selection
- Normal or Pulsed (Optical and Radio Mode) Coding
- VAN Transfer Rate: 1 Mbit/s Maximum
- SPI/SCI Interface
- SPI Transfer Rate: 4 Mbits/s Maximum SCI Transfer Rate: 125 Kbits/s Maximum
- Idle and Sleep Modes
- 128 Bytes of General Purpose RAM
- 14 Identifier Registers with All Bits Individually Maskable
- 6-source Maskable Interrupt Including an Interrupt-on-reset to Detect Glitches on the
 Paget Pin
- Integrated Crystal or Resonator Oscillator with Internal Baud Rate Generator and Buffered Clock Output
- Single +5V Power Supply
- 0.5 μm CMOS Technology
- SO16 Package

Description

The TSS463C is a circuit that allows the transfer of all the status information needed in a car or truck over a single low-cost wire pair, thereby minimizing electrical wire usage. It can be used to interconnect powerful functions and to control and interface car body electronics (lights, wipers, power window, etc.).

The TSS463C is fully compliant with the VAN ISO standard 11519-3. This standard supports a wide range of applications such as low-cost remote controlled switches, typically it is used for lamp control, up to complex, highly autonomous, distributed systems that require fast and secure data transfers.

The TSS463C is a microprocessor-interfaced line controller for mid-to-high complexity bus-masters and listeners like dashboard controllers, car stereo or mobile telephone CPUs.

The microprocessor interface consists of a 256-byte RAM and a register area divided into 11 control registers, 14 channel register sets and 128 bytes of general-purpose RAM, used as a message storage area, and a 6-source maskable interrupt.

The circuit operates in the RAM using DMA techniques, controlled by the channel and control registers. This allows virtually any microprocessor, including SPI/SCI interface, to be connected with ease to the TSS463C.

Messages are encoded in enhanced Manchester code, and an optional pulsed code for use with an optical or radio link, at a maximum bit rate of 1 Mbit/s. The TSS463C analyzes the messages received or transmitted according to 6 different criteria including some higher level checks.

In addition, the bus interface has three separate inputs with automatic source diagnosis and selection, allowing for multibus listening or the automatic selection of the most reliable source at any time if several line receivers are connected to the same bus.



VAN Data Link Controller with Serial Interface


TSS463C








Block Diagram

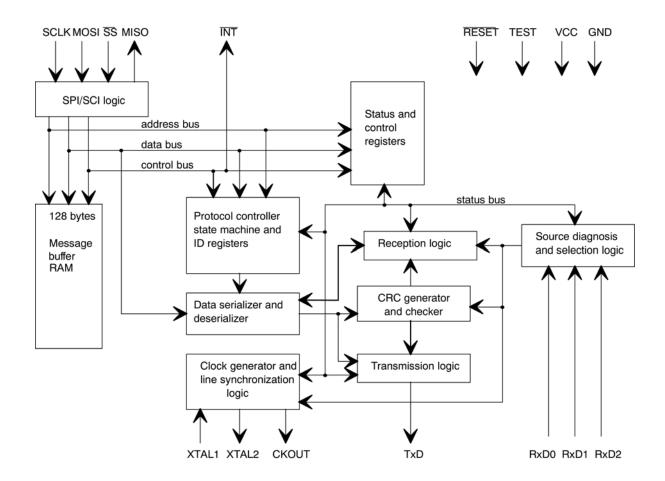

Pin Configuration

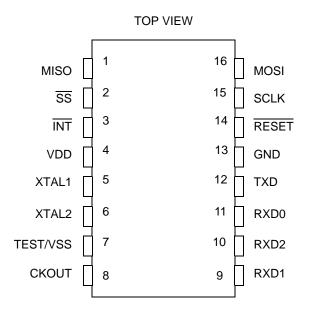

Pin Description

I/O Type	Pin Name	Pin No	Pin Function
O 3-state	MISO	1	SPI/SCI Data Output
I trigger CMOS	SS	2	SPI/SCI Slave Select (active low)
Open-drain	ĪNT	3	Interrupt (active low)
Power	VDD	4	+ 5V power supply
I CMOS	XTAL1	5	Crystal oscillator or clock input pin
0	XTAL2	64	Crystal oscillator output pin
Ground	TEST/VSS	7	Test mode input
0	СКОИТ	8	Buffered clock output
I CMOS Pull-down	RXD1	9	VAN bus input 1
I CMOS Pull-down	RXD2	10	VAN bus input 2
I CMOS Pull-down	RXD0	11	VAN bus input 0
O 3-state	TXD	12	VAN bus output
Ground	GND	13	
I trigger CMOS pull-up	RESET	14	Hardware Reset (active low)
I trigger CMOS	SCLK	15	SPI/SCI Clock Input
I trigger CMOS	MOSI	16	SPI/SCI Data Input






Application

The TSS463C is a microprocessor controlled line controller for the VAN bus. It can interface to virtually any microprocessor that includes SPI or SCI interface.

- The TSS463C provides one full Motorola© compatible SPI interface.
- It includes one full compatible Intel UART (mode 0 only).
- One 9-bits SCI interface is also integrated.

The circuit also features a single interrupt pin. This pin can be treated as level sensitive, i.e. if there is a pending interrupt inside the circuit when another interrupt is reset the INT pin will emit a high pulse with the same pulse width as the internal write strobe (typically 20 ns).

Figure 1. Typical Application With Motorola SPI Mode

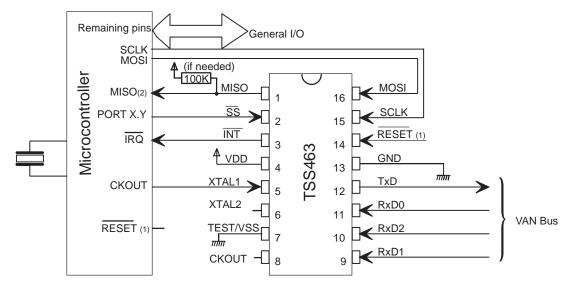

Notes:

- 1. The TSS463C RESET pin can be either connected to GND through a 1 μ F capacitor, or the μ C RESET pin or unconnected (inactive with internal pull-up).
- 2. Leaving MISO output pin floating in high impedance mode slightly increases standby consumption. A $100 \text{K}\Omega$ pullup/pulldown resistor is recommended.

Microprocessor Interface

The processor controls the TSS463C by reading and writing the internal registers of the circuit. These registers appear to the processor as regular memory locations.


Interface Modes

The TSS463C must be connected with an SPI or SCI serial interface. The following section provides information switching from one mode to another.

Motorola SPI Mode

The first two bytes to be sent by the master (CPU) are called 'Initialization Sequence': This sequence provides a proper asynchronous RESET in the TSS463C and it selects the Motorola SPI, Intel SPI or the SCI serial mode. This initialization sequence is shown on figure 4: two 0x00 will cause an internal RESET and assert the Motorola SPI mode, two '0xFF' will provide an internal RESET and assert the Intel SPI mode and '9 bits to 0 followed by 0xFF or 0xFE'will generate an internal RESET and assert the 9-bits SCI mode.

Figure 2. Mode Configuration Byte

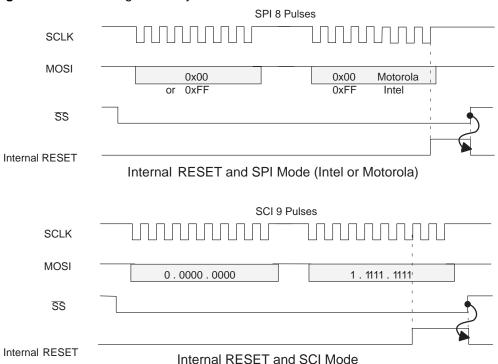

The Motorola Serial Peripheral Interface (SPI) is fully compatible with the SPI Motorola protocol. The interface is implemented for slave-mode only (the TSS463C can not generate SPI frames by itself).


The SPI interface allows the interconnection of several CPUs and peripherals on the same printed circuit board.

The SPI mode interface consists of 4 pins: separate wires are required for data and clock, so the clock is not included in the data stream as shown on Figure 3. One pin is needed for the serial clock (SCLK), two pins for data communication MOSI and MISO and one pin for Slave Select (SS)





Figure 3. SPI Data Stream

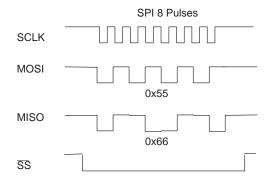

SCLK: Serial Clock

The master device provides the serial clock for the slave devices. Data is transferred synchronously with this clock in both directions. The master and the slave devices send/receive a data byte during an eight-clock pulse sequence.

MOSI: Master Out Slave In

The MOSI pin is the master device data output (CPU) and the slave device data input (TSS463C). Data is transferred serially from the master to the slave on this line; most significant bit (MSB) first, least significant bit (LSB) last.

MISO: Master In Slave Out

The MISO pin is configured as the slave device data output (TSS $\underline{463C}$) and as master device data input (CPU). When the slave device is not selected ($\overline{SS} = 1$), this pin is in high impedance state.

SS: Slave Select

The \overline{SS} pin is the slave chip select. It is low active. A low state on the Slave Select input allows the TSS463C to accept data on the MOSI pin and send data on the MISO pin. The Slave Select signal must not toggle between each transmitted byte and should be left at a low level during the whole SPI frame. \overline{SS} must be asserted to inactive high level at the end of the SPI frame.


As mentioned before, if \overline{SS} is not asserted, MISO pin is in a high impedance state and incoming data is not driven to the serial data register.

SPI Protocol

The general format of the data communication in the SPI frame between the TSS463C and the host is a bit-for-bit exchange on each SCLK clock pulse. Data is arranged in the TSS463C such that the significance of a bit is determined by its position from the start for output and from the end for input, most significant bit (MSB) is sent first. Bit exchanges in multiples of 8 bits are allowed.

The Idle Clock Polarity (CPOL) and the Clock Phase (CPHA) are not programmable: the CPOL and CPHA values to be programmed in the master (CPU) are CPOL = CPHA = 1. This is available for all modes. Waveforms with transmit and sample points are shown in Figure 6.

Figure 4. CPOL and CPHA in the TSS463C

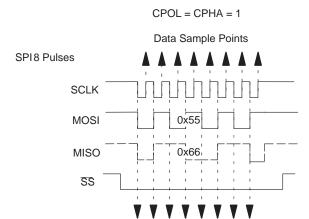

At the beginning of a transmission over the serial interface, the first byte is the address of the TSS463C register to be accessed. The next byte transmitted is the control byte that determines the direction of the communication. The following bytes are data bytes (consecutive bytes are written in or read from Address, Address + 1, Address + 2, ..., Address + n with n = 0 to 28).

Data Transmit Points

To make sure the TSS463C is not out of synchronization, the SPI interface will transmit data '0xAA'and '0x55'on the MISO pin during address and control byte time. This way, the master always ensures the TSS463C is well-synchronized. If the TSS463C is out of synchronization, the master can assert the $\overline{\rm SS}$ pin inactive to resynchronize the SPI interface or can assert the $\overline{\rm RESET}$ pin active or can send an initialization sequence. When the $\overline{\rm SS}$ pin is inactive, the SCLK is allowed to toggle. This will have no effect on the TSS463C SPI module.

SPI Control Byte

The SPI control byte is transmitted by the master (CPU) to the TSS463C. It specifies whether it is a TSS463C Write or Read.

Table 1. SPI Control Byte

/	6	5	4	3	2	1	0
DIR	1	1	0	0	0	0	0

DIR: Serial Transfer Direction

Zero: Read Operation. The data bytes will be read by the master (CPU) from the TSS463C.

One: Write Operation. The data bytes will be written by the master (CPU) to the TSS463C.

In both cases, address auto-increment mechanism will take place when more than one data byte is read or written. This mechanism is inhibited when address value reaches 0xFF.

The seven following bits are reserved and must be equal to: 1100000.

When the master (CPU) conducts a write, it sends an address byte, a control byte and data bytes on its MOSI line. The slave device (TSS463C) will send, if well-synchronized, '0xAA'during the address byte and '0x55'during the control byte on its MISO line.





When the master (CPU) conducts a read, it sends an address byte, a control byte and dummy characters ('0xFF'for instance) on its MOSI line. In the case of a VAN messages RAM read (VAN frame received), the first data byte sent back by the TSS463C on its MISO pin is the *data length* so the master knows how many dummy characters it must send to read the VAN frame properly. When the TSS463C responds back with data, it will not take care of the MOSI line.

The master must activate and desactivate SS between each data frame.

Synchronization bytes must be monitored carefully. For instance, if '0xAA' and '0x55' are not monitored correctly, then the previous transmission may be incorrect too.

A control byte containing '0x00' or '0xFF' is forbidden except during an 'Initialization Sequence'.


Intel SPI Mode

The Intel SPI mode is the second type of interface. As mentioned before, the TSS463C enters this mode if the Initialization Sequence contains (first two bytes received) '0xFF, 0xFF'.

This mode is fully compatible to the Intel UART serial interface programmed in mode 0 only. It is the same as Motorola SPI mode (same CPOL and CPHA) but with inverted communication sense (LSB first and MSB last). The protocol is also the same.

However, from the master point of view (host microcontroller), the hardware is different. Figure 5 shows how to connect the TSS463C and Intel type microcontroller.

Figure 5. Typical Application With the 8051 UART in Mode 0

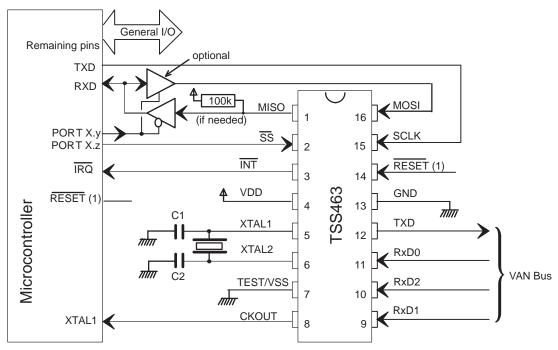

Note: 1. The RESET pin can either be connected to GND through a 1 μF capacitor, or to the microcontroller RESET pin, or unconnected (inactive with internal pull-up).

The master device provides the serial clock on the TxD pin and is still connected to SCLK pin of the slave device.

Then, the RxD replaces the MOSI and MISO pins and is a bidirectional pin. To achieve a correct communication, the user should add a few gates to connect the master RxD pin to the MOSI-MISO slave pins.

Figure 5 proposes two 3-state buffers controlled by the master through a general purpose I/O pin.

It is obvious that, in this Intel SPI mode, the master cannot monitor the '0xAA and 0x55'synchronization bytes while sending the address and control bytes. It is the only exception of this mode compared with the Motorola SPI mode.


The SCI mode is the third type of interface. The TSS463C enters this mode if the Initialization Sequence contains (first two bytes received) '0x00, 0xFF'.

The SCI is compatible with a 9-bits SCI protocol. The interface is implemented for slave-mode only (the TSS463C cannot generate SCI frames by itself).

The SCI interface allows an interconnection of several CPUs and peripherals on the same printed circuit board.

The SCI mode interface consists of 4 pins: separate wires are required for data and clock, so the clock is not included in the data stream as shown in Figure 7. One pin is needed for the serial clock (SCLK), two pins for data exchange MOSI and MISO and one pin for Slave Select (SS).

Figure 6. SCI Data Stream

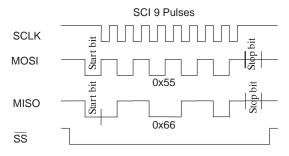

SCLK: Serial Clock

SCI Mode

The master device provides the serial clock for the slave devices. Data is transferred synchronously with this clock in both directions. The master and the slave devices exchange a data byte during a **nine** clock pulses sequence. However, the TSS463C will only monitor 8 bits on its MOSI line and send 9 bits on its MISO line.

MOSI: Master Out Slave In

The MOSI pin is the master device data output (CPU) and the slave device data input (TSS463C). Data is transferred serially from the master to the slave on this line; **least** significant bit (LSB) first, **most** significant bit (MSB) last. The TSS463C will only monitor 8 bits starting from the LSB to MSB-1.

MISO: Master In Slave Out

The MISO pin is configured as the slave device data output (TSS $\underline{463}$ C) and as master device data input (CPU). When the slave device is not selected (\overline{SS} = 1), this pin is in high impedance state. The value of the MSB (9th bit) sent on the MISO pin will always be '1'and should not be used by the master.

SS: Slave Select

The \overline{SS} pin is the slave chip select. It is low active. A low state on the Slave Select input allows the TSS463C to accept data on the MOSI pin and send data on the MISO pin.





The Slave Select signal must not toggle between each <u>transmitted</u> byte and therefore, should be left at a low level during the whole SCI frame. SS must be asserted to inactive high level at the end of the SCI frame.

If SS is not asserted, MISO pin is in high impedance state and incoming data is not driven to the serial data register.

SCI Protocol

Same as the SPI protocol described before except for data arranging (LSB first and MSB last).

Only 8 bits are monitored by the TSS463C and master must monitor the 8 first bits too (9th bit always equal to 1).

SCI Control Byte

Same as the SPI control byte.

Clocks and Speed Considerations

SCLK and XTAL Clocks


The SPI/SCI speed rate is given by the CPU producing SCLK. XTAL clock controls the speed rate on the VAN bus. The two clocks are asynchronous but a minimum SPI/SCI interframe spacing must be apply according to XTAL clock.

Intel and Motorola SPI Modes

Within an SPI byte, the maximum speed allowed on the MOSI line is 4 Mbits/s.

For example, when using a 1 MHz oscillator (Sufficient to provide 62.5 kTS/s on the VAN bus) the minimum inter-character delay is 12 μ s (12 oscillator periods). Speed considerations are detailed in Figure 7.

Figure 7. SPI Speed Considerations

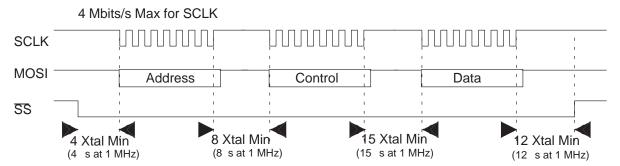


SCI Mode

Within an SCI 9-bits data, the maximum speed allowed on the MOSI line is 125 Kbits/s. When using a 1 MHz oscillator, the data transfer speed and the minimum delay time between SCI bytes are shown in Figure 8.

Figure 8. SCI Speed Considerations

125 Kbits/s Max for SCLK

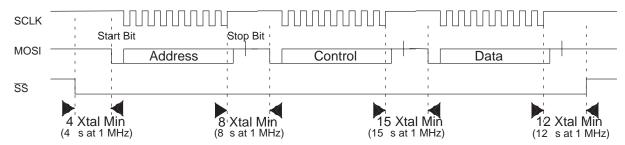

Interrupts

If an event occurs in the TSS463C that needs the attention of the processor, this will be signalled on the active low, open drain interrupt request pin. The event that creates this request is controlled by the internal registers.

Every time the microprocessor accesses any of the interrupt registers (addresses 0x08 to 0x0B), the INT pin will be released momentarily. This enables the TSS463C to work with processors that have either edge or level sensitive interrupt inputs.

Reset

The reset is applied asynchronously or synchronously to the XTAL clock.

Asynchronous Reset

It can be done either by the RESET pin (hardware asynchronous reset) or by software (software asynchronous reset).

The $\overline{\text{RESET}}$ pin is a CMOS trigger input with a pull-up resistor (~ 70 k Ω). An external 1 μF capacitor to GND provides to $\overline{\text{RESET}}$ pin an efficient behavior.

The asynchronous software reset is made by the 'Initialization Sequence'described in "Motorola SPI Mode" on page 5.

Two '0x00'bytes provide an asynchronous software reset and configure the TSS463C in the Motorola SPI mode while two '0xFF'bytes provide a reset and configure the component in the Intel SPI mode and '0x00 followed by 0xFF 'provide a reset and configure the component in the SCI mode. The SS pin must be asserted as shown on Figure 9. The SPI/SCI logic will monitor these two bytes and provide an internal reset pulse asserting the TSS463C in the right mode.

Synchronous Reset

A synchronous reset (regarding XTAL clock) is available on the TSS463C during current operation. It is made through the GRES command bit of the Command Register (address 0x03).

The two kinds of reset are ordered and filtered. Then the internal reset, always asserted asynchronously, enables the internal oscillator. Then it waits for 12 clock periods and the oscillator stability.


The different blocks of the TSS463C need to be turned on synchronously. So the release of the internal reset is synchronous and a loose of clock can let the TSS463C in permanent reset after applying Reset.

It is important to note that even after a reset on the RESET pin, the user should wait for 12 clock periods before sending the 'Initialization Sequence'in order to select the SPI or SCI mode (because the default mode after a hardware reset is the Motorola SPI mode).





Figure 9. Asynchronous Software Reset with UART Intel Mode

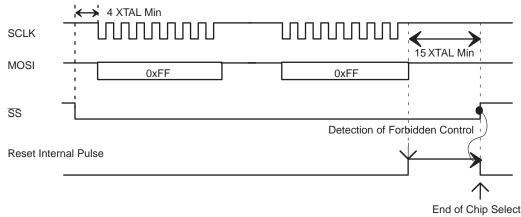

Oscillator

An oscillator is integrated in the TSS463C, and consists of an inverting amplifier of that the input is XTAL1 and the output XTAL2.

A parallel resonance quartz crystal or ceramic resonator must be connected to these pins. As shown in Figure 5, two capacitors have to be connected from the crystal pins to ground. The values of C2 depend on the frequency chosen and can be selected using the schematic given in Figure 39.

If the oscillator is not used, then a clock signal must be fed to the circuit via the XTAL1 input.

Note that this pin will behave as a CMOS level compatible Schmitt trigger input.

In this case the XTAL2 output should be left unconnected. The oscillator also features a buffered clock output pin CKOUT. The signal in this pin is directly buffered from the XTAL1 input, without inversion.

There is one more pin used for the oscillator. The TEST/VSS pin is in fact its ground, and unless this pin is firmly connected to ground, with decoupling capacitors, the oscillator will not operate correctly.

The test mode itself, i.e., when the TEST/VSS pin is held high, is only intended for factory use, and the functionality of this mode is not specified in any way.

The TEST/VSS pin is subject to change without notice, the only exception is for incoming inspection tests using the test program.

The clock signal is then fed to the clock generator that generates all the necessary timing signals for the operation of the circuit. The clock generator is controlled by a 4-bit code called the clock divider.

$$f(TSCLK) = \frac{f(XTAL1)}{n \times 16}$$

Table 2. Clock Divider

Clock		8 MHz		6 M	Hz	4 MI	Ηz	2 MHz	
Divider	Divide by	KTS/s	Kbits/s	KTS/s	Kbits/s	KTS/s	Kbits/s	KTS/s	Kbits/s
0000	1	500	400	375	300	250	200	125	100
0001	2	250	200	187.50	150	125	100	62.50	50
0010	4	125	100	93.75	75	62.50	50	31.25	25
0011	8	62.5	50	46.875+	37.5	31.25	25	15.625	12.5
0100	16	31.25	25	23.438	18.75	15.625	12.5	7.813	6.25
0101	32	15.625	12.5	11.718	9.375	7.813	6.25	3.906	3.125
0110	64	7.813	6.25	5.859	4.688	3.906	3.125	1.953	1.562
0111	128	3.906	3.125	500	400	1.953	1.562	166.666	133.33
1000	1.5	333.333	266.666	250	200	166.666	133.333	83.333	66.666
1001	3	166.666	133.333	125	100	83.333	66.666	41.666	33.333
1010	6	83.333	66.666	62.50	50	41.666	33.333	20.833	16.666
1011	12	41.666	33.333	31.25	25	20.833	16.666	10.416	8.333
1100	24	20.833	16.666	15.625	12.50	10.416	8.333	5.208	4.166
1101	48	10.416	8.333	7.813	6.25	5.208	4.166	2.604	2.083
1110	96	5.208	4.166	3.906	3.125	2.604	2.083	1.302	1.042
1111	192	2.604	2.083	1.953	1.5625	1.302	1.042	0.651	0.521





VAN Protocol

Line Interface


There are three line inputs and one line output available on the TSS463C. that of the three inputs to use is either programmable by software or automatically selected by a diagnosis system.

The diagnosis system continuously monitors the data received through the three inputs, and compares it with each other and the selected bitrate. It then chooses the most reliable input according to the results.

The data on the line is encoded according to the VAN standard ISO/11519-3. This means that the TSS463C is using a two level signal having a recessive (1) and a dominant (0) state. Furthermore, due to the simple medium used, all data transmitted on the bus is also received simultaneously.

The VAN protocol is hence a CSMA/CD (Carrier Sense Multiple Access Collision Detection) protocol, allowing for continuous bitwise arbitration of the bus, and non-destructive (for the higher priority messa ge) collision detection.

Figure 10. CSMA/CD Arbritration

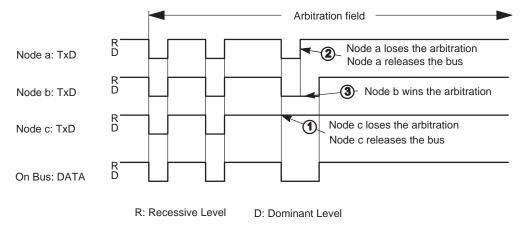


In addition to the VAN specification there is also a pulsed coding of the dominant and recessive states. This mode is intended to be used with an optical or radio link. In this mode the dominant state for the transmitter is a low pulse (2x prescaled clocks at the beginning of the bit) and the recessive state is just a high level. When receiving in this mode it is not the state of the signal itself that is decoded, but the edges. Also, reception is imposed on the RxD0 input, and the diagnosis system does not operate correctly.

In addition, in this mode there is an internal loopback in the circuit since optical transceivers are not able to receive the signal that they transmit.

In Figure 11 the pulsed waveforms are shown. In Figure 14 through Figure 20 the low 'timeslots' (i.e. blocks of 16 prescaled clocks) should be replaced by the dominant waveform showed in Figure 11 if the correct representations for pulsed coding are desired.

Figure 11. State Encoding

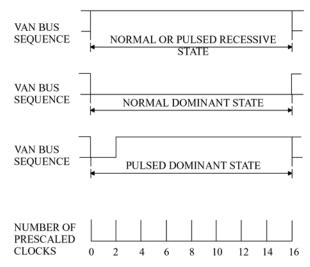

VAN Frame

Figure 12. Van Bus Frame

SOF	Identifier	Command				Data	Frame	FOD	ACK	EOF
SOF	Field	EXT	RAK	R/W	RTR	Field	Check Sum	EOD	ACK	EOF

The VAN bus supports three different module (unit) types:

- The Autonomous module, that is a bus master. It can transmit Start of Frame (SOF) sequences, it can initiate data transfers and can receive messages.
- The Synchronous access module. It cannot transmit SOF sequences, but it can initiate data transfers and can receive messages.
- The Slave module, that can only transmit using an in-frame mechanism and can receive messages.

Figure 13. Hierarchical Access Methods


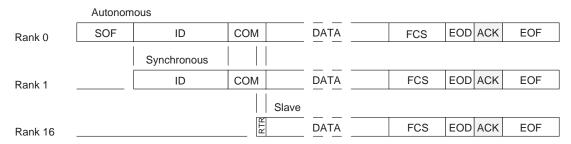


Figure 12 shows a normal VAN bus frame. It is initiated with a Start Of Frame (SOF) sequence shown in Figure 14. The SOF can only be transmitted by an autonomous module. During the preamble, the TSS463C will synchronize its bit rate clock to the data received.



Figure 14. Framing Sequences

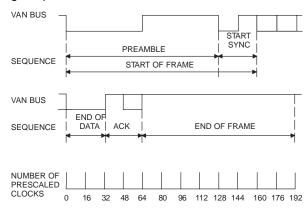


When the complete SOF sequence has been transmitted or received, the circuit will start the transmission or reception of the identifier field.

All data on the VAN bus, including the identifier and Frame Check Sum (FCS), are transmitted using enhanced Manchester code.

In enhanced Manchester code, three NRZ bits are transmitted first followed by one Manchester bit, then three more NRZ bits followed by one Manchester bit and so on.

Since the high state is recessive and the low state is dominant, the bus arbitration can be done. If a module wants access to the bus, it must first listen to the bus during one full End of Frame (EOF) and one full Inter Frame Spacing (IFS) period to determine whether the bus is free or not (i.e. no dominant states received).

Figure 15. Data Encoding

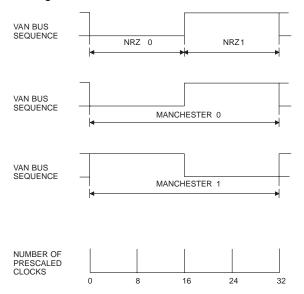

The IFS is defined to be a minimum of 64 prescaled clock periods. The TSS463C, accepts an IFS of zero prescaled clocks for the reception only of a SOF sequence.

Once the bus has been determined as being free, the module must, if it is an autonomous module, emit an SOF sequence or, if it is a synchronous access module, wait until it detects a preamble sequence.

At this point there could be several modules transmitting on the bus, and there is no possibility of knowing if this is the case or not. Therefore, the first field in that arbitration can be performed is the identifier field. Since the logical zeroes on the bus are dominant, and all data is transmitted with the most significant bit (MSB) first, the first module to transmit a logical zero on the bus will be the prioritized module, i.e., the message that is tagged with the lowest identifier will have priority over the other messages.

It is, however, possible that two messages transmitted on the bus will have the same identifier. The TSS463C, therefore, continues the arbitration of the bus throughout the whole frame. Moreover, if the identifier in transmission has been programmed for reception as well, it transmits and receives messages simultaneously, right up until the Frame Check Sequence (FCS). Only then, if the TSS463C has transmitted the whole message, it discards the message received. Arbitration loss in the FCS field is considered as a CRC error during transmission.

This feature is called full data field arbitration, and it enables the user to extend the identifier. For instance it can be used to transmit the emitting modules address in the first bytes of the data field, thus enabling the identifier to specify the contents of the frame and the data field to specify the source of the information.

The identifier field of the VAN bus frame is always 12 bits long, and it is always followed by the 4-bit command field:

- The first bit of the command is the extension bit (EXT). This bit is defined by the
 user on transmission and is received and retained by the TSS463C. To conform with
 the standard, it should be set to 1 (recessive) by the user, else the frame is ignored
 without any IT generation.
- The second bit is the request ACKnowledgebit (RAK). If this bit is a logical one, the
 receiving module must acknowledge the transfer with an in-frame
 acknowledgement in the ACK field. If it is set to logical zero, then the ACK field must
 contain an acknowledge absent sequence.
- The third bit is the Read/Write (R/W). Thisbit indicates the direction of the data in a frame
 - If set to zero, it is a 'write' message, i.e., data transmitted by one module to be received by another module.
 - If it is set to one, it implies a 'read' message, i.e., a request that another module should transmit data to be received by the one that requested the data (reply request message).
- Last in the command field is the Remote Tansmission Request bit (RTR). This bit is
 a logical zero if the frame contains data and a logical one if the frame does not
 contain data. In order to conform with the standard a received frame included the
 combination R/W. RTR = 01 is ignored without any IT generation.

All the bits in the command field are automatically handled by the TSS463C, so the user does not need to be concerned for encoding and decoding these bits. The command bits transmitted on the VAN bus are calculated from the current status of the active message.

After the command field comes the data field. This is just a sequence of bytes transmitted MSB first. In the VAN standard, the maximum message length is set to 28 bytes, but the TSS463C handles messages up to 30 bytes.

The next field is the FCS field. This field is a 15 bit CRC checksum defined by the following generator polynomial g(x) of order 15:

$$g(x) = x^{15} + x^{11} + x^{10} + x^9 + x^8 + x^7 + x^4 + x^3 + x^2 + 1$$






The division is done with the rest initialized to 0x7FFF, and an inversion of the CRC bits is performed before transmission.

However, since the CRC is calculated automatically from the identifier, command and data fields by the TSS463C, it need not concern the user of the circuit. When the frame check sequence has been transmitted, the transmitting module must transmit an End Of Data (EOD) sequence, followed by the ACKnowledge field (ACK) and the End of Frame sequence (EOF) to terminate the transfer.

Figure 16. Acknowledge Sequences

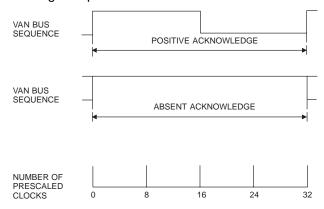


Frame Examples

The frames transmitted on the VAN bus are generated by several modules, each supplying different parts of the message. Figure 17 through Figure 20 show the four frame types specified in the VAN standard, and the module that is generated by the different fields.

- The most straightforward frame is the normal data frame in Figure 17 Like all other frames it is initiated with a SOF sequence. This sequence is generated by a bus master (not shown in the figure).
 - During this frame there is basically only one module transmitting with the only exception being the acknowledgement, generated by the receiving module if requested in the RAK bit.
- The reply request frame with immediate replyin Figure 18 is the only frame in that a slave module can transmit data by filling it into the appropriate field.
 - The only difference for the frame on the bus is that the R/W bit has changed state compared to the normal frame.
 - This is a highly interactive frame where a bus master generates the SOF and the initiator generates the identifier, the three first bits of the command, and the acknowledge. The RTR bit, the data field, the frame check, the EOD and the EOF are all generated by the replying module.
- The reply request frame with deferred reply in Figure 19 is basically the same frame
 as the reply request frame with immediate reply, but since the requested module
 does not generate the RTR bit the requesting module will continue with the frame
 check, the EOD and the EOF.
 - During this frame the requested module will only generate the acknowledge, and only if this was requested by the initiator through the RAK bit.
- Finally the deferred reply frame in Figure 20 that is sent when a module has
 prepared a reply for a reply request that has been received before.
 This frame very closely mimics the normal data frame with the only exception being
 the R/W bit that has changed state.

Figure 17. Normal Data Frame

With acknowledgment

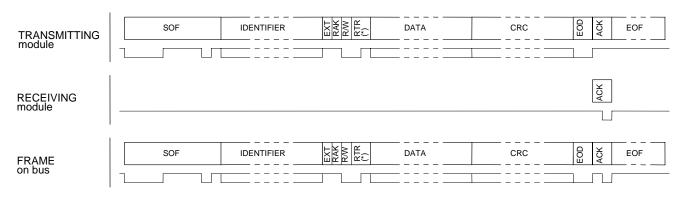


EXT: Recessive from Transmitter

RAK: Recessive for acknowledge from Transmitter

R/W: Dominant from Transmitter

RTR: Dominant from Transmitter(*) Manchester bit ACK: Positive from Receiver because RAK is Recessive

Without acknowledgment

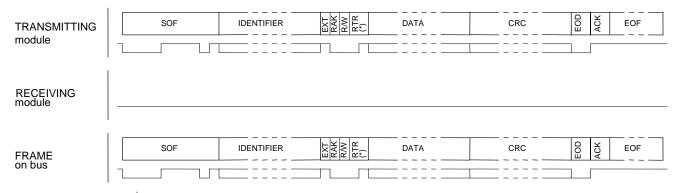

EXT: Recessive from Transmitter

RAK: Dominant for no acknowledge from Transmitter

R/W: Dominant from Transmitter


RTR: Dominant from Transmitter(*) Manchester bit

ACK: Absent from Transmitter and from Receiver because RAK is Dominant





Figure 18. Reply Request Frame with Immediate Reply

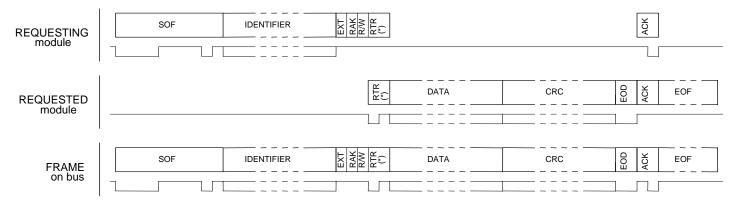


EXT: Recessive from Requestor

RAK: Recessive for acknowledge from Requestor

R/W : Recessive from Requestor

RTR: Recessive from Requestor and Dominant from Requestee (*) Manchester bit ACK: Absent from Requestee and Positive from Requestor because RAK is Recessive

Figure 19. Reply Request Frame with Deferred Reply

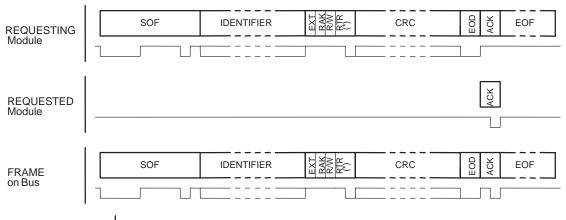

EXT: Recessive from Requestor


RAK: Recessive for acknowledge from Requestor

R/W: Recessive from Requestor

RTR: Recessive from Requestor - (*) Manchester bit

ACK : Absent from Requestor and Positive from Requestee because RAK is Recessive

Figure 20. Deferred Reply Frame

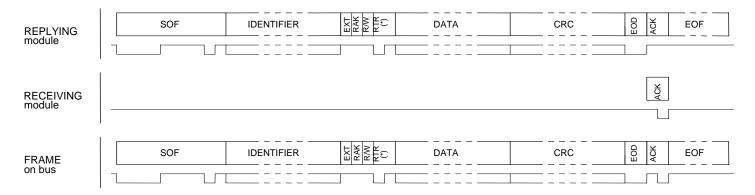

EXT RAK R/W RTR

: Recessive from Replyer : Recessive for acknowledge from Replyer : Recessive from Replyer : Dominant from Replyer - (*) Manch - (*) Manchester bit

ACK : Absent from Replyer and Positive from Receiver because RAK is Recessive





Diagnosis System

The purpose of the diagnosis system is to detect any short or open circuits on either the DATA or DATA lines and to permit, if it is possible, to carry the communications on the non-defective line.

The diagnosis system is based on the assumption that three separate line receivers are connected to the VAN bus see Figure 1.

- One of the line receivers is connected indifferential mode, sensing both DATA and DATA signals, and is connected to the RxD0 input.
- The other two line receivers are operating in single wire mode and are sensing only one of the two VAN bus signals:
 - The line receiver sensing DATA is connected to RxD1
 - The line receiver sensing DATA is connected to RxD2

The diagnosis system analyzes and compares the data sent over both VAN lines. So, the diagnosis system executes a digital filtering and transition analyses. In order to perform its investigation, three internal signals are generated, RI (Return to Idle), SDC (Synchronous Diagnosis Clock) and TIP (Transmission In Progress).

One of four operating modes can be chosen to manage the results of the diagnosis system.


Diagnosis States

If the diagnosis system finds a failure on any of the VAN bus signals, it changes from nominal to degraded mode, and connects the line receiver not coupled to the failing signal to the reception logic.

When the diagnosis system finds that the failing signal is working again, it returns to nominal mode and re-connects the differential line receiver to the reception logic.

A major error occurs when both the VAN bus signals are failed.

Figure 21. Diagnosis States

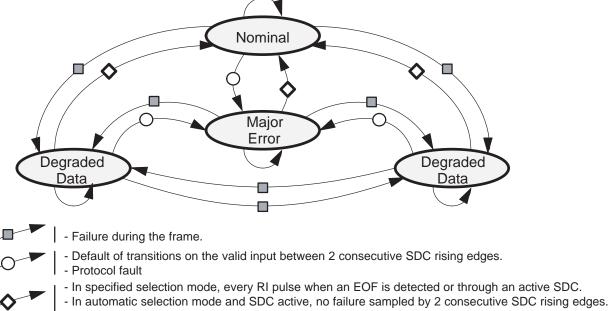







- General reset.

Status bits give permanent information on the diagnosis performed, whatever the programmed operating mode. This is encoded over three bits: Sa, Sb and Sc.

Sa and Sb bits indicate the four possible states of the VAN bus.

Table 3. Status Bits: Sa and Sb

Sa	Sb		Communication
		Mode	Nominal
0	0	Fault	No fault on VAN bus
		Status	Differential communication on DATA and DATA
		Mode	Degraded on DATA
0	1	Fault	Fault on DATA
		Status	Communication on DATA
		Mode	Degraded on DATA
1	0	Fault	Fault on DATA
		Status	Communication on DATA
		Mode	Major error
1	1	Fault	Fault on DATA and DATA
		Status	No communication on DATA and DATA (attempt to communicate alternatively on DATA then DATA every SDC period)

[•] Sc: As soon as one of the three inputs(RXD2, RXD1, RXD0) differs from the others in the input comparison analysis performs by the diagnosis system, Sc is set.

The only way to reset this status bit is through the RI signal or a general reset.

Internal Operations

Digital Filtering

If several spurious pulses occur during one bit, the diagnosis for defective conductor may be corrupted. To avoid such errors, digital filters are implemented.

Filtering operation is based on sampling of the comparator output signals. A transition is taken into account only if it is observed over five samples (1/16th of timeslot).

Transition Analyses

These analyses are continuously done on the effective edges on comparators after digital filtering.

Asynchronous diagnosis

The <u>asynchronous</u> diagnosis is done by comparing the number of edges on DATA and DATA.

If four edges are detected on one input and no edges on the other during the same period, the second input is considered faulty and the diagnosis mode will change to one of the degraded modes.

Synchronous diagnosis

The synchronous diagnosis counts the number of edges on the data input connected to the reception logic during one SDC period.

If there are less than four edges during one SDC period, the diagnosis mode will change to the major error mode.





• Transmission diagnosis

The transmission compares RxD1 and RxD2 inputs (through the input comparators and the filters) with the data transmitted on TxD output.

At a time when the transmission logic generates a dominant - recessive transition, the inputs can give different values. Taking into account the filtering delay, the bus line seen as dominant is assumed to be correct, the other one, recessive, is considered faulty. The diagnosis mode is changed to reflect that.

Protocol fault

The protocol fault is detected by counting the number of consecutive dominant timeslots.

If eight consecutive timeslots are dominant, the diagnosis mode will change to the major error mode.

Generation of Internal Signals

RI Signal (Return to Idle)

This signal is used to return to nominal mode in the three specified selection modes (see "Diagnosis States" on page 22 and "Programming Modes" on page 25). The RI signal is disabled in automatic selection mode.

The RI signal is a pulse generated when an EOF is detected. Thus, at the end of each frame, regarding the diagnosis status bit Sa, Sb and Sc, the user can make its own choice.

SDC Signal (Synchronous Diagnosis Clock)

This time base is used by diagnosis system in automatic selection mode (see Section "Programming Modes", page 25) when no event is recorded on the bus.

The SDC is generated either by a special SDC divider connected to the timeslot clock, or can be performed manually. The SDC clock period must be long compared to the timeslot duration.

A typical SDC period should be greater than the maximum frame length appearing on the VAN network.

TIP Signal (Transmission in Progress)

This signal must be enabled to allow the transmission diagnosis (see Section "Transition Analyses", page 23).

The TIP turns on synchronously with the beginning of the transmission:

- for asynchronous bus access, the beginning of SOF;
- for synchronous bus access, the beginning of the identifier field; and
- for a request of in frame reply, the RTR bit of the command field.

The TIP turns off synchronously with the end of the transmission:

- after EOF;
- after a losing of arbitration or a code violation detection; and
- for a requestor of in frame reply, when the arbitration is lost on RTR the bit.

This signal is not generated when the transmission logic only sends an ACK.

Programming Modes

Four programming modes determine how to use the three different inputs and the diagnosis system.

- 3 specified selection modes
- 1 automatic selection mode

Table 4. Programming Modes

Ma	Mb	Operating Mode	
0	0	Differential communication	
0	1	Degraded communication on RxD2 (DATA)	
1	0	Degraded communication on RxD1 (DATA)	
1	1	Automatic selection according the diagnosis status	






Registers

The TSS463C memory map consists of three different areas, the Control and Status registers, the Channel registers and the Message data (or Mailbox).

Mapping

Figure 22. Memory Map

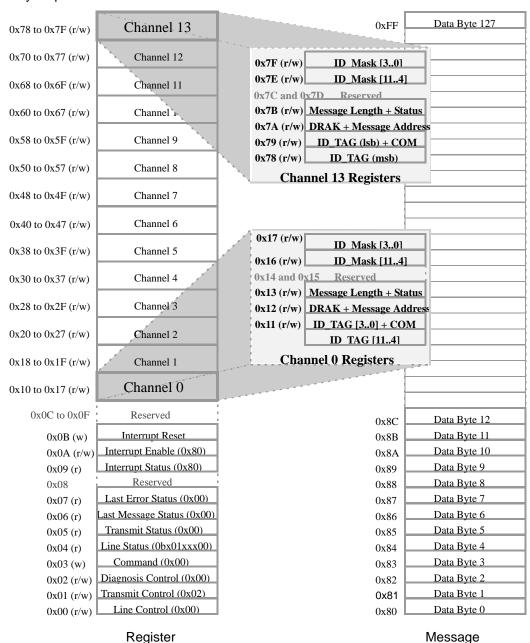

1. All the non specified addresses between 0x00 and 0x7F are considered as absent.

- 2. (r) means read only register.
 - (w) means write only register.
 - (r/w) means read/write register.
- 3. Value after RESET is found after register name. If no value is given, the register is not initialized at RESET.

Notes:

Control and Status Registers

Line Control Register (0x00)

7	6	5	4	3	2	1	0
CD3	CD2	CD1	CD0	PC	0	IVTX	IVRX

- Read/write register.
- Default value after reset: 0:00
- Reserved: Bit 2, this bit must not be setby the user; a 0 must always be written to this bit.

CD[3:0]:Clock Divider

They control the VAN Bus rate through a Baud Rate generator according to the formula below:

$$f(TSCLK) = \frac{f(XTAL1)}{n \times 16}$$

PC: Pulsed Code

One: The TSS463C will transmit and receive data using the pulsed coding mode (i.e optical or radio link mode). The use of this mode implies communication via the RxD0 input and the non-functionality of the diagnosis system.

Zero: (default at reset) The TSS463C will transmit and receive data using the Enhanced Manchester code. (RxD0, RxD1, RxD2 used).

IVTX: Invert TxD output

IVRX: Invert RxD inputs

The user can invert the logical levels used on either the TxD output or the RxD inputs in order to adapt to different line drivers and receivers.

One: A one on either of these bits will invert the respective signals.

Zero: (default at reset) The TSS463C will set TxD to recessive state in Idle mode and consider the bus free (recessive states on RxD inputs).

Transmit Control Register (0x01)

7	6	5	4	3	2	1	0
MR3	MR2	MR1	MR0	VER2	VER1	VER0	МТ

- Read/Write register.
- Default value after reset: 0x02

MR[3:0]: Maximum Retries

These bits allow the user to control the amount of retries the circuit will perform if any errors occurred during transmission.



Table 5. Retries

MR [3:0]	Max. Number of retries	Max. Number of transmissions
0000	0	1
0001	1	2
0010	2	3
0011	3	4
0100	4	5
0101	5	6
0110	6	7
0111	7	8
1000	8	9
1001	9	10
1010	10	11
1011	11	12
1100	12	13
1101	13	14
1110	14	15
1111	15	16

Note: Bus contention is not regarded as an error and an infinite number of transmission attempts will be performed if bus contention occurs continuously.

VER[2:0] = 001

DLC Version after reset.

These bits must not be set by user. 001 must always be written to these bits.

MT: Module Type

The three different module types are supported (see "VAN Frame" on page 15):

One: The TSS463C is at once an autonomous module (Rank 0), a synchronous access module (Rank 1) or a slave module (Rank 16).

Zero: The TSS463C is at once an synchronous access module (Rank 1) or a slave module (Rank 16).

Diagnosis Control Register (0x02):

7	6	5	4	3	2	1	0
SDC3	SDC2	SDC1	SDC0	Ма	Mb	ETIP	ESDC

- Read/Write register
- Default value after reset: &00.

The diagnosis is discussed in greater detail in the section "Diagnosis System" on page 22.

- In its four high order bits, the user can program the SDC rate SDC [3:0]
- In its two medium order bits, the diagnoss system mode is controlled: M1, M0.

In the two low order bits, the user controls if the SDC and TIP are to be generated automatically ETIP, ESDC.

SDC [3:0]: SDC Divider

The input clock is the timeslot clock.

Table 6. System Diagnosis Clock Divider

SDC DIVIDER SDC [3:0]	Divide by
0000	64
0001	128
0010	256
0011	512
0100	1024
0101	2048
0110	4096
0111	8192
1000	16384
1001	32768
1010	65536
1011	131072
1100	262144
1101	524288
1110	1048576
1111	2097152

SDC calculation: (see "SDC Signal (Synchronous Diagnosis Clock)" on page 24).

Notes: 1. For each module, determine the largest interframe spacing, LIFS (*).

- 2. For the whole network, get the maximum LIFS, MAX-LIFS.
- 3. SDC period > MAX-LIFS.

(*) IFS min. = 4 TS

Example: For VAN frame speed rate = 62,5 KTS/s (1 TS = 16 μ s), SDC >100 ms \Rightarrow 100 ms / 16 μ s = 6250, divider chosen: 8192, SDC [3:0] = 0111.

Ma, Mb: Operating Mode Command Bits

Table 7. Diagnosis System Command Bits

Ма	Mb	
0	0	Forces the Communication on RxD0 (differential)
0	1	Forces the Communication on RxD2 (DATA)
1	0	Forces the Communication on RxD1 (DATA)
1	1	Automatic selection





ETIP: Enable Transmission In Progress

The Transmission In Progress (TIP) tells the diagnosis system to enable transmission diagnosis.

One: Enable TIP generation Zero: Disable TIP generation.

ESDC: Enable System Diagnosis Clock

The Synchronous Diagnosis Clock (SDC) controls the cycle time of the synchronous diagnosis.

One: Enable SDC divider.

Zero: Disable SDC divider.

Command Register (0x03)

7	6	5	4	3	2	1	0	
GRES	SLEEP	IDLE	ACTI	REAR	0	0	MSDC	

- Write only register.
- Reserved: Bit 1, 2. These bits must notbe set by the user; a zero must always be written to these bit.
- If the circuit is operating at low bitates, there might be a considerable delay between the writing of this register and the performing of the actual command (worst case 6 timeslots). The user is therefore recommended to verify, by reading the Line Status Register (0x04), that the commands have been performed.

GRES: General Reset

The Reset circuit command bit performs, if set, exactly as if the external reset pin was asserted. This command bit has its own auto-reset circuitry.

One: Reset active Zero: Reset inactive

SLEEP: Sleep command

(Section "Sleep Command", page 51). If the user sets the Sleep bit, the circuit will enter sleep mode. When the circuit is in sleep mode, all non-user registers are setup to minimize power consumption. Read/write accesses to the TSS463C via the SPI/SCI interface are impossible, the oscillator is stopped.

To exit from this mode the user must apply either an hardware reset (external RESET pin) either an asynchronous software reset (via the SPI/SCI interface).

One: Sleep active Zero: Sleep inactive

IDLE: Idle command

(Section "Idle and Activate Commands", page 51). If the user sets the Idle bit, the circuit will enter idle mode. In idle mode the oscillator will operate, but the TSS463C will not transmit or receive anything on the bus, and the TxD output will be in tri-state

One: Idle active Zero: Idle inactive

ACTI: Activate command

(Section "Idle and Activate Commands", page 51). The Activate command will put the circuit in the active mode, i.e it will transmit and receive normally on the bus. When the circuit is in activate mode the TxD tri-state output is enabled.

One: Activate active Zero: Activate inactive

REAR: Re-Arbitrate command.

This command will, after the current attempt, reset the retry counter and re-arbitrate the messages to be transmitted in order to find the highest priority message to transmit.

One: Re-arbitrate active Zero: Re-arbitrate inactive

MSDC: Manual System Diagnosis Clock.

Rather than using the SDC divider described in Section "SDC Signal (Synchronous Diagnosis Clock)", the user can use the manual SDC command to generate a SDC pulse for the diagnosis system.

This MSDC pulse should be high at least 2 timeslot clocks.

Line Status Register (0x04)

7	6	5	4	3	2	1	0
Х	SPG	IDG	Sc	Sb	Sa	TXG	RXG

- Read only register
- Default value after reset: 0bx01xxx00.
- This register reports the operation mode of the TSS463C in the Sleep an Idle bits (Command Register located at address 0×03) as well as the diagnosis system status bits Sa to Sc discussed in the section "Diagnosis System" on page 22

SPG: Sleeping

IDG: Idling

Default mode at reset.

Sa, Sb and Sc: Diagnosis System Status Bits Sa and Sb

Table 8. Diagnosis System Status Bits

Sb	Sa	Communication Indication			
0	0	Nominal mode, differential communication			
0	1	Degraded over DATA, fault on DATA			
1	0	Degraded over DATA, fault on DATA			
1	1	Major error, fault on DATA and DATA			

• **Sc:** As soon as one of the three inputs (RxD2, RxD1, RxD0) differs from the others in the input comparison analysis performed by the diagnosis system, Sc is set. The only ways to reset this status bit is through the RI signal or a general reset.

TXG: Transmitting

If this status bit is active, it indicates that the TSS463C has chosen an identifier to transmit, and it will continue to make transmission attempt for this message until it succeeds or the retry count is exceeded.

RXG: Receiving

The receiving indicates that there is activity on the bus.

Note: For safe modification of active channel registers both bits should be inactive (except "abort" command).





Transmission Status Register (0x05)

7	6	5	4	3	2	1	0
NRT3	NRT2	NRT1	NRT0	IDT3	IDT2	IDT1	IDT0

- Read only register.
- Default value after reset: 0x00.
- The transmission Status register contains the number of retries made up-to-date, according to the Table 5., and the channel currently in transmission.

NRT [3:0]

Number of retries done in transmission.

IDT [3:0]

Channel number currently in transmission.

Last Message Status Register (0x06)

7	6	5	4	3	2	1	0
NRTR3	NRTR2	NRTR1	NRTR0	IDTR3	IDTR2	IDTR1	IDTR0

- Read only register.
- Default value after reset: 0x00.
- This register is basically the same as the transmission status register. It contains the
 last identifier number that was successfully transmitted, received or exceeded its
 retry count.

If it was a successful transmission, the number of retries performed can be seen in this register as well.

NRTR [3:0]

Number of retries done successfully in transmission. In case of reception NRTR[3:0] is undefined.

IDTR [3:0]

Channel number that was successfully transmitted, received or exceeded its retry count.

Last Error Status Register (0x07)

7	6	5	4	3	2	1	0
Х	вос	BOV	Х	FCSE	ACKE	CV	FV

- Read only register.
- Default value after reset: &00.
- The Last Error Status Register contains the error code for the last transmission or reception attempt. It is updated after each attempt, i.e. several error codes can be reported during one single transmission (with several retries).

BOC: Buffer occupied

- when one channel configured in "Reply request" mode has its "received" bit set when it attempts to transmit its request.
- BOC with the link capability between twochannels sharing the same received buffer, is set when one channel has already set its "received" bit in its "Message length and status Channel register" and a receive is attempt on the other one.

One: BOC active Zero: BOC inactive **BOV: Buffer Overflow**

BOV indicates that the buffer length setup in the Channel Status Register was shorter than the number of bytes received plus 1, and thus, some data was lost.

One: BOV active Zero: BOV inactive

FCSE: Framing Check Sequence Error FCSE indicates a mismatch between the FCS received and the FCS calculated


One: FCSE active Zero: FCSE inactive

ACKE: Acknowledge Error


ACKE indicates a physical violation or collision on ACK field of the frame when the TSS463C is a producer.

One: ACKE active Zero: ACKE inactive

Figure 23. ACKE Status Bit

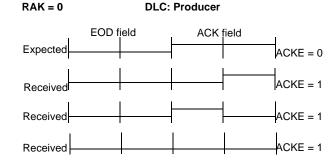

RAK* = 1
*RAK: bit of the frame COMMAND field

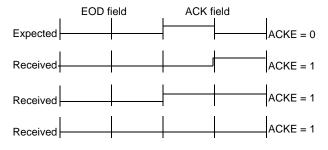

CV: Code Violation

CV indicates:

- either a Manchester code violation (2 idential TS on Manchester bit), or a physical violation (transmitted bit "dominant", received bit "recessive"), on fields ID, COM, DATA and CRC.
- or a physical violation or collision on field preamble and the recessive bit of the "Star Sync" field.

One: CV active Zero: CV inactive

FV: Frame Violation

FV indicates a physical violation or collision on ACK field of the frame when the TSS463C is a consumer.


One: FV active Zero: FV inactive






Figure 24. FV Status bit

DLC: Consumer

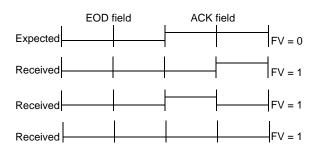

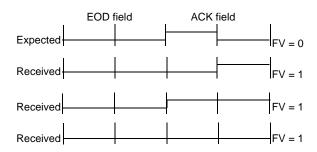

Interrupt Status Register (0x09)

7	6	5	4	3	2	1	0
RST	Х	Х	TE	TOK	RE	ROK	RNOK

- · Read only register.
- Default value after reset: 1xx0 0000

RST: Reset Interrupt

RE indicates that the circuit has detected a valid reset command via the $\overline{\text{RESET}}$ pin or the reset command bit GRES. This interrupt cannot be disabled, since its enable bit is set when a reset is detected.


One: Status flag activated Zero: No status flag.

TE: Transmit Error Status Flag (or Exceeded Retry)

This flag is set only when the Max number of transmission (1 + MR [3:0]) is reached with error of transmission.

One: Status flag activated Zero: No status flag.

 Figure 25. Exceeded Retry with MR[3..0] = 3



TOK: Transmit OK status flag

One: Status flag activated Zero: No status flag.

RE: Receive Error Status Flag One: Status flag activated

Zero: No status flag.

ROK: Receive "with RAK (RAK=1)" OK Status Flag

One: Status flag activated Zero: No status flag.

RNOK: Receive "with no RAK (RAK=0)" OK Status Flag

One: Status flag activated Zero: No status flag.

Interrupt Enable Register (0x0A)

7	6	5	4	3	2	1	0
1	X	Х	TEE	TOKE	REE	ROKE	RNOKE

• Read/write register.

Default value reset: 1xx0 0000

Note: On reset, the Reset Interrupt Enable bit is set to 1 instead of 0, as is the general rule.

TEE: Transmit Error Enable One: IT enabled.

Zero: IT disabled.

TOKE: Transmission OK Enable One: IT enabled.

Zero: IT disabled.

REE: Reception Error Enable One: IT enabled.

Zero: IT disabled.

ROKE: Reception "with RAK"

OK Enable

One: IT enabled. Zero: IT disabled.

RNOKE: Reception "with no

RAK" OK Enable

One: IT enabled.

Zero: IT disabled.

Interrupt Reset Register (0x0B):

7	6	5	4	3	2	1	0	
RSTR	0	0	TER	TOKR	RER	ROKR	RNOKR	

- Write only register.
- Reserved bit: 5 and 6. This bit must not be set by user; a zero must always be written to this bit.

RSTR: Reset Interrupt Reset One: Status flag reset.

Zero: Status flag unchanged.

TER: Transmit Error Status Flag

Reset

One: Status flag reset.

Zero: Status flag unchanged.

TOKR: Transmit OK Status Flag

Reset

One: Status flag reset.

Zero: Status flag unchanged.





RER: Receive Error Status Flag One: Status flag reset.

Reset Zero: Status flag unchanged.


ROKR: Receive "with RAK" OK One: Status flag reset.


Status Flag Reset Zero: Status flag unchanged.

RNOKR: Receive "with no RAK" One: Status flag reset.

OK Status Flag Reset Zero: Status flag unchanged.

Figure 26. Update of the Status Register

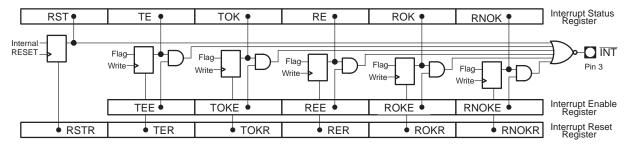

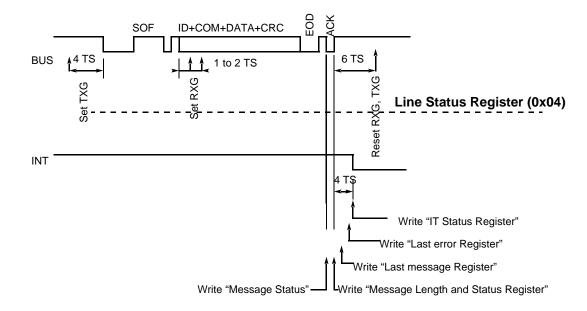

Channel Registers

There is a total of 14 channel register sets, each occupying 8 bytes for addressing simplicity, integrated into the circuit. Each set contains two 2 x 8-bit registers for the identifier tag, identifier mask and command fields plus two 1 x 8-bit registers for DMA pointers and message status.

The base_address of each set is:

 $(0 \times 10 + [0 \times 08 * channel_number]).$

When the TSS463C is reset either via the external RESET pin or the general reset command, the channel registers are not affected. That is, on power-up of the circuit, all the channel registers start with random values.

Due to this fact, the user should take care to initialize all the channel registers before exiting from idle mode. The easiest way to disable an channel register is to set the received and transmitted bits to 1 in the Message Length and Status Register.

Table 9. Channel Register Sets Map

Channel Number	from	to	Channel Number	from	to
6	0x40	0x47	13	0x78	0x7F
5	0x38	0x3F	12	0x70	0x77
4	0x30	0x37	11	0x68	0x6F
3	0x28	0x2F	10	0x60	0x67
2	0x20	0x27	9	0x58	0x5F
1	0x18	0x1F	8	0x50	0x57
0	0x10	0x17	7	0x48	0x4F

Table 10. Channel Register Set Structure

Reg. Name	Offset	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
ID_MASK	0x07		ID_M	[3:0]		х	х	х	х
ID_MASK	0x06				ID_M	[11:4]			
(No register)	0x05	х	х	х	х	х	х	х	х
(No register)	0x04	х	х	х	х	х	х	х	х
MESS_L / STA	0x03			M_L [4:0]			CHER	CHTx	CHRx
MESS_PTR	0x02	DRACK				M_P [6:0]			
ID_TAG / CMD	0x01	ID_T [3: 0] EXT					RAK	RNW	RTR
ID_TAG	0x00				ID_T	[11:4]			



Identifier Tag and Command Registers

The identifier tag and command registers are located at the base_address and base_address + 1. It allows the user to specify the full 12-bit identifier field of the ISO standard and the 4-bit command.

7	6	5	4	3	2	1	0	
ID_T 3	ID_T 2	ID_T 1	ID_T 0	EXT	RAK	RNW	RTR	base_address + 0x01
7	6	5	4	3	2	1	0	
ID_T 11	ID_T 10	ID_T 9	ID_T 8	ID_T 7	ID_T 6	ID_T 5	ID_T 4	base_address + 0x00

Read/Write registers.

ID_T [11:0]: Identifier Tag

Upon a reception hit (i.e, a good comparison between the identifier received and an identifier specified, taking the comparison mask into account, as well as a status and command indicating a message to be received), the identifier tag bits value will be rewritten with the identifier bits actually received.

EXT, RAK, RNW and RTR

(See Section "Message Types", page 44). No comparison will be done on the command bits, except on EXT bit. The RAK, RNW and RTR bits will be written into the first byte of the Message upon a reception hit.

The RNW and RTR bits, as well as the status bits in the length and status register, must be in a valid position for reception or transmission. If not, the message corresponding to this identifier is considered as inactive or invalid.

The way of knowing if an acknowledge sequence was requested or not is to check the first byte of the Message.

Message Pointer Register

The message pointer register at address (base_address + 0x02) is 8 bits wide. It indicates where in the Message DATA RAM area the message buffer is located.

7	6	5	4	3	2	1	0	
DRAK	M_P 6	M_P 5	M_P 4	M_P 3	M_P 2	M_P 1	M_P 0	base_address + 0x02

Read/Write register.

DRAK: Disable RAK (Used in 'Spy Mode')

In reception: whatever is the RAK bit of the incoming valid frame, no ACK answer will be set. If the message was successfully received, an IT is set (ROK or RNOK).

In transmission: no action.

One: disable active, "spy mode".

Zero: disable inactive, normal operation.

M P [6:0]: Message Pointer

Since the Message DATA RAM area base address is 0x80, the value in this register is the offset from that address. If the message buffer length value is illegal (i.e. zero), this register is redefined as being a link pointer, thus containing the channel number of the channel that contains the actual message pointer, message length and received status. However, the identifier, mask, error and transmitted status used will be that of the originally matched channel. In any case, if a link is intended, the three high bits of M_P [6:0] should be set to 0.

This allows several channels to use the same actual reception buffer in Message DATA RAM, thus diminishing the memory usage.

Note: Only 1 level of link is supported.

Message Length And Status Register

The message length and status register at address (base_address + 0x03) is also 8 bits wide. It indicates the length of reserved for the message in the Message DATA RAM area.

7	6	5	4	3	2	1	0	
M_L 4	M_L 3	M_L 2	M_L 1	M_L 0	CHER	CHTx	CHRx	base_address + 0x03

Read/Write register.

M_L [4:0]: Message Length

The 5 high bits of this register allows the user to specify either the length of the message to be transmitted, or the maximum length of a message receivable in the pointed reception buffer.

Note: The first byte in this register does not contain data, but the length of the message received. This implies that the length value has to be equal to or greater than the maximum length of a message to be received in this buffer (or the length of a message to be transmitted) plus 1, thus allowing a maximum length of 30 bytes and a minimum length of 0 byte.

If the value of this field is "illegal" (i.e 0x00) then this message pointer is defined as being a link (see Message pointer and register and "Linked Channels" on page 52).

M_L [4:0] = 0x00	Linked channel
M_L [4:0] = 0x01	Frame with no DATA field (1)
M_L [4:0] = 0x02	Frame with 1 DATA byte
M_L [4:0] = 0x1D	Frame with 28 DATA bytes
M_L [4:0] = 0x1E	Frame with 29 DATA bytes
M_L [4:0] = 0x1F	Frame with 30 DATA bytes

Note: 1. Different of a reply request frame with no in-frame reply (deferred reply).

CHER: Channel Error Status and Abort Command

As status, this bit is set by the TSS463C when error occurs in transmission or on a received frame. The user must reset it.

To abort the transmission defined in the channel, this bit can be set to 1 by the user (see Section "Activate, Idle and Sleep Modes", page 51 and "Abort" on page 49)

CHTx: Channel Transmitted and Transmit Enable Command

CHRx: Channel Received and Receive Enable Command

The 2 low order bits of this register contain the message status. Together with the RNW and RTR bits of the command register (base_address + 0x01), they define the message type of this channel (see section "Message Types" on page 44). As a general rule, the status bits are only set by the TSS463C, so the user must reset them to perform a transmission (CHTx) or/and a reception (CHRx). The received and transmitted bits are only set if the corresponding frame is without errors or if the retry count has been exceeded.





Identifier Mask Registers

The Identifier Mask registers (base_address + 0x06 and base_address + 0x07) allow bitwise masking of the comparison between the identifier received and the identifier specified.

7	6	5	4	3	2	1	0	
ID_M 3	ID_M 2	ID_M 1	ID_M 0	х	х	х	х	base_address + 0x07
7	6	5	4	3	2	1	0	
ID_M 11	ID_M 10	ID_M 9	ID_M 8	ID_M 7	ID_M 6	ID_M 5	ID_M 4	base_address + 0x06

Read/Write registers.

ID_M [11:0]: Identifier Mask

A value of 1 indicates comparison enabled.

A value of 0 indicates comparison disabled.

Example:

- ID_M[11:0] = 0x0FF8
- Acceptance: ID's from 0x0FF8 up to 0x0FFF

Mailbox


The mailbox contains all the messages received or to be transmitted. Each messages is link to a channel. The Mailbox RAM area has 128 bytes and is mapped from 0x80 to 0xFF (see Section "Mapping", page 26).

The message (or message buffer) is composed of:

- 1 byte of message status (only used in receiving),
- n bytes of data. These data are the bytes of the DATA field of the frame with the same organization.

The message is pointed by the Message Pointer Register of the channel, the length of the message is given by the Message Length and Status Register of the channel (Section "Message Length And Status Register"). This area is a pure RAM, it contains a random value after reset.


Figure 27. Message Buffer Structure for Reception

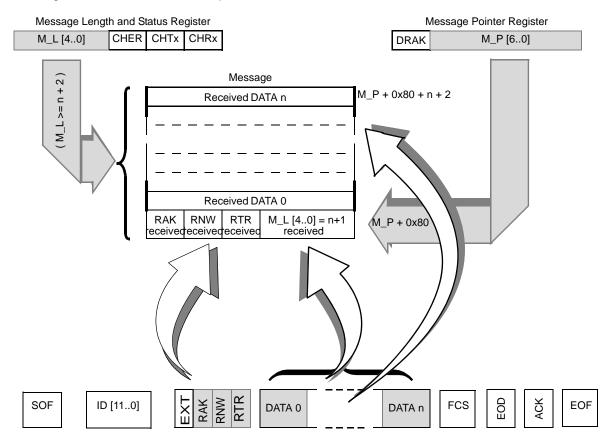

Received DATA Frame, immediate or deffered reply



Figure 28. Message Buffer Structure for Transmission

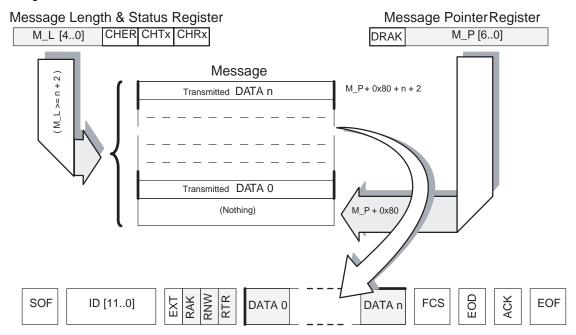

Transmitted DATA Frame

Message Status (Pointed by: Message Pointer Register)

7	6	5	4	3	2	1	0
RRAK	RRNW	RRTR	RM_L4	RM_L3	RM_L2	RM_L1	RM_L0

(no significant value in case of message to be transmitted)

RRAK: Received RAK Bit This bit is the RAK bit coming from the COM field of the received frame.


RRNW: Received RNW Bit This bit is the RNW bit coming from the COM field of the received frame.

RRTR: Received RTR Bit This bit is the RTR bit coming from the COM field of the received frame.

RM_L[4:0]: Message Length of the Received Frame

If the DATA field of the received frame included DATA0 to DATAn, $RM_L[4:0] = n+1$, even if the reserved length (Message Length and Status Register) is larger.


Figure 29. Message Status Updating

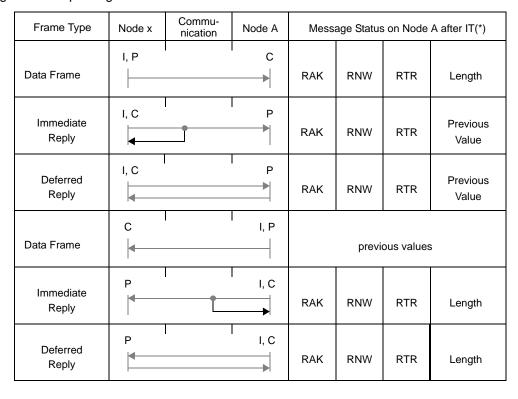

P: Producer I: Initiator C: Consumer

Note: 1. After IT ROK or RNOK. In case of IT RE, the values can be erroneous.

 Message Data (String Pointed by: Message Pointer Register + 1)



DATA0 is the first received (or transmitted) byte, **DATAn** is the last one.

Note:

- 1. If the length reserved (in the message length and status register) for an incoming frame is 2 bytes greater or more, the TSS463C will write the 2 bytes of the CRC field in the message string just after DATAn. Because the VAN frame does not contain a message length, the only way for the component to know the length of the DATA field is either the message length register value, or the EOD field detection. When the reserved length is too large, at the moment when it detects the EOD, the TSS463C has already written the 2 bytes of the CRC field, considering these bytes as normal DATA.
- 2. The Mailbox RAM area is a circular buffer. The next location after 0xFF is 0x80.





Message Types

There are 5 basic message types defined in the TSS463C. Two of them (transmit and receive message types) correspond to the normal frame, and the rest correspond to the different versions of reply frames.

Transmit Message								
	RNW RTR CHTx CHRx							
Initial setup	0	0	0	Don't care				
After transmission 0 0 1 Unchanged								

To transmit a normal data frame on the VAN bus, the user must program an identifier as a Transmit Message. The TSS463C will then transmit this message on the bus until it has succeeded or the retry count is exceeded.

Receive Message								
RNW RTR CHTx CHRx								
Initial setup	0	1	Don't care	0				
After transmission 0 1 Unchanged 1								

The opposite of the transmit message type is the Receive Message type. This message type will not generate any frames on the bus. Instead, it will listen to the bus until a frame passes that matches its identifier, with the mask taken into account, and then receive the data in that frame.

The data received will be stored in the message buffer and the length of the message received is stored in the first byte of the message buffer.

The actual identifier received is stored in the identifier register itself. This identifier may differ from the identifier specified in the register due to the effect of the mask register.

Normally this should not interfere with the next identifier comparison since the bits that may differ are masked via the mask register.

	Reply Request Message									
	RNW RTR CHTx CHRx									
Initial setup	1	1	0	0						
After transmission (Waiting for reply)	1	1	1	0						
After reception (of reply)	1	1	1	1						

The Reply Request Message type is a demand to transmit on the VAN bus a reply request. When this message type is programmed, three things can happen.

In the first case no other modules on the bus responded with an in-frame reply, and in this case the TSS463C will set the message type to the after transmission state. When this message type is programmed, the TSS463C will listen on the bus for a deferred reply frame matching this identifier, without transmitting the reply request.

The second case is that another module on the bus replies with an in-frame reply. In this case the message type will pass immediately into the after reception state, without passing the after transmission state.

Reply Request Message without transmission								
	RNW RTR CHTx CHRx							
Initial setup	1	1	Don't care	0				
After reception	1	1	Unchanged	1				

In the third case the TSS463C has not yet started to transmit the reply request, when another module either requests a reply, and gets it, or transmits a deferred reply. Warning! This should be avoided as it may result in an illegal message type (Illegal reply Request).

Immediate Reply Message						
RNW RTR CHTx CHRx						
Initial setup	1	0	0	0		
After transmission 1 0 1 1						

The immediate Reply Message will attempt to transmit an in-frame reply, using the data in the message buffer.

Deferred Reply Message						
RNW RTR CHTx CHRx						
Initial setup	1	0	0	1		
After reception (of reply request)	1	0	1	1		

Above a Deferred Reply Message is shown. This message type will immediately transmit a deferred reply frame.

Reply Request Detection Message						
RNW RTR CHTx CHRx						
Initial setup	1	0	1	0		
After reception 1 0 1 1						

Finally there is the Reply Request Detector Message type. Its purpose is to receive a reply request frame and notify the processor, without transmitting an in-frame reply.

Inactive Message						
RNW RTR CHTx CHRx						
Recommended	Don't care	Don't care	1	1		
After transmission	0	0	1	Don't care		
After reception	0	1	Don't care	1		
Illegal reply request	1	1	0	1		

The table above shows all inactive messages types. The last combination will transmit a reply request, but will not receive the reply since its buffer is tagged as occupied.





Priority Among the Different Channels

The priority handling on the VAN bus itself is already explained in the Line interface section. The priorities for the messages in the TSS463C is however slightly different.

For instance, it's possible that an identifier matches two or more of the identifiers programmed into the registers. In this case, it is the lowest identifier number that has priority. i.e. if both identifier 5 and 10 match the identifier received, it is the identifier 5 that will receive the message.


However, since the identifier 5 will become an inactive message when it has received the frame, the next time the same identifier is seen on the bus, the corresponding data will be received by identifier 10.

The same is valid for messages to be transmitted, i.e. if two or more messages are ready to be transmitted, it is the one with the lowest identifier number that will get priority.

Retries, Rearbitrate and Abort

Retries and rearbitrate commands are located, respectively, in the Transmit Control Register and in the Command Register. An abort command is located in each channel register set, in the Message Length and Status Register (base_address + 0x03). These three commands are available only when the TSS463C is producer.

Figure 30. Transmit Function

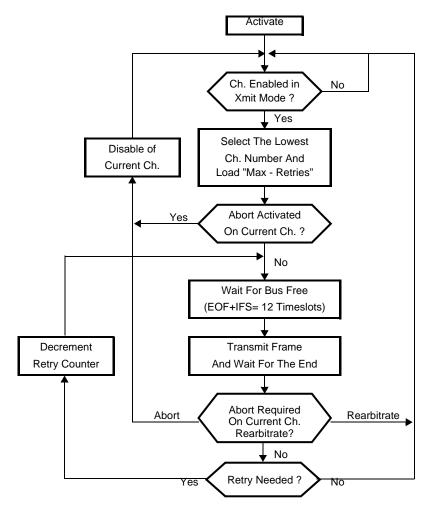

Retries

The purpose of the retries feature is to provide, for the user, the capability of retrying a transmit request in case of failure, when a node tries to reach another node, either on normal DATA frame or on REPLY REQUEST frame.

The maximum number of retries is programmable through MR[3:0] of the Transmit Control Register (0x01). When a channel is enable - bit CHTx = 0 of Message Length and Status Register, a 4-bit counter is loaded with MR[3:0]. At each attempt, this counter will count-down to 0, an IT TE is set in the Interrupt Status Register (0x09), and the transmission is stopped.

MR[3:0] = 1 indicates 1 retry, hence 2 transmission attempts will be performed (see Table 5, "Retries," on page 28). The number of retries performed, as well as the current channel number associated, can be read in the Transmission Status Register (0x05).

The Last Error Status Register (0x07) informs about the trouble uncounted:

- Failure cases:
 - Code viol (CV error bit)
 - Acknowledge error (ACKE error bit)
 - CRC error (FCSE error bit)
- It should be noticed that contentionis considered as normal CSMA/CD protocol
 and, therefore, is not taken into account in failure cases. So, an 'infinite' number of
 attempts can be performed if bus contention occurs continuously.

There is only one retry counter for all channels. When the user writes the Max_Retries value, all channels start their transmission with this parameter.

The purpose of rearbitrate feature is to postpone a channel already in transmission in order to authorize an higher priority (see Section "Priority Among the Different Chan-

Rearbitrate

nels", page 46) message to be transmit.
Max retries = 1 (2 transmissions attempts).

Typical Example

- If Ch8 is in a the retry loop and the userwants to transmit the Ch5 without waiting the end of the loop, the user can use the rearbitrate command.
- The TSS463C will then waituntil the end of the current transmission, reload the retries counter and enable the Ch5 to transmit.
- At the end of this transmission Ch5, either when the attempt is successful or the exceeded retry count is reached, the retries counter is reloaded and the transmission is activated for the Ch8 again.





Figure 31. Rearbritrate Example



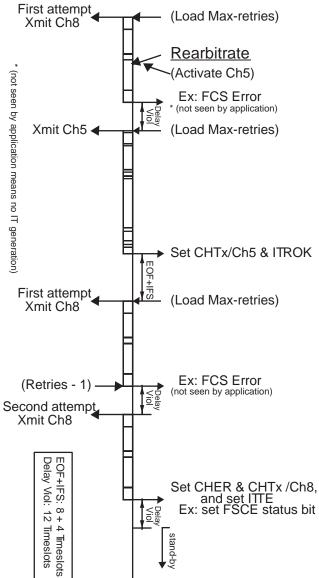


Figure 32. Idle and Rearbitrate Example

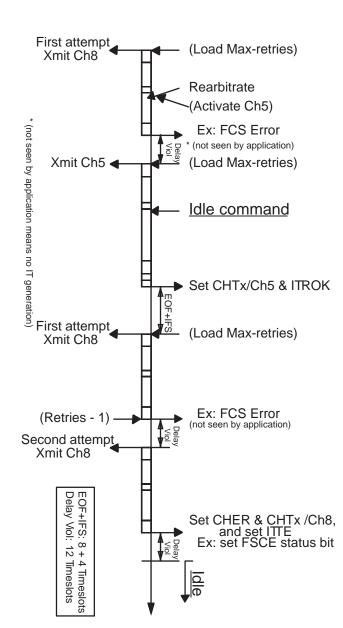

If the user sets the idle bit anywhere (after rearbitrate), the idle mode is entered only at the end of all the transmit attempts (for more information about idle command, see "Activate, Idle and Sleep Modes" on page 51).

Figure 33. Disable Channel After Rearbitrate

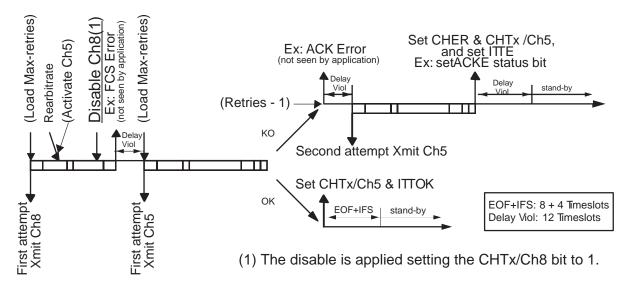

In this case, the TSS463C completes the current attempt (Ch8) and lets the transmission go into the new channel (Ch5 if validated), otherwise it stops all attempts on the current channel.


Abort

An abort command is dedicated to channels already enabled in transmission or in inframe response. For example, this command can be used to break the retry procedure on one channel.

Abort channel is done by setting the Error bit (CHER) in the Message Length and Status Register (base_address + 0x02). This command is taken into account if the channel aborted is not transmitted. When this abort command is really done, the TSS463C set to 1 the Transmitted bit (CHTx) of the Message Length and Status Register.

The abort mechanism is integrated into the transmit function. This mainly means, abort, priority and retries live together in the transmit function.



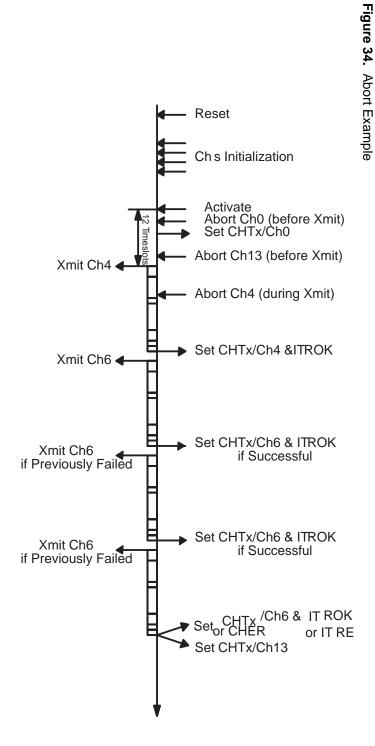


Activate, Idle and Sleep Modes

Sleep, idle and activate commands are located in the Command Register (0x03). These three commands are general commands for the TSS463C.

Idle and Activate Commands

After reset, the TSS463C starts in idle mode. In this mode, the oscillator operates (CKOUT pin active) but the circuit cannot transmit or receive anything on the VAN bus. The TxD output (pin 12) is in tri-state mode, a pull-up resistor must be provided externally or by the line driver to avoid floating state on the VAN bus. To activate the TSS463C, the user must set the activate bit (ACTI) and reset the idle bit (IDLE).

Figure 35. Idle and Activate Timings

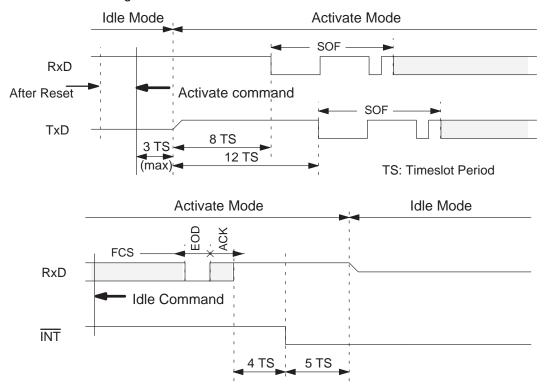

In both cases, the idle state can be verified reading the Line Status register (0x04).

Sleep Command

If the user sets the sleep bit (SLEEP), the TSS463C enters in sleep mode, regardless of the values of activate and idle bits. It means that, all non-user registers are set-up to reduce the power consumption and the internal oscillator is immediately stopped. Then, accesses to all registers (and to the messages) via the SPI/SCI interface are impossible and CKOUT is not provided.

To exit from this mode the user must apply either an hardware reset (external reset pin) either an asynchronous software reset (via the SPI/SCI interface).

In a typical application (see Figure 5), using the CKOUT feature (pin 8), if the TSS463C is put in sleep mode, the clock provided to the microcontroller is stopped. So, the system does not run and the only way to awake this application is an external reset.





Linked Channels


The linkage feature allows two channels to share the same Message area, the message pointer and the message length assumes this property:

- Zero value as message length (M_L [4:0] -base_address + 0x03) declares the channel linked to another channel.
- The number of this other channel is defined in the message pointer field (M_P [6:0] base_address + 0x02).
- The pointer and the length values for the Message area are defined only once, in the register set of this other Channel.

Only one level of linkage can be created. This means, (see Figure 36) a Channel k can be linked to the Channel i but not to Channel j, already defined as linked to Channel i.

All the others can be different between the two channels, for example the ID_Tag.

Figure 36. Linkage Mechanism

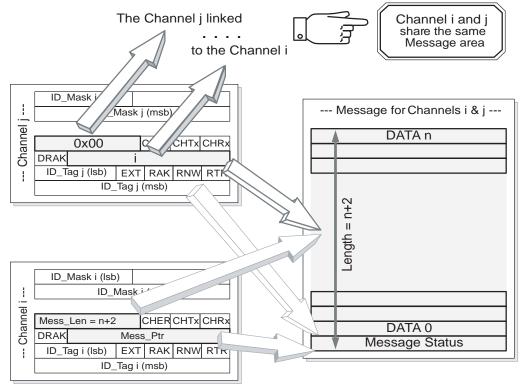

This Message area sharing permits either to optimize the allocation of the 128 bytes of DATA, either to perform some special communications between the different nodes of the network.

Electrical Characteristics

Absolute Maximum Ratings

Ambient temperature under bias:	
Automotive	40°C to 125°C
Storage Temperature	65°C to 150°C
Voltage on V _{CC} to V _{SS}	-0.5 to +7.0V
Voltage on any pin to V _{SS}	0.5V to V _{CC} +0.5V

*NOTICE:

Stresses at or above those listed under Absolute Maximum Ratings may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions exceeding those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions may affect device reliability.

DC Characteristics

Table 11. $T_A = -40^{\circ}C$ to $125^{\circ}C$; $V_{CC} = 5 \text{ V} + 10\%$; $V_{SS} = 0 \text{ V}$

Symbol	Parameter	Min.	Max	Unit	Test Conditions
V _{IL}	Input Low Voltage	-0.5	0.3·V _{CC·min}	V	
V _{IH}	Input High Voltage	0.7·V _{CC max}	V _{CC} +0.5	V	
V _{HY}	Hyteresis Voltage of Trigger CMOS inputs	0.4	-	V	see Table
V _{OL}	Output Low Voltage		0.4	V	I_{OL} = 3.2 mA, V_{CC} min
V _{OH}	Output High Voltage	2.4		V	I_{OH} = -3.2 mA, V_{CC} min
IL	Input Leakage Current (SCLK, MOSI, SS)		5	μА	0 < V _{IN} < V _{CC}
l _{oz}	Output Tri-state Leakage Current (MISO)		5	μА	0 < V _{IN} < V _{CC}
R _{PU,} R _{PD}	Input pull-up and pull- down resistors	70		kΩ	Note 4
C _{IO}	I/O Buffer Capacitance		10	pF	Not tested
I _{CCSB}	Power Supply Current Sleep mode		50	μΑ	(Note 1)
I _{CCOP}	Power Supply Current Idle or Active mode		9	mA	(Notes 2, 3)

Notes:

- 1. Sleep Mode I_{CCSB} is measured according to a V_{SS} Clock Signal.
- 2. Active mode I_{CCOP} is measured at: XTAL = 8 MHz clock, VAN speed rate = 125 KTS/s.
- 3. I_{CC} is a function of the Clock Frequency. Figure 38 displays a graph showing I_{CC} versus Clock frequency.
- 4. RESET, RxD0, RxD1, RxD2 inputs.





Figure 37. I_{CC}


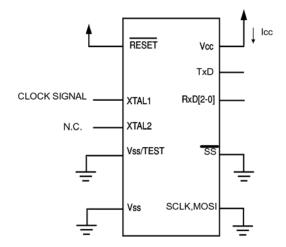


Figure 38. I_{CCOP} versus Clock Frequency at 125 KTimeslot/s

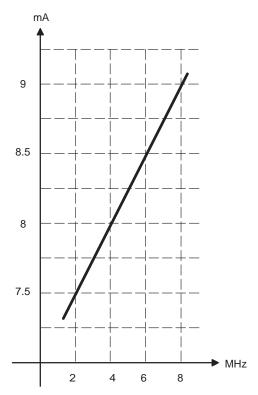


AC Characteristics

Table 12. Microprocessor Inrterface $C_{LOAD} = 200pF$ on SPI/SCI lines

$$T_A = -40^{\circ}C$$
 to 125°C; $V_{CC} = 5V + 10\%$; $V_{SS} = 0V$

	Symbol	Characteristic	Min	Max	Unit
	f _{OP}	Operating Frequency SPI SCI	dc dc	4 125	MHz kHZ
1	t _{CYC}	Cycle Time SPI SCI	250 8	-	ns ms
2	t _{LEAD}	Enable Lead Time	4	-	XTAL Period
3	t _{LAG}	Enable Lead Time	12	-	XTAL Period
4	t _{W(SCKH)}	Clock (SCLK) High Time	100	-	ns
5	t _{W(SCKL)}	Clock (SCLK) Low Time	100	-	ns
6	t _{SU}	Data Setup Time (Inputs)	40	-	ns
7	t _H	Data Hold Time (Inputs)	40	-	ns
8	t _A	Slave Access Time (Time to Data Active from High-Impedance State)	0	100	ns
9	t _{DIS}	Slave Disable Time (Hold Time to High- Impedance State)	-	200	ns
10	t _V	Data Valid (After Enable Edge)	-	60	ns
11	t _{HO}	Data Hold Time (Outputs After Enable Edge)	0	-	ns
12	t _{IZIL} ⁽¹⁾	INT Float Pulse Width	20		ns

Note: 1. Simulated Data

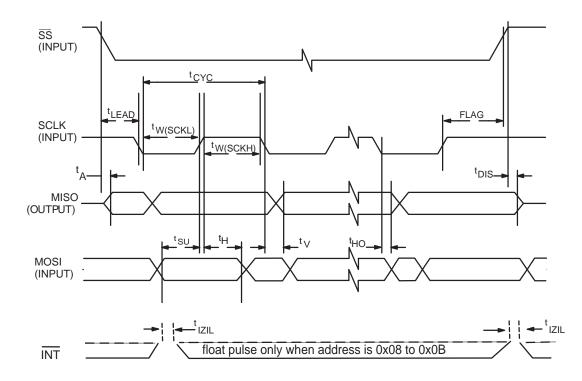






Interface

Oscillator Characteristics


Figure 39. C2 versus Frequency

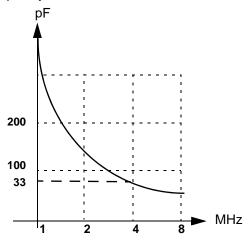

Note: C1 (no capacitance needed) see Figure 5.


External Clock Drive Characteristics (XTAL1)

Symbol	Parameter	Min	Max	Unit
t _{chch}	Oscillator period	120		ns
t _{CHCX}	High Time	20		ns
t _{CLCX}	Low Time	20		ns
t _{CLCH}	Rise Time		20	ns
t _{CHCL}	Fall Time		20	ns

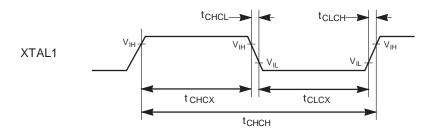

Packaging Information

SO16

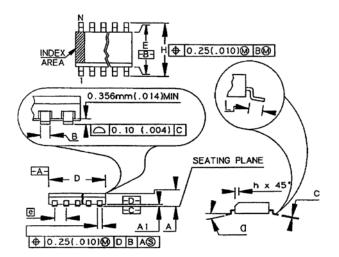

so	ММ		In	ch
А	2.35	2.65	0.093	0.104
A1	0.10	0.30	0.004	0.012
В	0.35	0.49	0.014	0.019
С	0.23	0.32	0.009	0.013
D	10.10	10.50	0.398	0.413
Е	7.40	7.60	0.291	0.299
е	1.27	BSC	0.050	BSC
Н	10.00	10.65	0.394	0.419
h	0.25	0.75	0.010	0.029
L	0.40	1.27	0.016	0.050
N	16		1	6
а	0° 8°		0°	8°





Ordering Information

Part Number	Supply Voltage	Temperature Range	Package	Packing
TSS463C-TESA-9	5V <u>+</u> 10%	-40℃ - +125℃	SO16	Stick
TSS463C-TERA-9	5V <u>+</u> 10%	-40℃ - +125℃	SO16	Tape and Reel
TSS463C-TERZ-9 ⁽¹⁾	5V <u>+</u> 10%	-40℃ - +125℃	SO16	Tape and Reel

Note: 1. These products are available in ROHS version.



Atmel Corporation

2325 Orchard Parkway San Jose, CA 95131 Tel: 1(408) 441-0311 Fax: 1(408) 487-2600

Regional Headquarters

Europe

Atmel Sarl Route des Arsenaux 41 Case Postale 80 CH-1705 Fribourg Switzerland Tel: (41) 26-426-5555

Tel: (41) 26-426-5555 Fax: (41) 26-426-5500

Asia

Room 1219 Chinachem Golden Plaza 77 Mody Road Tsimshatsui East Kowloon Hong Kong Tel: (852) 2721-9778

Fax: (852) 2722-1369

Japan

9F, Tonetsu Shinkawa Bldg. 1-24-8 Shinkawa Chuo-ku, Tokyo 104-0033 Japan

Tel: (81) 3-3523-3551 Fax: (81) 3-3523-7581

Atmel Operations

Memory

2325 Orchard Parkway San Jose, CA 95131 Tel: 1(408) 441-0311 Fax: 1(408) 436-4314

Microcontrollers

2325 Orchard Parkway San Jose, CA 95131 Tel: 1(408) 441-0311 Fax: 1(408) 436-4314

La Chantrerie BP 70602 44306 Nantes Cedex 3, France Tel: (33) 2-40-18-18-18 Fax: (33) 2-40-18-19-60

ASIC/ASSP/Smart Cards

Zone Industrielle 13106 Rousset Cedex, France Tel: (33) 4-42-53-60-00 Fax: (33) 4-42-53-60-01

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906

Tel: 1(719) 576-3300 Fax: 1(719) 540-1759

Scottish Enterprise Technology Park Maxwell Building East Kilbride G75 0QR, Scotland

Tel: (44) 1355-803-000 Fax: (44) 1355-242-743

RF/Automotive

Theresienstrasse 2 Postfach 3535 74025 Heilbronn, Germany Tel: (49) 71-31-67-0 Fax: (49) 71-31-67-2340

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906

Tel: 1(719) 576-3300 Fax: 1(719) 540-1759

Biometrics/Imaging/Hi-Rel MPU/ High Speed Converters/RF Datacom

Avenue de Rochepleine BP 123 38521 Saint-Egreve Cedex, France

Tel: (33) 4-76-58-30-00 Fax: (33) 4-76-58-34-80

e-mail
literature@atmel.com

Web Site http://www.atmel.com

Disclaimer: Atmel Corporation makes no warranty for the use of its products, other than those expressly contained in the Company's standard warranty which is detailed in Atmel's Terms and Conditions located on the Company's web site. The Company assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice, and does not make any commitment to update the information contained herein. No licenses to patents or other intellectual property of Atmel are granted by the Company in connection with the sale of Atmel products, expressly or by implication. Atmel's products are not authorized for use as critical components in life support devices or systems.

© Atmel Corporation 2006. All rights reserved. Atmel®, logo and combinations thereof are trademarks, and Everywhere You Are® are the registered trademarks of Atmel Corporation or its subsidiaries. Other terms and product names may be trademarks of others.

