

P.SLC... Series Sealed Lens Enclosure



Waterproof lens enclosure for use with sealed PresencePLUS sensors



(Lens enclosure shown mounted to camera)

- Rugged, waterproof housing, rated IEC IP68
- Available with 316 stainless steel or nickel-plated aluminum housing and a choice of either acrylic or tempered optical glass windows
- Mounts directly to PresencePLUS® Sealed Pro and Sealed P4 models (when ring light is not used)

For use with	Length	Model	Housing	Window	Replace window model
PPROCAMS	50 mm	PPSLC50-G	Nickel-plated aluminum	Glass	PPSLC-RG
		PPSLC50-P		Acrylic	PPSLC-RP
PPROCAMS and P4.RS	75 mm	PPSLC75-G		Glass	PPSLC-RG
		PPSLC75-P		Acrylic	PPSLC-RP
PPROCAMSS	50 mm	PPSSLC50-G	316 Stainless steel	Glass	PPSLC-RG
		PPSSLC50-P		Acrylic	PPSLC-RP
P4.RS	50 mm	P4SLC50-G	Nickel-plated aluminum	Glass	PPSLC-RG
		P4SLC50-P		Acrylic	PPSLC-RP

Specifications

Construction

Housing: Nickel-plated aluminum or 100% 316 stainless steel depending on model
 Window: Acrylic or tempered optical glass, depending on model

Outside Dimensions

PPSLC50-: 49.3 mm dia. by 48.9 mm long overall (1.94" dia. x 1.93" long)
 PPSLC75-: 49.3 mm dia. by 75 mm long overall (1.94" dia x 2.95" long)

Environmental Rating

Nickel models: IEC IP68 when installed on Sealed PresencePLUS Sensors
 Stainless steel models: NEMA 4X; IP68

Installing the Lens Enclosure



NOTE: Before installing this product, Banner Engineering Corp. recommends installing a light filter behind the lens. The filter improves image quality by reducing unwanted ambient light.

1. Install and focus the lens.
2. Thread the lens enclosure onto the lens until the enclosure is seated against the sensor.



Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp.



more sensors, more solutions

www.bannerengineering.com - tel: 763-544-3164