

## RTLVD-HVDV2

### JUMPER CONFIGURATIONS

Rev A1, A4

JUMPERS			
LOCATION	JUMPER DESCRIPTION	FUNCTION	FACTORY SETTING
JP1	HVD Terminator Power	ON = Send Term Power to HVD Bus	ON
JP2	LVD Terminator Enable	ON = Enabled	ON
JP3	HVD Terminator Disable	ON = Disabled	OFF
JP4	LVD Terminator Power	ON = Send Term Power to LVD Bus	ON

CONNECTORS	
J1	HVD
J2	DC Power
J3	DC Power
J4	LVD/SE
J5	Reset
J6	Pin 1 XFER_ACTIVE Output (Chip active) Pin 2 Removed (key pin) Pin 3 Ground Pin 4 WS_ENABLE
J7	SCSI Activity LED Connector

