 

Photomicrosensor (Transmissive)

 
Dimensions

Note: All units are in millimeters unless otherwise indicated.



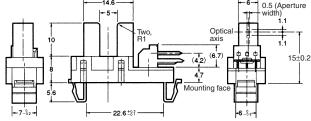

Internal Circuit



Terminal No.	Name
V	Power supply (Vcc)
0	Output (OUT)
G	Ground (GND)

Recommended Mating Connectors: Tyco Electronics AMP 171822-3 (c

OMRON

tolerances are as shown below.

Dimensions	Tolerance
3 mm max.	±0.3
$3 < mm \le 6$	±0.375
6 < mm ≤ 10	±0.45
10 < mm ≤ 18	±0.55
18 < mm ≤ 30	±0.65

Unless otherwise specified, the

Dimensions	Tolerance
3 mm max.	±0.3
$3 < mm \le 6$	±0.375
6 < mm ≤ 10	±0.45
10 < mm ≤ 18	±0.55
18 < mm ≤ 30	±0.65

■ Features

- · Snap-in mounting model.
- Mounts to 0.8- to 1.6-mm-thick panels.
- High resolution (aperture width of 0.5 mm)
- With a 5-mm-wide slot.
- Photo IC output signals directly connect with C-MOS and TTL.
- Connects to Tyco Electronics AMP's El-series connectors.

■ Absolute Maximum Ratings (Ta = 25°C)

Ite	em	Symbol	Rated value
Power supply vo	ltage	V _{CC}	10 V
Output voltage		V _{OUT}	28 V
Output current		I _{OUT}	16 mA
Permissible outp	Permissible output dissipation		250 mW (see note)
Ambient	Operating	T _{opr}	–20°C to 75°C
temperature	Storage	T _{stg}	-40°C to 85°C
Soldering tempe	rature	T _{sol}	

Note: Refer to the temperature rating chart if the ambient temperature exceeds 25°C.

■ Ordering Information


Description	Model	
Photomicrosensor (transmissive)	EE-SX460-P1	


■ Electrical and Optical Characteristics (Ta = 25°C, V_{cc} = 5 V±10%)

Item	Symbol	Value	Condition
Current consumption	I _{cc}	30 mA max.	With and without incident
Low-level output voltage	V_{OL}	0.3 V max.	I _{OUT} = 16 mA with incident
High-level output voltage	V_{OH}	(V _{CC} x 0.9) V min.	$V_{OUT} = V_{CC}$ without incident, $R_L = 47 \text{ k}\Omega$
Response frequency	f	3 kHz min.	$V_{OUT} = V_{CC}$, $R_L = 47 \text{ k}\Omega$ (see note)

Note: The value of the response frequency is measured by rotating the disk as shown below.

  
171822-3 (crimp connector) 172142-3 (crimp connector) EE-1005 (with harness)






■ Engineering Data


Output Allowable Dissipation vs. Ambient Temperature Characteristics

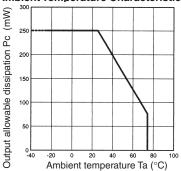


Sensing Position Characteristics (Typical)

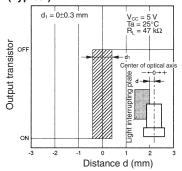

Sensing Position Characteristics

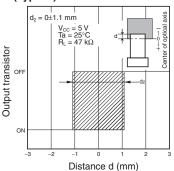

 


No.	Name	Model	Quantity	Maker
1	Receptacle housing	171822-3	1	Tyco Electronics AMP
2	Receptacle contact	170262-1	3	Tyco Electronics AMP
3	Lead wire	UL1007 AWG24	3	

Wiring

Connector circuit no.	Lead wire color	Output when connected to EE-SX460-P1
1	Red	V _{cc}
2	Orange	OUT
3	Yellow	GND

 ■ Recommended Mounting Hole Dimensions and Mounting and Dismounting Method **Dismounting by Hand**



The Photomicrosensor can be mounted to 0.8- to 1.6-mm-thick panels.

 
Refer to the above mounting hole dimensions and open the mounting holes in the panel to which the Photomicrosensor will be mounted.

Insert into the holes the Photomicrosensor's mounting portions with a force of three to five kilograms but do not press in the Photomicrosensor at one time. The Photomicrosensor can be easily mounted by inserting the mounting portions halfway and then slowly pressing the Photomicrosensor onto the panel.


There are two ways to dismount the Photomicrosensor. Refer to the following.

Dismounting with Screwdriver

Press the mounting hooks of the Photomicrosensor with a flat-blade screwdriver as shown in the following illustration and pull up the Photomicrosensor.





Squeeze the mounting tabs as shown in the following illustration and press the mounting tabs upwards.

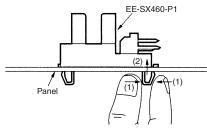

Pressed mounting holes are ideal for mounting the Photomicrosensor. When mounting the Photomicrosensor to a panel that has pressed mounting holes for the Photomicrosensor, be sure to mount the Photomicrosensor on the pressing side of the panel, otherwise it may be difficult to mount the Photomicrosensor and an insertion force of five to six kilograms may be required.

When mounting the Photomicrosensor to a panel that has mounting holes opened by pressing, make sure that the mounting holes have no burrs, otherwise the lock mechanism of the Photomicrosensor will not work perfectly. After mounting the Photomicrosensor to a panel, be sure to check if the lock mechanism is working perfectly.

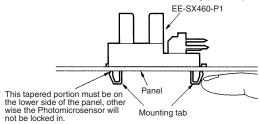

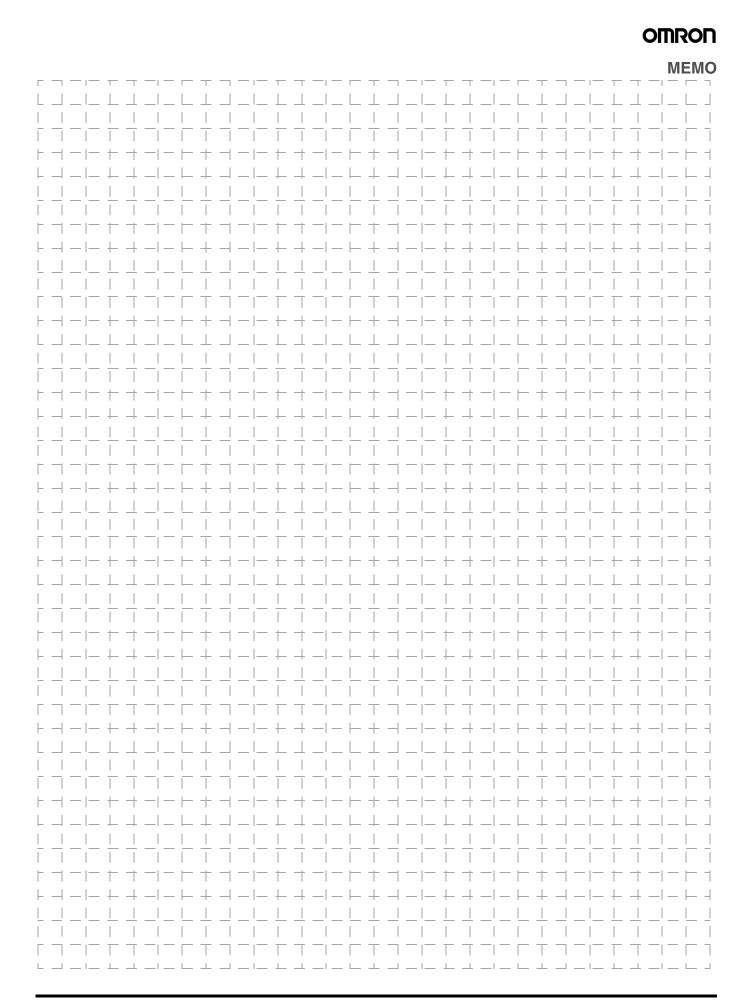



All sales are subject to Omron Electronic Components LLC standard terms and conditions of sale, which can be found at http://www.components.omron.com/components/web/webfiles.nsf/sales_terms.html

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

OMRON

OMRON ELECTRONIC COMPONENTS LLC 55 E. Commerce Drive, Suite B

Schaumburg, IL 60173 847-882-2288

Cat. No. X305-E-1

10/10

OMRON ON-LINE

Global - http://www.omron.com USA - http://www.components.omron.com

Specifications subject to change without notice Printed in USA

Photomicrosensor (Transmissive) **EE-SX460-P1**