



ZEBRA VERSION

PIN	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
COM1	COM1	Y	K	DP4	3E	3D	3C	DP3	2E	2D	2C	DP2	1E	1D	1C	1B	1A	1F	1G	2B	2A	2F	2G	L	3B	3A	3F	3G	S2	S1	X	BAT