

---

---

## ENGLISH

# Xbox LIVE Vision

Thanks for choosing the Xbox LIVE Vision camera. Xbox LIVE Vision adds video to your Xbox 360 system and games, including:

- Video chat and picture messages.
- Photo snapshots.
- Family Settings for privacy and parental control of communication and user-created content.

To enable Xbox LIVE Vision on your Xbox 360 console, get the latest Xbox 360 system software by signing in to Xbox LIVE® with any membership and consenting to download it directly to your console.



### **WARNING**

Before using this product, read this manual and the Xbox 360 console manuals for important safety and health information. Keep all manuals for future reference. For replacement manuals, go to [www.xbox.com/support](http://www.xbox.com/support) or call Xbox Customer Support (see “If You Need More Help”).

The limited warranty covering this product is contained in the Xbox 360 Warranty manual (Volume 2) and is available online at [www.xbox.com/support](http://www.xbox.com/support).

---

---

Arrange the camera cable so that people and pets are not likely to trip over or accidentally pull on it as they move around or walk through the area. When the camera is not in use, you may need to disconnect the cable from the console to keep it out of the reach of children and pets. Do not allow children to play with the camera cable or wrap the cable around themselves.

Do not touch the camera cable terminals or camera lens with your fingers or allow metal parts to touch them. Doing so may damage the camera.

Never force a cable connector into a port. If the connector doesn't easily connect, flip it over and try again.

## SET UP XBOX LIVE VISION ON YOUR XBOX 360 CONSOLE

Before you can use your camera with your Xbox 360 system, make sure you've signed in to Xbox LIVE to automatically receive the latest Xbox LIVE update. For more information about connecting to Xbox LIVE, see your Xbox 360 Setup manual (Volume 1).

*To connect to an Xbox 360 console:*

- 1 Turn on your Xbox 360 console with no disc in the tray. When the Xbox Dashboard appears, connect the camera cable to one of the console's USB ports. If possible, use a rear port for the camera so that the front ports are left available for wired controllers and media devices. The Ring of Light on the camera will blink while the camera is being recognised by the system.



- 2 Position the camera on a stable base, pointed towards you or what you want to shoot. The Ring of Light on the camera will glow when actively shooting video.
- 3 For audio, connect the Xbox 360 Headset according to the instructions in your Xbox 360 Headset manual.

#### NOTES

- To get started, select Xbox LIVE Vision from the Xbox LIVE area of the Xbox Dashboard after connecting the camera to your console. To test video and configure additional Xbox LIVE Vision settings, select Xbox LIVE Vision from the System area of the Xbox Dashboard. If no selection for Xbox LIVE Vision exists, get the latest system software update by signing in to Xbox LIVE and consenting to the download.
- When the camera's light ring is illuminated, the camera is shooting video.
- The camera can be damaged if exposed to extremely bright light over an extended period of time.

---

---

## **XBOX LIVE VISION FAMILY SETTINGS**

Family Settings and other options can help you control the Xbox LIVE Vision experience for everyone. Here are steps you can take:

### **Block video communications for Xbox LIVE child accounts**

Simply go to the System area of the Xbox Dashboard and select Family Settings.

### **Set communications to Friends Only**

For any profile, you can change your preference to communicate online only with people on your friends list. This means that only your friends' voice and video will be received. Press the Xbox Guide button, then select a profile and choose Edit Gamer Profile. Change the Privacy Settings for Communication to Friends Only.

### **Block all communications**

From within games, you can quickly mute all communications to no longer hear—or see—anyone. For more information, see your game documentation or game camera options menu.

### **File a complaint**

If you encounter someone who breaks the Xbox LIVE Code of Conduct, you can file a complaint. All complaints are reviewed by Xbox LIVE. However, Xbox LIVE policy does not disclose the status or results of individual complaints. Press the Xbox Guide button, then select another gamer's profile and choose File Complaint.

---

---

## SET UP XBOX LIVE VISION ON YOUR WINDOWS PC

*To connect to a PC:*

- 1** Turn on your PC and connect the camera cable to an available USB 2.0 (Hi-Speed) port. Microsoft® Windows® XP will display the Found New Hardware Wizard.

In the wizard, select the options to allow Windows Update to automatically find and install the

free Xbox LIVE Vision driver file. Your computer needs this file in order to work with the camera.

- 2** Position the camera on a stable base, pointed towards you or what you want to shoot. The Ring of Light on the camera will glow when actively shooting video.

---

---

## NOTES

- To test video and configure additional Xbox LIVE Vision settings on your PC, click Start, My Computer, USB Video Device.
- You must connect the camera to a USB 2.0 (Hi-Speed) port. Earlier versions of USB are not supported.
- The Xbox LIVE Vision camera works only with PCs running Windows XP SP2.
- Initial setup requires the installation of a driver file. To automatically find and install the Xbox LIVE Vision driver file, use the Found New Hardware Wizard, which launches automatically the first time you plug in the camera.
- If you have a microphone connected to your computer, you can use it for audio in conjunction with your Xbox LIVE Vision camera.

---

## CLEANING YOUR CAMERA

Clean only with a dry or slightly damp cloth. Using cleaning solutions or attempting to clean connectors may damage your camera. For the lens, use only soft, dry, lint-free cloth or lens paper.

---

## TROUBLESHOOTING

If you encounter problems, try the possible solutions provided below.

### **No Picture**

Make sure the camera cable connector is connected securely to a controller port on your console.

### **Blurry or Poor Video Quality**

- Make sure the focus is adjusted on the camera lens. In general, turning the lens clockwise moves the focal point farther out and turning it counterclockwise moves the focal point closer in.

- 
- 
- Clean the camera lens if it becomes dirty, being careful to avoid scratching the lens surface.
  - Video quality can be improved by shooting in a well-lit area.
  - Position the camera in a well-ventilated location near room-temperature.
  - Do not point the camera directly at a bright light or window.

### **No Light Ring Indication**

The light ring only illuminates when the camera is actively shooting video or capturing a still picture.

## **IF YOU NEED MORE HELP**

Go to [www.xbox.com/support](http://www.xbox.com/support) or call Xbox Customer Support:

- Ireland: 1-800-509-186  
(TTY users: 1-800-509-197)
- United Kingdom: 0800-587-1102  
(TTY users: 0800-587-1103)

Do not take your Xbox 360 console or its accessories to your retailer for repair or service unless instructed to do so by an Xbox Customer Support representative.

---

---

### **⚠ Do Not Attempt Repairs**

Do not attempt to take apart, service, or modify the Xbox 360 console, power supply, or its accessories in any way. Doing so could present the risk of serious injury or death from electric shock or fire, and it will void your warranty.

### **DISPOSAL OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE) IN THE EUROPEAN UNION AND OTHER COUNTRIES WITH SEPARATE COLLECTION SYSTEMS**

This symbol on the product or its packaging means that this product must not be disposed of with your household waste. Instead, it is your responsibility to hand this over to an applicable collection point for the recycling of electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment,

which inappropriate disposal could cause due to the possible presence of hazardous substances in electrical and electronic equipment. For more information about where to drop off your electrical and electronic waste, please contact your local city/ municipality office, your household waste disposal service, or the shop where you purchased this product. Contact [weee@microsoft.com](mailto:weee@microsoft.com) for additional information on WEEE.

Hereby, Microsoft declares that this accessory is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC with regard to the EMC Directive 89/336/EEC.



---

---

## COPYRIGHT

---

Information in this document, including URL and other Internet Web site references, is subject to change without notice. Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Microsoft Corporation.

Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written licence agreement from Microsoft, the furnishing of this document does not give you any licence to these patents, trademarks, copyrights, or other intellectual property.

© 2007 Microsoft Corporation. All rights reserved.

Microsoft, Windows, Xbox, Xbox 360, Xbox LIVE, the Xbox logos, and the Xbox LIVE logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.