

SATA 150 PCI RAID Card

2-Channel

User Manual

Ver. 3.00

**All brand names and trademarks are properties of their
Respective owners.**

Features

- Silicon Image SiI3512 SATA controller chip
- Compliant with PCI Specification, Rev. 2.3
- Compliant with Serial ATA 1.0 specification
- Provides two independent channels to support up to two Serial ATA drives
- Supports RAID0(striping) and RAID1(mirroring) for speed and data protection respectively
- HDDs function normally when not in RAID sets
- Supports SATA up to 150MB/Sec
- Supports Windows® 2000, XP/2003 32/64 bit, Vista 32/64 bit

Connectors

- 2 x internal SATA connectors
- 2 x external eSATA connectors

System Requirements

- Pentium-class computer with one available PCI slot
- Windows® 2000, XP/2003 32/64 bit, Vista 32/64 bit

Package Contents


- 1 x SATA 150 PCI RAID Card 2-Channel
- 1 x Driver CD
- 1 x User's Manual

Optional Accessories

- SATA Data Cable
- SATA Power Cable

Hardware Description

Note: There are four SATA ports in SATA 150 PCI RAID Card 2-Channel. We name these ports from A to D. Ports A & B are internal SATA ports. Ports C & D are external SATA ports. Changing the jumper setting allows you to select between external and internal ports to use. By default, Port A and B are working.

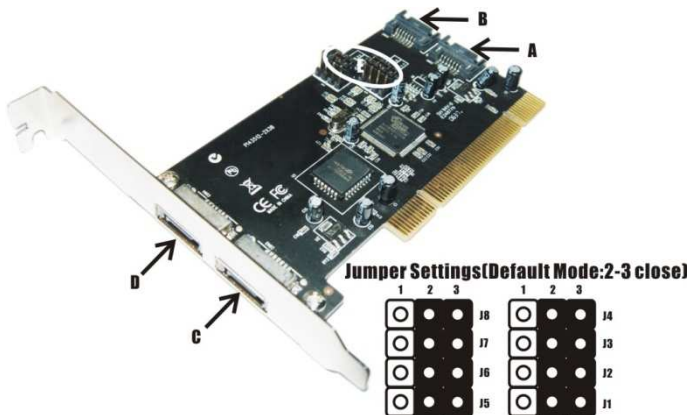

E (Jumper Settings)

JP	Description	Active Port
J1-J4	1-2 close	Enable SATA Port C
	2-3 close	Enable SATA Port A
J5-J8	1-2 close	Enable SATA Port D
	2-3 close	Enable SATA Port B

Hardware Installation

1. Turn Off the power to your computer and any other connected peripheral devices.
2. Unplug the power cord from the back of the computer.
3. Remove your computer's cover.
4. Remove the slot bracket from an available PCI slot.
5. To install the card, carefully align the card's bus connector with the selected PCI slot on the motherboard. Push the board down firmly, but gently, until it is well seated.
6. Replace the slot bracket's holding screw to secure the card.

Device Connection

The SATA 150 PCI RAID Card is a two channel Serial ATA controller that supports up to two Serial ATA hard disk drives. It is recommended to use identical hard drives for all RAID configurations.

1. Install your hard disk drive(s) in chassis.
2. Connect the Serial ATA hard disk drive to the system power supply using the included Serial ATA power cable.
3. Connect one end of the Serial ATA cable to the hard disk drive.
4. Attach the other end of the Serial ATA cable to the Serial ATA port

on the SATA 150 PCI Raid Card 2-Channel

5. Follow the same instructions to connect up to two hard drives.
Device connection is now complete.
6. Replace the computer cover and reconnect the power cord.

RAID Arrays

RAID Arrays are setup in the SATA 150 PCI RAID Card 2-Channel's BIOS.

RAID 0 (Striping)

This RAID array to be used on **New/Blank** hard drives. Striping will destroy existing data on the hard drive. **Auto Configuration** is recommended. For applications that require custom chunk size, **Manual Configuration** is offered.

Auto configuration (recommended)

The default chunk size is **64k** when selecting **Auto configuration**.

1. As the BIOS boots press **Ctrl+S** or **F4** when prompted to enter the RAID BIOS.
2. At the next screen select **Create RAID Set**, then press **Enter**.

3. Select **Striped**, then press **Enter**.
4. Select **Auto configuration**, then press **Enter**.
5. When asked **Are You Sure (Y/N)?**, press **Y** to accept.
6. Press **Ctrl+E** to exit the BIOS.
7. When asked **Are you sure to exit (Y/N)?**, press **Y** to exit and reboot.
8. Continue with FDISK and FORMAT steps as if you were installing a conventional hard drive.

Manual configuration

1. As the BIOS boots press **Ctrl+S** or **F4** when prompted to enter the RAID BIOS.
2. At the next screen select **Create RAID Set**, then press **Enter**.
3. Select **Striped**, then press **Enter**.
4. Select **Manual configuration** then press **Enter**
5. Select the **first drive**, press **Enter**.
6. Select the **second drive**, press **Enter**.
7. Select chunk size from **4k, 8k, 16k, 32k, 64k** or **128k**, then press **Enter**.
8. When asked **Are You Sure(Y/N)?**, press **Y** to accept.

9. Press **Ctrl+E** to exit the BIOS.
10. When asked **Are you sure to exit(Y/N)?**, press **Y** to exit and reboot.
11. Continue with FDISK and FORMAT steps as if you were installing a conventional hard drive.

RAID 1 (Mirror)

For New/Blank Hard Drives

1. As the BIOS boots press **Ctrl+S** or **F4** when prompted to enter the RAID BIOS.
2. At the next screen select **Create RAID Set**, then press **Enter**.
3. At the next screen select **Mirrored** then press **Enter**.
4. Select **Auto configuration**, then press **Enter**.
5. When asked **Are You Sure(Y/N)?**, press **Y** to accept.
6. Press **Ctrl+E** to exit the BIOS.
7. When asked **Are you sure to exit(Y/N)?**, press **Y** to exit and reboot.
8. Continue with FDISK and FORMAT steps as if you were installing a conventional hard drive.

For Existing Hard Drives with Data

1. As the BIOS boots press **Ctrl+S** or **F4** when prompted to enter the RAID BIOS.
2. At the next screen select **Create RAID Set**, then press **Enter**.
3. At the next screen select **Mirrored** then press **Enter**.
4. Select **Manual configuration**, then press **Enter**.
5. Select the **Source** drive, press **Enter**.
6. Select the **Target** drive, press **Enter**.
7. Enable **Disk Copy**, select **Yes**, then press **Enter**.

Note: Enable Disk Copy – Copy current content of source driver to mirror drive; Disable Disk Copy – RAID 1 set formed must be repartitioned and reformatted to guarantee the consistency in their contents.

8. Press **Ctrl+E** to exit the BIOS.
9. When asked **Are you sure to exit(Y/N)?**, press **Y** to exit and reboot.

Note: If during boot the RAID BIOS reports an **RAID1 set is in Rebuild status**, The rebuild will continue after boot sequence is complete, disregard the message, continue booting, and let the Mirror rebuild.

Rebuilding a Failed Mirror Set

When a failure to one member occurs, you will be notified either by the **RAID BIOS** during boot or by the **SATARAID GUI** while in Windows. The steps below will guide you in rebuilding a failed mirror set.

1. Replace the failed drive with one of equal or greater capacity, then start the computer.
2. During boot press **Ctrl+S** or **F4** to enter the RAID BIOS.
3. Select **Rebuild Mirrored Set** then press **Enter**.
4. Select the desired set and then press **Enter**.
5. When asked **Are You Sure(Y/N)?**, press **Y** to confirm.
6. The set will be rebuilt.

Deleting RAID Arrays

1. As the BIOS boots press **Ctrl+S** or **F4** when prompted to enter the RAID BIOS.
2. Select **Delete RAID Set**, then press **Enter**.
3. Select the RAID set then press **Enter**.
4. When asked **Are You Sure(Y/N)?**, press **Y** to confirm.

Resolving Conflicts

When a RAID set is created, then metadata written to the disk includes drive connection information. If, after a disk failure, the replacement disk was previously part of a RAID set (or used in another system), it may have conflicting metadata. If so, this will prohibit the RAID set from being either created or rebuilt, in order for the RAID set to function properly, this old metadata must be first overwritten with the new metadata. To resolve this, from the main BIOS window select **Resolve Conflicts**, then press **Enter**, the correct metadata, including the correct drive connection information, will be written to the replacement disk.

Low Level Format

Low Level Format is build into the RAID BIOS to make it more convenient to erase the entire contents of a hard disk drive, including data, drive and partition information. The Low Level Format utility works on single hard drive only, before the RAID set is configured.

BIOS Configuration

The Serial ATA 2-Channel RAID adapter BIOS will appear every time

your system starts up. If the BIOS doesn't show, please try your controller in another PCI slot. During this (POST) process, the BIOS will show up and indicate the devices attached to it.

Driver Installation

For Windows® 2000

For A New Installation

A new installation requires a floppy disk for the driver installation. To make this floppy disk, copy the contents of the “PCI_IO\Sata\RAID” folder, found on the driver CD, onto a blank floppy disk then follow the directions below.

1. Setup the RAID Array prior to Windows installation.
2. Follow Windows® 2000 installation procedure.
3. At the Windows® 2000 Setup screen, press **F6** to install the RAID driver.
4. When prompted, press **S** to specify the location of the driver.
5. Insert the floppy disk, then press **Enter**.
6. Select **Silicon Image SiI 3x12 SATARAID Controller for Windows NT 4.0 and 2000**, then press **Enter**.
7. Press **Enter** again to finish driver installation, then follow the

on-screen instructions to complete the Windows installation.

For An Existing Installation

1. Setup the RAID Array prior to driver installation and boot up to Windows.
2. At **Found New Hardware Wizard**, click **Next**.
3. Select **Search for a suitable driver for my device(recommend)** then click **Next**.
4. Insert the driver CD, check **CD-ROM drives**, uncheck the other boxes, click **Next**, then click **Next** again.
5. If the **Digital Signature Not Found** message appears, click **Yes**.
Our driver has been thoroughly tested for stability and compatibility.
6. Click **Finish**.

For Windows® XP/Server 2003

For New Installation

A new installation requires a floppy disk for the driver installation. To make this floppy disk, copy the contents of the “PCI_IO\Sata\RAID” folder, found on the driver CD, onto a

blank floppy disk then follow the directions below.

1. Setup the RAID Array prior to Windows installation.
2. Follow Microsoft's Windows installation procedure.
3. At the Windows Setup screen, press **F6** to install the RAID driver.
4. When prompted, press **S** to specify the location of the driver.
5. Insert the floppy disk, then press **Enter**.
6. Select **Silicon Image SiI 3x12 SATARaid Controller for Windows XP/Server 2003**, then press **Enter**.
7. Press **Enter** to finish driver installation, then follow the on-screen instructions to complete the Windows installation.

Note: If the **Security Alert** warning pops up, click **Yes**. Our driver has passed Microsoft compatibility testing, this message appears during new installation.

For An Existing Installation

1. Setup the RAID Array prior to driver installation and boot up to Windows.
2. At the **Found New Hardware Wizard**:
XP(w/SP1 or earlier)/Server 2003: continue to step #3
XP(w/SP2 or later)/Server 2003(w/SP1 or later): select **No, not**

this time, then click **Next**.

3. Insert the driver CD, select **Install the software automatically (Recommended)**, and click **Next**.
4. Click **Finish**.

For Windows®XP-x64/Server 2003-x64

For New Installation

A new installation requires a floppy disk for the driver installation. To make this floppy disk, copy the contents of the “PCI_IO\Sata\64-bit Windows RAID Driver” folder, found on the driver CD, onto a blank floppy disk then follow the directions below.

1. Setup the RAID Array prior to Windows installation.
2. Follow Microsoft’s Windows installation procedure.
3. At the Windows Setup screen, press **F6** to install the RAID driver.
4. When prompted, press **S** to specify the location of the driver.
5. Inset the floppy disk, then press **Enter**.
6. Select **Silicon Image SiI 3x12 SATARaid Controller (64-bit Extended)** or **Silicon Image SiI 3x12 SATARaid Controller (Itanium)**, then press **Enter**.
7. Press **Enter** to finish driver installation, then follow the on-screen

instructions to complete the Windows installation.

Note: If the **Security Alert** warning pops up, click **Yes**. Our driver has passed Microsoft compatibility testing, this message appears during new installation.

For An Existing Installation

1. At the **Found New Hardware** Wizard, select **No, not this time**, then click **Next**.
2. Insert the driver CD, select **Install the software automatically (Recommended)**, and click **Next**.
3. Click **Finish**.

For Windows® Vista

For New Installation

A new installation requires a floppy disk for the driver installation. To make this floppy disk, copy the contents of the “PCI_IO\Sata\RAID” folder, found on the driver CD, onto a blank floppy disk then follow the directions below.

1. Setup the RAID Array prior to Windows installation.
2. Follow Microsoft's Windows installation procedure.

3. At the Windows Setup screen, press **Load Driver** to install the RAID driver.
4. Insert the floppy disk, please select **Silicon Image SiI 3512 SATAraid Controller (A:\si3112r.inf)**, then press **Next**. (Change **A:** to match your floppy drive letter)
5. Follow the on-screen instructions to complete the Windows installation.

For An Existing Installation

1. Setup the RAID Array prior to driver installation and boot up to Windows.
2. At **Found New Hardware Wizard**, select **Locate and install driver software (recommended)**.
3. Please insert the CD driver bound with SATA 150 PCI RAID card into your CD-ROM Drive, click **Next**.
4. If the system prompts the user informing the drivers are not signed, select the option **Install this driver software anyway**.
5. Click **Close** to complete the installation.

For Windows® Vista-x64

For New Installation

*A new installation requires a floppy disk for the driver installation. To make this floppy disk, copy the contents of the “**PCI_IO\Sata\64-bit Windows RAID Driver**” folder, found on the driver CD, onto a blank floppy disk then follow the directions below.*

1. Setup the RAID Array prior to Windows installation.
2. Follow Microsoft's Windows installation procedure.
3. At the Windows Setup screen, press **Load Driver** to install the RAID driver.
4. Insert the floppy disk, please select **Silicon Image SiI 3512 SATAraid Controller (A:\si3112r.inf)**, then press **Next**. (Change **A:** to match your floppy drive letter)
5. Follow the on-screen instructions to complete the Windows installation.

For An Existing Installation

1. Setup the RAID Array prior to driver installation and boot up to Windows.
2. At **Found New Hardware Wizard**, select **Locate and install**

driver software (recommended).

3. Please insert the CD driver bound with SATA 150 PCI RAID card into your CD-ROM Drive, click **Next**.
4. If the system prompts the user informing the drivers are not signed, select the option **Install this driver software anyway**.
5. Click **Close** to complete the installation.

To Verify Driver Installation

1. Right click **My Computer** and click **Manage**.
2. Select **Device Manager**.
3. Look for the following:

Windows® 2000/XP/2003: Double click **SCSI and RAID Controller:**

-Silicon Image SiI 3512 SATARaid Controller should be displayed

Windows® Vista: Double click **Storage controllers:**

-Silicon Image SiI 3512 SATARaid Controller should be displayed

JAVA 2 Runtime Environment Installation

The Java 2 Runtime Environment is required for the SATARAID Management Software.

1. Please insert the CD driver bound with SATA 150 PCI RAID card into your CD-ROM Drive.
2. At the Windows desktop click **Start**, then **Run**.
3. Type **D:\PCI_IO\Sata\Medley\InstallSATARaid.exe**, then click **OK**. (Change **D:** to match your CD-ROM drive letter)
4. Follow the on-screen instructions to complete the installation.

SATARAID Management Software Installation

1. Please insert the CD driver bound with SATA 150 PCI RAID card into your CD-ROM Drive.
2. At the Windows desktop click **Start**, then **Run**.
3. Type **D:\PCI_IO\Sata\Medley\jre-1_5_0_05-windows-i586-p.exe**, then click **OK**. (Change **D:** to match your CD-ROM drive letter)
4. Follow the on-screen instructions to complete the installation.