PCI Serial Card 6 Ports

User Manual

Ver. 1.00

All brand names and trademarks are properties of their Respective owners.

Features and Benefits

Features

- Compliant with PCI Local Bus Specification Revision 2.3
- Supports 6 x UART serial port
- Easy Plug and Play
- Automatically selects IRQ & I/O address
- Built-in 16C450/550 compatible UART
- Data transfer rate up to 115200 bps

Bus

PCI 32-bit

Connectors • 6 x DB9 male serial connectors

System Requirements

- Windows® 2000, XP/2003 32/64 bit, Vista 32/64 bit
- Available PCI slot

Package Contents

- 1 x PCI Serial Card 6 Ports
- 2 x Bracket with two DB9 male serial ports

- 1 x Driver CD
- 1 x User Manual

Note: Contents may vary depending on market/region.

Hardware Installation

- 1. Turn Off the power to your computer.
- 2. Unplug the power cord and remove your computer's cover.
- 3. Remove the slot bracket from an available PCI slot.
- To install the card, carefully align the card's bus connector with the selected PCI slot on the motherboard. Push the board down firmly.
- 5. Replace the slot bracket's holding screw to secure the card.
- 6. Replace the computer cover and reconnect the power cord.

Driver Installation

For Windows® 2000/XP/Server 2003

- 1. Don't insert the PCI card into PCIe slot.
- 2. At the Windows desktop click **Start**, then **Run**.
- Type D:\PCI_IO\MCS9865\XP\PciSetup.exe, then click OK.
 (Change D: to match your CD-ROM drive letter)

- 4. Press "Install" button to install the drivers.
- 5. Click "Exit" button to complete the driver installation.
- 6. Shutdown the PC.
- 7. Place the PCI card into PCI slot and then power on the system.
- 8. Once the system gets booted the Windows will automatically start installing the device driver software.

For Windows® XP-x64/Server 2003-x64

- 1. Don't insert the PCI card into PCI slot.
- Type D:\PCI_IO\MCS9865\XP64\PCISetup.exe, then click OK.
 (Change D: to match your CD-ROM letter)
- 3. Press "Install" button to install the drivers.
- 4. Click "Exit" button to complete the driver installation.
- Shutdown the PC.
- 6. Place the PCI card into the PCI slot then power on the system.
- 7. Once the system gets booted the Windows will automatically start installing the device driver software.

For Windows® Vista

1. Don't insert the PCI card into PCI slot.

- Type D:\PCI_IO\MCS9865\Vista32\PciSetup.exe, then click
 OK. (Change D: to match your CD-ROM letter)
- 3. Press "Install" button to install the drivers.
- 4. Click "Exit" button to complete the driver installation.
- Shutdown the PC.
- 6. Place the PCI card into PCI slot and then power on the system.
- 7. Once the system gets booted the Windows will automatically start installing the device driver software.

For Windows® Vista-x64

- 1. Don't insert the PCI card into PCI slot.
- Type D:\PCI_IO\MCS9865\Vista64\PCISetup.exe, then click
 OK. (Change D: to match your CD-ROM drive letter)
- 3. Press "Install" button to install the drivers.
- 4. Click "Exit" button to complete the driver installation.
- 5. Shutdown the PC.
- 6. Place the PCI card into PCI slot and then power on the system.
- 7. Once the system gets booted the Windows will automatically start installing the device driver software.

To Verify Driver Installation

- Right click My Computer, then click Manage. Click Device Manager.
- Click on the +(plus sign) in front of Ports(COM & LPT), two High-Speed PCIe Serial Port ... and four PCI-ISA Communication Port ... should be displayed.