

PCI 4S1P Card

User Manual

Ver. 1.00

**All brand names and trademarks are properties of their
Respective owners.**

Features and Benefits

- | | |
|------------|---|
| Features | <ul style="list-style-type: none">● Compliant with PCI Local Bus Specification Revision 2.3● Supports 4 x UART serial port● Add one IEEE 1284 Parallel Port on system● Easy Plug and Play● Automatically selects IRQ & I/O address● Built-in 16C450/550 compatible UART● Data transfer rate up to 115200 bps● Supports Standard Parallel Port (SPP), Enhanced Parallel (EPP) & Enhanced Capability Port (ECP)● Parallel data transfer rate up to 1.5 Mbytes/sec |
| Bus | <ul style="list-style-type: none">● PCI 32-bit |
| Connectors | <ul style="list-style-type: none">● 4 x DB9 male serial connectors● 1 x DB25 female parallel connector |

System Requirements

- Windows® 2000, XP/2003 32/64 bit, Vista 32/64 bit

- Available PCI slot

Package Contents

- 1 x PCI 4S1P Card
- 1 x Bracket with two DB9 male serial ports
- 1 x Bracket with one DB25 female parallel port
- 1 x Driver CD
- 1 x User Manual

Note: Contents may vary depending on market/region.

Hardware Installation

1. Turn Off the power to your computer.
2. Unplug the power cord and remove your computer's cover.
3. Remove the slot bracket from an available PCI slot.
4. To install the card, carefully align the card's bus connector with the selected PCI slot on the motherboard. Push the board down firmly.
5. Replace the slot bracket's holding screw to secure the card.
6. Replace the computer cover and reconnect the power cord.

Driver Installation

For Windows® 2000/XP/Server 2003

1. Don't insert the PCI card into PCIe slot.
2. At the Windows desktop click **Start**, then **Run**.
3. Type **D:\PCI_IO\MCS9865\XP\PciSetup.exe**, then click **OK**.
(Change **D:** to match your CD-ROM drive letter)
4. Press **“Install”** button to install the drivers.
5. Click **“Exit”** button to complete the driver installation.
6. Shutdown the PC.
7. Place the PCI card into PCI slot and then power on the system.
8. Once the system gets booted the Windows will automatically start installing the device driver software.

For Windows® XP-x64/Server 2003-x64

1. Don't insert the PCI card into PCI slot.
2. Type **D:\PCI_IO\MCS9865\XP64\PCISetup.exe**, then click **OK**.
(Change **D:** to match your CD-ROM letter)
3. Press **“Install”** button to install the drivers.
4. Click **“Exit”** button to complete the driver installation.
5. Shutdown the PC.

6. Place the PCI card into the PCI slot then power on the system.
7. Once the system gets booted the Windows will automatically start installing the device driver software.

For Windows® Vista

1. Don't insert the PCI card into PCI slot.
2. Type **D:\PCI_IO\MCS9865\Vista32\PciSetup.exe**, then click **OK**. (Change **D:** to match your CD-ROM letter)
3. Press "**Install**" button to install the drivers.
4. Click "**Exit**" button to complete the driver installation.
5. Shutdown the PC.
6. Place the PCI card into PCI slot and then power on the system.
7. Once the system gets booted the Windows will automatically start installing the device driver software.

For Windows® Vista-x64

1. Don't insert the PCI card into PCI slot.
2. Type **D:\PCI_IO\MCS9865\Vista64\PCISetup.exe**, then click **OK**. (Change **D:** to match your CD-ROM drive letter)
3. Press "**Install**" button to install the drivers.

4. Click “**Exit**” button to complete the driver installation.
5. Shutdown the PC.
6. Place the PCI card into PCI slot and then power on the system.
7. Once the system gets booted the Windows will automatically start installing the device driver software.

To Verify Driver Installation

1. Right click **My Computer**, then click **Manage**. Click **Device Manager**.
2. Click on the +(plus sign) in front of **Ports(COM & LPT)**, two **High-Speed PCIe Serial Port ...** ,two **PCI-ISA Communication Port ...** and one **PCI-ISA Parallel Port ...** should be displayed.