

eSATA 6G 2-Port ExpressCard

User Manual

Ver. 1.00

**All brand names and trademarks are properties of their
respective owners.**

Features and Benefits

- Fully compliant with ExpressCard Specification 1.0
- ExpressCard/34 form factor module
- Compliant with Serial ATA Specification 3.0
- Supports communication speeds of 6.0Gbps, 3.0Gbps, and 1.5Gbps
- Hot plug and Hot Swap
- Supports Native Command Queuing (NCQ)
- Supports Port Multiplier FIS based switching or command based switching
- Compatible with SATA 6G, 3G and 1.5G Hard Drives
- Supports Windows® XP/Server 2003/Vista/7 (32/64 bit)

System Requirements

- ExpressCard-enabled system with an available ExpressCard slot
- Windows® XP/Server 2003/Vista/7 (32/64 bit)


Package Contents

- 1 x eSATA 6G 2-Port ExpressCard
- 1 x Driver CD

- 1 x User Manual

Note: Contents may vary depending on country/market.

Hardware Description

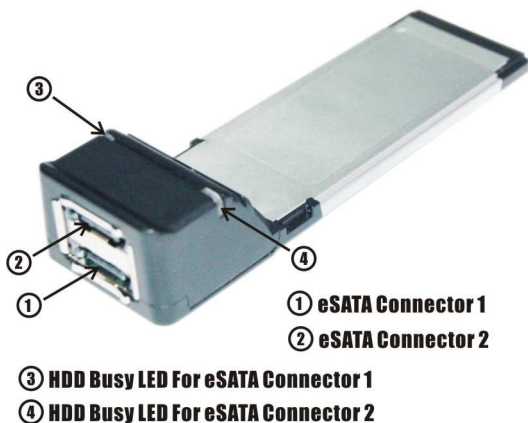

Hardware Installation

General instructions for installing the card are provided below. Since the design of system may vary, refer to your system's reference manual for further information, if needed.

Insert the Card into the ExpressCard slot of your system. Make sure it is inserted all the way in for a solid connection.

Driver Installation

1. Please insert the CD driver bound with eSATA 6G 2-Port ExpressCard into your CD-ROM Drive.
2. At the Windows desktop, click **Start**, then **Run**.
3. Type **D:\PCIe\mv91xx\Setup.exe**, click **OK**. (Change **D:** to match your CD-ROM drive letter)
4. Follow the on-screen instructions to complete the installation.
5. Restart Windows to complete the installation.

To Verify Driver Installation

1. Right click **My Computer** and click **Manage**.
2. Select **Device Manager**.
3. Look for the following:
Windows® 2000/XP/2003: Double click **SCSI and RAID Controller:**
-**Marvell 91xx SATA 6G Controller** should be displayed
Windows® Vista/7: Double click **Storage controllers:**

- **Marvell 91xx SATA 6G Controller** should be displayed