

eSATA/USB 1-Port ExpressCard

User Manual

Ver. 1.00

**All brand names and trademarks are properties of their
respective owners.**

Features and Benefits

General

- Fully compliant with ExpressCard Specification 1.0
- ExpressCard/34 Form Factor Module
- Works with various brands of SATA or USB 2.0 devices
- Hot-swapping feature allows to connect or disconnect devices without powering down system
- Support Windows® 2000, XP/2003/Vista (32-bit and 64-bit)

SATA

- Serial ATA generation 2 transfer rate of 3.0Gbps
- Support SATA II NCQ (Native Command Queuing) to maximize system performance
- Supports hot plug for external Serial ATA port

USB

- Fully supports EHCI and OHCI Compliant standards
- Compliant with Universal Serial Bus specification revision 2.0
- Supports USB 2.0 and USB 1.1 devices
- Supports data transfer rates of high-speed (480Mbps), full-speed (12Mbps), and low-speed (1.5Mbps)

System Requirements

- Windows® 2000, XP/2003/Vista (32-bit and 64-bit)
- ExpressCard-enabled system with an available ExpressCard slot

Package Contents

- 1 x eSATA/USB 1-Port ExpressCard
- 1 x Driver CD
- 1 x User Manual

Hardware Installation

General instructions for installing the card are provided below. Since the design of system may vary, refer to your system's reference manual for further information, if needed.

Insert the Card into the ExpressCard slot of your system. Make sure it is inserted all the way in for a solid connection.

Driver Installation

1. Please insert the CD driver bound with eSATA/USB 1-Port ExpressCard into your CD-ROM Drive.

2. At the Windows desktop, click **Start, Run**.
3. Type **D:\ExpressCard\SiI3531\Setup.exe**, click **OK**.
(Change D: to match your CD-ROM drive letter)
4. Follow the on-screen instructions to complete the installation.

To Verify Driver Installation

1. Right click **My Computer** and click **Manage**.
2. Select **Device Manager**.
3. Look for the following:

Windows® 2000/XP/2003: Double click **SCSI and RAID Controller:**

-**Silicon Image SiI 3531 SATA Controller** should be displayed

Windows® Vista: Double click **Storage controllers:**

-**Silicon Image SiI 3531 SATA Controller** should be displayed