

ExpressCard Card Reader

User Manual

Ver. 1.00

**All brand names and trademarks are properties of their
Respective owners.**

Features and Benefits

- Compliant with Express/34 module specification
- Compliant with USB Storage Class specification
- Supports various card type
Read/Write directly – SD, SDHC, MMC, HS-MMC, MS, HS MS, MS PRO and MS Rom cards
Read/Write through adapter – Mini SD, Micro SD, T-Flash, RS MMC, MMC Micro, MMC Mobile, MS Duo, MS PRO Duo and MS PRO Micro cards
- No driver installation is required!
- Hot-swapping features allow you to attach/detach without powering down your system
- Supports Windows® 2000/XP/Server 2003/Vista

System Requirements

- ExpressCard-enabled system with an available ExpressCard slot
- Windows® 2000/XP/Server 2003/Vista

Package Contents

- 1 x ExpressCard Card Reader

- 1 x User's Manual

Hardware Installation

General instructions for installing the ExpressCard Card Reader are provided below.

1. Insert the ExpressCard Card Reader into the ExpressCard slot of the computer. Push the card into the slot gently, yet firmly for a solid connection.
Note: Some ExpressCard slot will click when the ExpressCard is fully inserted into slot.
2. If your system is powered off when you plug in the ExpressCard, turn it on and go the **Driver Installation**. Otherwise, go directly to **Driver Installation**.

Driver Installation

Windows 2000, XP, Server 2003 and Vista automatically detect and install the correct driver for the ExpressCard Card Reader. No driver installation is needed.

Verify 2000/XP/Server 2003/Vista Installation

1. Right click **My Computer**, click **Manage**, then click **Device Manage**.
2. Click on the + (plus sign) in front of **Disk Drives, Generic STORAGE DEVICE USB Device** should be displayed.

Using the ExpressCard Card Reader

When inserting or removing memory cards, make sure that the ExpressCard Card Reader does not move from side to side in the ExpressCard slot, otherwise it may accidentally eject from the slot.

Inserting Memory Cards

For all memory cards, insert with the gold pins forward and facing down.

Removing Memory Cards

Memory cards can removed at any time.

Accessing Memory Cards

When the ExpressCard Card Reader is successfully installed, a **Removeable Disk** icon will appear in **My Computer**. To access the

memory card, double click the disk icon.

Removing the ExpressCard Card Reader

Before ejecting the ExpressCard Card Reader from the ExpressCard slot, first use the **Safely Remove Hardware** utility to stop it. Not following the steps below could lead to system crashes, data corruption or data loss. Follow the steps below for your version of Windows.

For Windows 2000

1. Click the **Unplug or Eject Hardware** icon located in the taskbar by the system clock.
2. Click **Stop USB Mass Storage Device ...**
3. At the **Safe To Remove Hardware** box, click **OK**.

For Windows XP/Server 2003/Vista

1. Click the **Safely Remove Hardware** icon located in the taskbar by the system clock.
2. Click **Safely remove USB Mass Storage Device ...**
3. When **Safe to Remove Hardware** box pops up, the ExpressCard Card Reader can be ejected.