

USB 2.0 4-Port ExpressCard

User Manual

Ver. 1.00

**All brand names and trademarks are properties of their
Respective owners.**

Features and Benefits

- Fully compliant with ExpressCard Specification 1.0
- ExpressCard/34 Form Factor Module
- Hot-swapping feature allows to connect or disconnect devices without powering down system
- Fully supports EHCI and OHCI Compliant standards
- Compliant with Universal Serial Bus specification revision 2.0
- Provides four external USB2.0 high speed port
- Supports simultaneous operation of multiple USB 2.0 and USB 1.1 devices
- Supports data transfer rates of high-speed (480Mbps), full-speed (12Mbps), and low-speed (1.5Mbps)
- Support Windows® 2000 / XP / Server 2003 / Vista


Package Contents

- 1 x USB 2.0 4-Port ExpressCard
- 1 x User Manual

System Requirements

- Windows® 2000 SP4 /XP SP1 or later /Server 2003 / Vista
- ExpressCard-enabled system with an available ExpressCard slot

Hardware Description

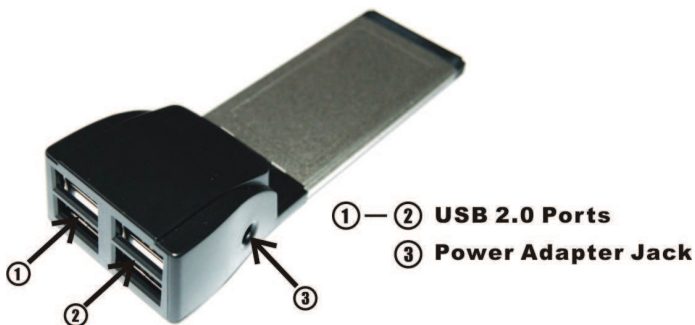

CAUTION:

Use only switching power adapter with following specifications:

- Switching power adapter (Optional) DC 5V, 2A
Polarity: Outside negative voltage(-) & Inside positive voltage(+)
3.5mm power jack



Hardware Installation

General instructions for installing the card are provided below. Since the design of system may vary, refer to your system's reference manual for further information, if needed.

Insert the Card into the ExpressCard slot of your system. Make sure it is inserted all the way in for a solid connection.

Driver Installation

Important: If your system doesn't boot to Windows properly with our card installed, check with your system's manufacturer for the latest system firmware update.

For Windows® 2000/XP/Server 2003/Vista

Once the Windows® 2000, XP, Server 2003 and Vista startup, USB 2.0 ExpressCard will be installed automatically without driver installing. Please update your operating system to Windows® 2000 Service Pack 4, Windows® XP Server Pack 1 or later version.

To Verify Windows Installation

Click on the “**Device Manager**” tab in System Properties, which you access from the Windows Control Panel. You should see an entry of the driver you installed under the Universal Serial Bus controllers item.

Start > Control Panel > System > Device Manager

