



Internet Tablet TD-1010

User Manual



Read this manual before installation and use.



Please fully charge your tablet
before using for best performance!

Important Safety Instructions	4	Connecting to the Internet	17
Features	5	Troubleshooting	18
Introducing your device	6	Compliance Information	19
Basic Operations	7	Warranty	21
Getting Started	8		
Home Screen at a Glance	8		
About Applications	9		
<i>Preinstalled Applications</i>	10		
<i>Browser</i>	10		
<i>Settings</i>	10		
<i>ApkInstaller</i>	11		
<i>Video Player</i>	11		
<i>Music</i>	12		
<i>Gallery</i>	14		
<i>Explorer</i>	14		
<i>Soud Recorder</i>	15		
<i>Calculator</i>	15		
<i>Canlendar</i>	15		
<i>Clock</i>	15		
<i>Camera</i>	16		

READ THIS FIRST BEFORE USING YOUR TABLET

Thank you for your purchase of the 10.1" Internet Tablet

1. Do not use the tablet in extremely hot, cold, dusty or damp environments.
2. Do not drop the tablet when using it.
3. The usage life of battery is subject to the operating condition and environment.
4. Please charge the battery in the following instances:
 - A. The icon of battery level shows weak
 - B. System powers off automatically, and powers off again after restarting
 - C. Keys do not work.
5. During the formatting or uploading/downloading, do not disconnect the tablet from the PC. Disconnection during updating or data transfer may damage files or the tablet.
6. Static discharge to the cable during connection to the computer may corrupt files or the storage area of the tablet.
7. The images in this manual may vary slightly from actual product.
8. Dismantling the tablet and will void the warranty. Please check the trouble shooting section of this manual if experiencing problems.

9. Our company reserves the right to improve the product. Different software and hardware versions might affect the product performance and functions, therefore the product shall be subject to change without further notice.

 
10. Please respect the copyright laws in your area.

11. The tablet is equipped with the touch screen, so keys on machine surface are for assistance only.

※ All warranty information, product features and specifications are subject to change without notice.

- 10. 1" 1024*600 capacitive touch screen.
- Support MP3/WMA/ AAC/OGG /WAV music format.
- Support video of AVI/ WMV/MP4/ MKV/ RM/RMVB/TS/ FLV format, up to 1080P.
- Support Micro SD Card.
- Support picture auto browse in PNG/JPG/BMP/JPEG/GIF format.
- Energy-saving setting, brightness control and sleep.
- Support multi languages.
- Support Win2000 /Win XP/Vista system/Win 7.
- Support downloading files from internet.
- USB2.0 high speed transfer
- Support APK program installation.
- Portable disk.
- OTG function. Support play files from USB device, of which the rated current should be lower than 500mA, via OTG port. When play files saved in a hard disk, for the power consumption is large, please connect an outer power.
- Support firmware upgrade.
- G-Sensor function.
- One Camera on front panel.
- Support multi-point touch function
- Support WIFI Wireless Connection

Keys and interfaces on machine surface have functions shown below:

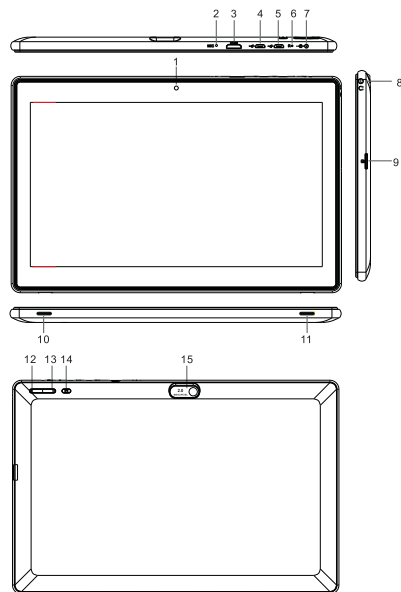

No.	Name	Description
1	Camera	0. 3M Camera
2	MIC key	Microphone
3	HDMI	1080P HDMI output
4	Mini USB port	Connect to a computer via a USB cable to transfer data(e.g.music, video, photos and other files).
5	Mini USB port	Connect to a computer via a USB cable to transfer data(e.g.music, video, photos and other files).
6	Reset hole	Press to reset the tablet.Insert a paper clip or other small object with a narrow tip into this reset hole.
7	Power jack (DC input)	Connect to a 5.5V output adapter
8	Earphone jack	To connect your earphone
9	TF card slot	To insert an TF card
10	Speaker	Speaker
11	Speaker	Speaker
12	Vol + key	Press to increase the volume.
13	Vol - key	Press to decrease the volume.
14	Power and lock key	Key to switch the tablet on or off.
15	Camera	2.0M Camera

How to Power On/Off the tablet?

To power on/off the tablet, please press power key and hold for 3S. This period will need several seconds, please wait patiently.

How to turn on/off the LCD?

After powering on the tablet, if you are not watching video, you can short press power key to turn off the LCD to save power. To turn on the LCD, please short press power key again.

Note: The screen is locked also when the screen is turned off, to unlock the screen, please pull the lock icon to unlock icon .


Touch & type

Use your fingers to manipulate icons, buttons, menus, the onscreen keyboard, and other items on the touchscreen. You can also change the screen's orientation.

To select or activate something, touch it.

To type something, such as a name, password, or search terms, just touch where you want to type. A keyboard pops up that lets you type into the field.

Other common gestures include:

a) Touch & hold: Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, touching an icon on home screen and hold it, when the delete icon  is shown on the screen, dragging the selected icon to this icon can delete it from the home screen. b) Drag: Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. For example, you can drag to reposition shortcuts on the Home screen. c) Swipe or slide: Quickly move your finger across the surface of the screen, without pausing when you first touch (so you don't drag something instead). For example, you can slide a Home screen left or right to view the other Home screens. d) Double-tap: Tap quickly twice on a webpage, map, or other screen to zoom. For example, doubletap a webpage in Browser to zoom in, and double-tap again to zoom out.

e) Pinch: In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

f) Rotate the screen: On most screens, the orientation of the screen rotates with your device as you turn it. You can change this Display setting.

Related settings: Settings > Device > Display

How to reset the tablet?

If your tablet cannot response to any function key, please use pin to press the reset button in the reset hole to reset the tablet.

How to save power?

The battery icon on the screen shows the rest volume of electricity.

To save the power, in system setting interface, please set Brightness and Sleep to a reasonable level

How to charge the tablet?

Please charge the tablet timely before the battery icon shows blank. The tablet can be charged via the commanded DC charger. When the tablet is on, the battery icon shows pulse and shows full when the charging is finished. The whole charging period need 5 hours. It is normal to find that the machine surface is warm under charging state.

G-sensor

 
If do settings setting→display→Auto-rotate screen→on, the tablet will switch the screen orientation automatically when it is being otated.

Connect to Computer and File Transfer

you can use a USB cable to connect your tablet to a Windows computer and transfer music, pictures, and other files in both directions.

Home Screen at a Glance

Press power key and hold for 3S to power on the tablet, then the screen is shown as the below:

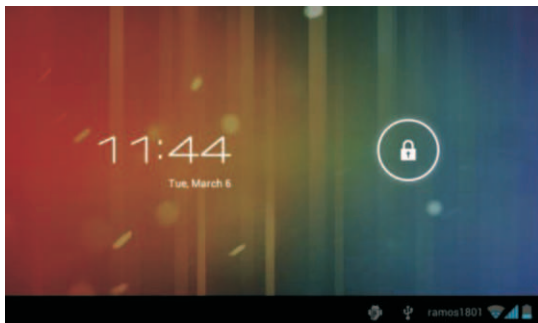

Press the lock icon, pop up unlock icon on the screen, drag the lock icon to unlock icon side, enter in home screen as below:



The home screen is the starting point for all of the features of your tablet.


No.	Name	Description
1	Google Search	Touch to search with Google browser.
2	Home icon	Opens Home. If you're viewing a left or right Home screen, opens the central Home screen.
3	Back icon	Opens the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you can't go back any further in your history.

No.	Name	Description
4	Recent apps	Opens a list of thumbnail images of apps you've worked with recently. To open an app, touch it. To remove a thumbnail from the list, swipe it left or right. <i>Note: After a short time without getting used, these buttons may shrink to dots or fade away, depending on the current app. To bring them back, touch their location.</i>
5	Launcher Tab	Open the Launcher to view the list of all Applications and Widgets installed on the tablet. Touch the Launcher tab to open the Launcher.
6	System notification	Drag it down to see the system notifications.
7	Status icons	It is used to show the current status of network connection, battery volume and system time.

About applications

To open an application, touch the application icon on the home screen or in the Launcher.

 Launcher screen:

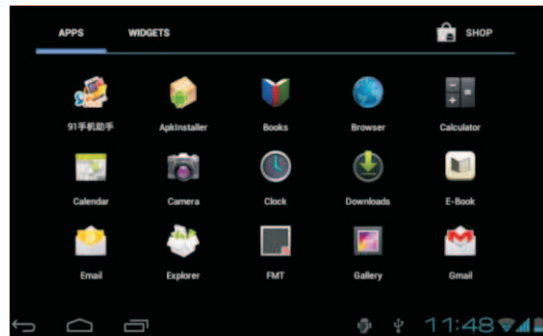

Note: The screen shown above is for illustrative purposes only. DOPO reserves the right to modify and improve the final list of applications available on the tablet.

Preinstalled Applications

Some applications have been installed on your tablet for your convenience. These applications include:

> Browser

From a Home or All Apps screen, touch the Browser icon to open internet browser shown below:




1	Touch to open a new window.
2	Touch to popup more operation menu.
3	Touch to scan most visited website and web page memorized in history.
4	Touch to add bookmarks.

> Settings

From a Home or All Apps screen, touch the Settings icon to enter the system setting interface, on which user can do settings shown below:



a) Wireless & networks: touch to enter Wi-Fi managing interface, on which user can scan current Wi-Fi connection under item Wi-Fi. On Wi-Fi managing interface, if user touch item Wi-Fi settings, then your tablet will scan all Wi-Fi networks available and list them on the screen. On the Wi-Fi network list, touching any Wi-Fi network scanned can view its signal status and select whether connect it or not, and touching menu icon  popup more advanced settings.

 
- b) Sound: touch to setting "Volume, Phone ringtone, Default notification, Dial pad touch tones, Touch sounds, screen lock sounds".
- c) Display: touch to setting "Brightness, Wallpaper, auto-rotate screen, Sleep, Font size".
- d) Storage: touch to view SD card & device storage setting.
- e) Battery: touch to scan the situation of the battery.
- f) Apps: touch to scan the APPS .
- g) Location & services: Location settings.
- h) Security: user can do screen security here.
- i) Backup & reset: touch to enter Factory data reset: interface.
- j) Language & input: touch to set system language and text inputting method.
- k) Accessibility: accessibility setting
- l) Date & time: touch to set system time and date.
- m) About tablet : touch to view basic information about your tablet.

Note: It is important to do system setting, please enter the setting interface of your tablet to view each setting items carefully before using your tablet.

> **ApkInstaller**



Your tablet support managing APK program.
From a Home or All Apps screen, touch the ApkInstaller icon to enter the corresponding interface:

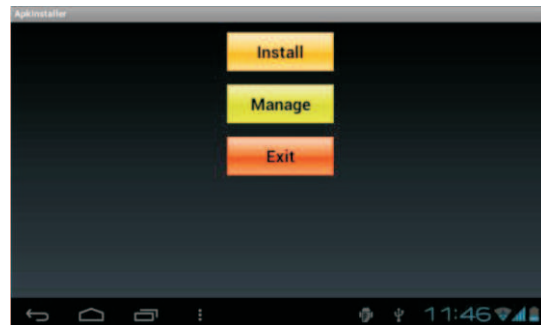

> **Video Player**



From a Home or All Apps screen, touch the Video icon to enter the video file listing interface. Drag your finger on the screen up and down to view the list and touch any one to enter video playing interface like the below:



1	Progress bar: it is used to view video playing progress. Dragging it can fast reverse/forward the video.
2	Volume: touch to decrease/increase the volume.
3	Touch to add the current point to be a bookmark.
4	Touch to set the screen brightness.
5	Touch to play the previous/next video. Long press to fast reverse/forward the current video.
6	Play/Pause: touch to pause/ resume the normal play.

7	Touch to play video in different size.
8	Touch to return the previous directory.
9	Touch to show sub menu which includes Delete Bookmark and Play from beginning, Delete bookmark, Play mode, Help and Return.

 
 
To hide/show the toolbar, please touch the screen centre directly.

Note: If a bookmark is set, then, then if a movie had not been played completely last time, the tablet will remember the pause point. User can select whether play this movie from the pause point next time. On the video file list, long pressing a file can popup the file delete frame, on which user can select whether delete the selected file.

> Music



From a Home or All Apps screen, touch the Music icon to enter the music file listing interface shown below:

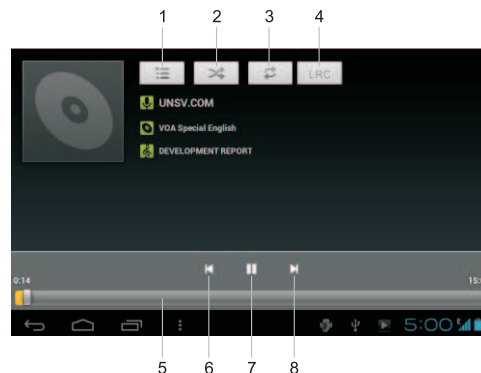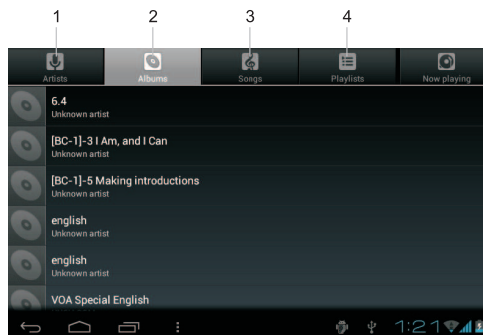

Icons in the tool bar shown on the above interface have functions shown below:

1	Touch to sort song by singer.
2	Touch to sort song by album.
3	Touch to list all music files on screen.
4	Touch to check latest add songs.


1	Touch to popup the music list
2	Touch to "turn on /off shuffle"
3	Touch to set the song repeat mode to repeat off, repeating all songs, repeating current song.
4	Touch to popup lrc.
5	Progress bar: it is used to view video playing progress. Dragging it can fast reverse/forward the video.



Drag your finger on the screen up and down to view the list and touch any one to enter audio playing interface like the below:

6	Touch once fast reverse the current song to begin, fast touch twice to play the previous song.
7	Play/Pause: touch to pause/ resume the normal play.
8	Long press to fast forward the current song, short touch to play the next song
 
> Gallery

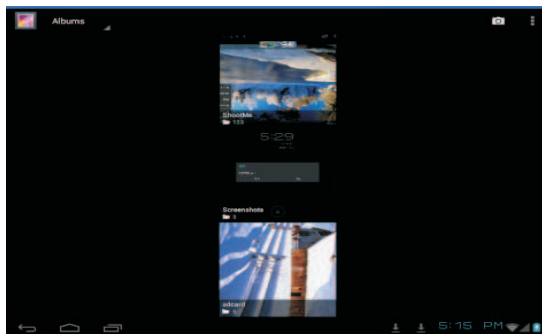From a Home or All Apps screen, touch the Gallery icon, it is used for you to view photo files in your device. you can also download another APK program to view photos from market or other ways. The photo play interface is shown as the below:



Touch icon  can enter into CAM app directly. Choose a album, then choose a photo, can play the photo. When play the photo touch icon  can popup submenu as below:



 
> Explorer




From a Home or All Apps screen, touch the Explorer icon, enter the corresponding interface. User can browsers all the file in this device. In file list interface, long press a file or a folder, can popup an edit dialog, here, user can copy, delete, move, paste, rename the file.

> SoudRecorder

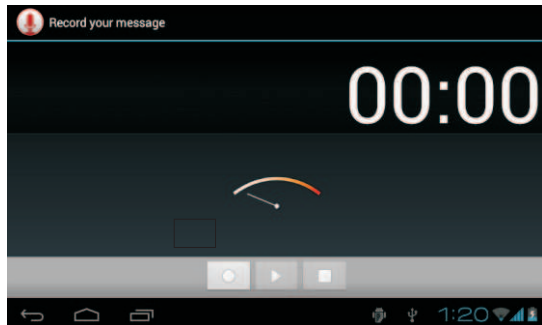

From a Home or All Apps screen, touch the SoudRecorder icon, enter the corresponding interface .



Touching  can start record, after finish the record, touching  can popup the record saving dialogue, this time touching  can listen to record just recorded.

All the record files (VXXXX.3gpp) are saved in folder Record, which is located in the root directory. User can play the record file like play songs.

> Calculator



From a Home or All Apps screen, touch the Calculator icon, enter the corresponding interface, user can do some calculation here.

> Canlendar



From a Home or All Apps screen, touch the Canlendar icon, enter the corresponding interface, user can check canlendar here, and built new event here.

> Clock















From a Home or All Apps screen, touch the Clock icon, enter the corresponding interface, user can setting clock here and add alarm.

> Camera

From a Home or All Apps screen, touch the Camera icon, enter the corresponding interface.



	Shift front and back camera
	White balance
	Unhide setting menu
	Touch to confirm take photo
	Exposure
	Touch to shift take photo to picture recording
	Shift front and back camera
	Hide setting menu
	Start or pause recording picture
	Shift recording picture to take photo
	Pause recording picture
	Adjust focus

This tablet can utilize Wi-Fi data networks to connect to the Internet.

- Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router.

Requirements

In order to connect to the Internet, you will need either of the following:

A wireless router or access point with a broadband Internet connection

The wireless router must support Wi-Fi 802.11b/g connections. If the router supports 802.11n, make sure that it has been configured to accept 802.11b/g connections as well.

Note: A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

Please refer to your wireless router's documentation for help, or ask your network administrator for details.

Note: You may encounter open Wi-Fi networks, or "hot spots." These networks are usually configured so that you can simply connect to them without needing to know its settings; the tablet will obtain all the information it needs from the router automatically.

The tablet cannot be turned on.

Please charge it via the DC charger to check if the battery is low. If not, then please reset the tablet.

No sound can be heard from the earphones.

1. Check if the volume is set as 0. Adjust the volume as required.
2. Check the volume of the file attempting to be played.
3. Confirm the earphone is properly connected.

Noise through earphones.

1. Check if the earphone plug is clean, foreign particles can cause static to be heard through the earphone during playback.
2. Check if the music file is damaged. Confirm by playing other music. The damaged file might create serious noises or voice dithering.

Incorrect language displayed.

Please make sure that you have selected the correct language. Set language in (Settings) => (personal) => (Language & input)

Files cannot be downloaded.

1. Make sure the proper connection between computer and tablet.
2. Check if the memory is full.
3. Check if the USB cable is damaged and replace if necessary.

Audio files not playable.

This tablet cannot play audio files that are copy protected. Please ensure that only files that contain no copy protection are transferred to the tablet.

Video files not playable.

Please check that the video files transferred to the tablet are in the correct size and format. Some files may need to be re encoded to be played on this tablet.

Fail to open the web page.

Please check whether successfully create the Wi-Fi connection.

Forgot the password or lock pattern

Please contact our customer service team through email or phone, you will be receiving the instruction on how to do the factory reset. However, all the personal data will be deleted after the factory reset!

FCC NOTICE

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC ID:xx-xxx-xxx on the product label.

This mobile device complies with part 15 of the FCC Rules. Operation is subjected to the following two conditions: This mobile device may not cause harmful interference, and this mobile device must accept any interference received, including interference that may cause undesired operation. This mobile device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party

responsible for compliance could void the user's authority to operate the equipment. The antenna(s) used for this transmitter must not be colocated or operating in conjunction with any other antenna or transmitter.

RF EXPOSURE INFORMATION (FCC SAR)**DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the device as reported to the FCC when tested for use when worn on the body, as described in this user guide, is 1.23 W/kg. (Body-worn measurements differ among device models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of

various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid/ after searching on FCC ID: xx-xxx-xxx.

For Canada

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. This Category II radiocommunication device complies with Industry Canada Standard RSS-310. Ce dispositif de radiocommunication de catégorie II respecte la norme CNR-310 d'Industrie Canada.

Warning statement

Operation is subject to the following two conditions: this device may not cause interference, and this device must accept any interference, including interference that may cause undesired operation of the device.

Son fonctionnement est sujet aux deux conditions suivantes: Cet appareil ne doit pas provoquer d'interférences néfastes, et cet appareil doit accepter toutes les interférences reçues, y compris celles pouvant provoquer un fonctionnement indésirable.

IMPORTANT NOTE: IC Radiation Exposure Statement

This EUT is compliance with SAR for general population/ uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528. This equipment should be installed and operated with minimum distance 0.5cm between the radiator & your body.

This device and its antenna (s) must not be co-located or operating in conjunction with any other antenna or transmitter.

ONE-YEAR LIMITED WARRANTY ON PARTS AND 90 DAYS ON LABOR

DOPO provides a warranty to the original purchaser of a new Product against defects in materials and workmanship for a period of one year of non-commercial usage and ninety (90) days of commercial use. If a Product covered by this by this warranty is determined to be defective within the warranty period, DOPO will either repair or replace the unit at its sole option and discretion.

PARTS AND LABOR

There will be no charge for parts or labor during the first ninety (90) days of the warranty period. Thereafter and up to one year from the date of purchase, parts only are under warranty. There will be a labor fee if repairs are required during this time. Replacement parts and units may be new or recertified at DOPO's option and sole discretion.

Replacement parts and units are warranted for the remaining portion of the original warranty or for ninety (90) day from warranty service or replacement, whichever is greater.

TYPE OF SERVICE

Defective Products must be sent to a DOPO service center to obtain warranty service. DOPO is not responsible for transportation costs to the service center, but DOPO will cover return shipping to the customer. Pre-authorization is required before sending any unit in for warranty service.

Product returns to DOPO's service centers must utilize either the original box and shipping material or packaging that affords an equal degree of protection. DOPO Technical Support will provide instructions for packing and shipping the covered Product to the DOPO service center.

Limitations and Exclusions

DOPO's one-year limited warranty only covers defects in materials and workmanship. This warranty does not cover: cosmetic damage, units that are dropped, normal wear and tear, improper operation, improper voltage supply or power surges, signal issues, damages from shipping, acts of God, any type of customer misuse, modifications or adjustments, as well as installation and set-up issues or any repairs attempted by anyone other than by a DOPO authorized service center. Products with unreadable or removed serial numbers, or requiring routine maintenance are not covered. This one year limited warranty does not cover Products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE

PERIOD OF TIME SET FORTH ABOVE. DOPO'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING DOPO'S NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT. DOPO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, LOSS OF INFORMATION OR DATA, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.



SERVICE CENTER

1845 S.Vineyard Ave.Ste.4

Ontario,CA 91761

Tel:909-974-2859

Fax:909-974-2865

Hours:8:30AM-5:00PM PST

TO OBTAIN WARRANTY SERVICE

contact DOPO Technical Support

email:TechSupport@doublepowertech.com

phone:800.838.3315

from 8:30AM to 5:00PM Monday through Friday
Pacific Time.

Pre-authorization must be obtained before sending any product to the Service Center.Proof of purchase in the form of a purchase receipt or copy is required to show that a product is within the warranty period.