 


# CHHOTA BHEEM

## tab

EARLY LEARNING FOR KIDS

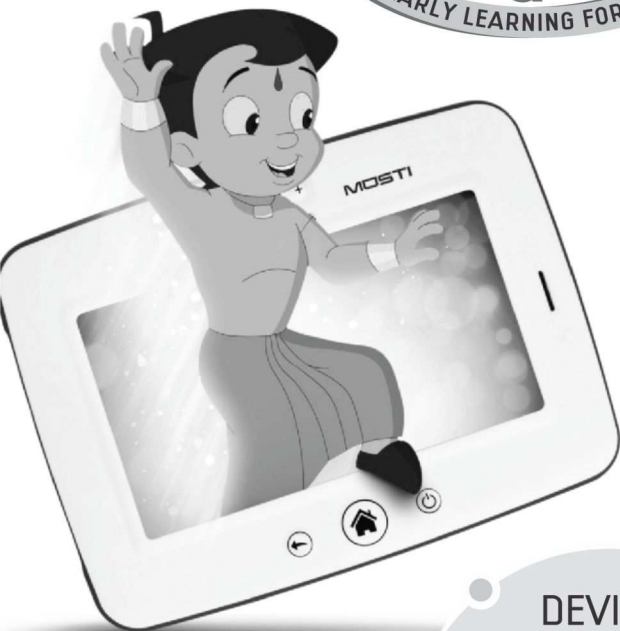

DEVICE  
USER MANUAL

## SAFETY PRECAUTIONS

For safe and effective use, please read the following information carefully before use.

### Battery

- Charge the battery only in temperatures that range from 0°C to 35 °C.
- Do not charge the Tablet PC if the battery is found damaged or leaking.

### Operation

- Never subject the Tablet PC to extremes of light, temperature, moisture or vibration.
- Do not use or store Tablet PC in a location subject:
  - A. Extreme high temperature, such as in a sun- heated car.
  - B. Direct sunlight.
  - C. High humidity or places with corrosive substances.
  - D. Sub-zero condition, especially during winter.
- Use only damp or anti-static cloth for cleaning the device. Do not use a regular cloth.

### SD card (not included in package)

- After inserted a SD card, if the device has no response, please take out and insert again.
- Do not remove SD card or turn off Tablet PC while writing or reading data to prevent damage to data and to the device.
- Make sure the SD card is unlocked before writing or deleting data in the card.
- Backup your files and data before formatting the SD card.

Please Note: Device supports SD cards up to 32GB.  
Format the SD card as a FAT file system.

---



# TABLE OF CONTENTS

# CONTENT

<b>CHAPTER 1: KNOW YOUR DEVICE</b>	<b>5</b>
1.1 PARTS AND CONTROL.....	6
1.2 IN THE BOX.....	7
1.3 POWER THE TABLET ON AND OFF.....	7
1.4 CHARGING THE TABLET.....	7
1.5 TRANSFERRING CONTENTS.....	8
1.6 STAND BY / WAKE UP MODE.....	9
1.7 HOME SCREEN.....	9
1.8 MAIN MENU.....	10
1.9 TOUCH SCREEN BUTTONS.....	11
1.10 SWITCHING ORIENTATION.....	11
1.11 ONSCREEN KEYBOARD.....	11
1.12 CONNECTING TO THE INTERNET.....	12
<b>CHAPTER 2: GETTING STARTED</b>	<b>13</b>
2.1 WEB BROWSER.....	14
2.2 VIDEOS.....	15
2.3 MUSIC.....	16
2.4 PHOTOS.....	18
2.5 CAMERA.....	19
2.6 SOUND RECORDING.....	20
2.7 GMAIL.....	20
2.8 FILE MANAGER.....	21
2.9 MANAGING THIRD PARTY APPLICATIONS.....	24
3.0 ALARMS.....	25
<b>CHAPTER 3: SETTINGS</b>	<b>27</b>
3.1 WIRELESS & NETWORKS.....	28
3.2 SOUND.....	28
3.3 DISPLAY.....	28
3.4 STORAGE.....	29
3.5 BATTERY.....	29
3.6 APPS.....	29
3.7 ACCOUNTS & SYNC.....	29
3.8 LOCATION SERVICE.....	29
3.9 SECURITY.....	29

3.10 LANGUAGE & INPUT.....	29
3.11 BACKUP & RESET.....	29
3.12 DATE & TIME.....	30
3.13 ACCESSIBILITY.....	30
3.14 DEVELOPER OPTIONS.....	30
3.15 ABOUT TABLET.....	30
<b>CHAPTER 4: TROUBLESHOOTING</b>	<b>31</b>
<b>CHAPTER 5: APPENDIX</b>	<b>33</b>
5.1 MAINTENANCE.....	34
5.2 PRODUCT SPECIFICATIONS.....	34
5.3 CERTIFICATION INFORMATION.....	36
<b>CHAPTER 6: KIDO'Z FUN AND SAFE PLAY MODE FOR KIDS</b>	<b>37</b>
6.1 CREATING A KIDO'Z ACCOUNT.....	38
6.2 CREATING ACCOUNT FOR KIDS.....	38
6.3 SELECTING THE KIDO'Z LAUNCHER.....	39
6.4 EXITING KIDO'Z.....	39
<b>CHAPTER 7: THE PARENTAL CONTROL DASHBOARD</b>	<b>40</b>
7.1 KIDO'Z STORE.....	41
7.2 APPS.....	41
7.3 ONLINE CONTENT.....	41
7.4 TIME LIMIT.....	43
7.5 SECURITY.....	43
7.6 ACCOUNT.....	44
7.7 JOIN COMMUNITY.....	44
<b>CHAPTER 8: INSIDE KIDO'Z FUN AND SAFE PLAY MODE FOR KIDS</b>	<b>45</b>
8.1 MORE APPS.....	46
8.2 KIDO'Z BROWSER.....	46
8.3 KIDO'Z TV.....	47
8.4 KIDO'Z GAMES.....	47
COPYRIGHTS AND TRADEMARK NOTICE.....	48
DISPOSAL AND RECYCLING INFORMATION.....	48
DISCLAIMER.....	49



CHAPTER 1  
KNOW  
YOUR DEVICE

## 1.1 PARTS AND CONTROL

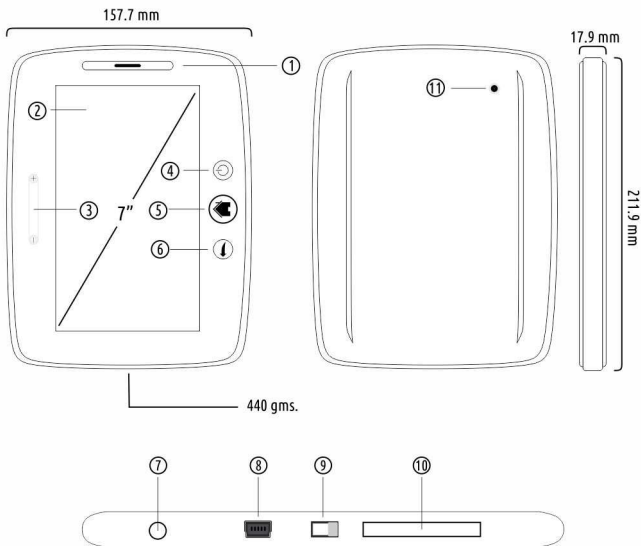


Fig. 1

1. Speaker
2. Display
3. Volume +/- button: Press to adjust the volume level
4. Power Button: Press and hold for 3 seconds to turn on your tablet
5. Home Button: Press to return to the home screen
6. Back button: Press once to return to previous screen, long press to return to home screen
7. 3.5 mm headphone jack
8. Mini USB port for charging and data transfer
9. Clip button (toggle switch to enable and disable the touch screen)
10. SD Card slot
11. Camera

## 1.2 IN THE BOX

Tablet PC

Two pin Charger with USB cable

User Manual

Startup Guide

Warranty Card

## 1.3 POWERING THE TABLET

- Press and hold the Power button for 3 seconds to turn the device on.
- It may take a moment for the device to turn on and load.
- Press and hold the Power button for 3 seconds to Power off, a confirmation window will appear, tap OK to turn off the device.

## 1.4 CHARGING THE TABLET

- You need to charge the device prior to using it for the first time or when the battery power is low.
- Charge the device using the AC adapter, rated output 5V, 1.5A.
- Charging through PC may not yield a full charge due to the lower power output of the PC USB port.
- Please turn the device to standby mode to shorten the charging process.
- It will take about 4 hours to fully charge the device in standby mode (LCD off).
- When the power cable is connected to the device for charging, the device will enter into standby mode if it remains idle for 60s. Press the [Power] button to wake up the device.
- The battery status is displayed at the top of the screen.
- For optimum battery life, please ensure battery maintains a complete charge cycle (5% - 100%).

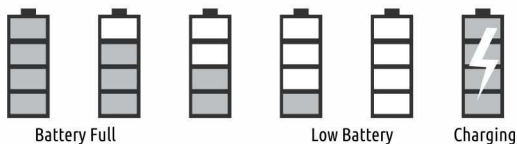


Fig. 2

## 1.5 TRANSFERRING CONTENT

### From Computer

- The device supports USB Mass Storage Devices.
- To import contents (eBooks, audio, video, photos etc.) into the device, connect the device to the PC via the supplied USB cable
- Upon successful connection to PC, turn to the tablet, on the status bar (bottom right corner of the screen); flick upwards to display an ongoing list.
- Select “USB connected”, then tap on “Turn on USB storage” to enter USB mode.
- Go to [My Computer], double click on the device's disk to open.
- Perform file management operations on the mounted USB device.
- Unmount USB device after file operations.

### From Memory Card

- The tablet supports SD cards up to 32 GB.  
To insert a Memory card (Fig 3):
- First locate the SD card slot at the side of the device. Carefully insert the SD card with the contact pin facing downwards as illustrated. On pushing the card into the SD card slot, you should hear a click when the card is seated correctly. **You may damage the card and the device if the SD card is not inserted correctly.**
- To remove SD card, first unmount from -> System Settings -> Storage, push the card once again until it clicks.
- When a SD card is inserted or ejected from the device, it may take few seconds for the device to update the content.
- Please avoid inserting or ejecting the SD card when file operations are in progress as this may cause the system to hang.
- Do not remove the card if content stored on the card is being played.
- This will halt the operation of the device and cause the device to restart.
- If the system is not responding, press the power button for 6 seconds to reset.



Fig. 3

## 1.6 STAND BY / WAKE UP MODE

Press the Power button to enter Standby mode, the device locks automatically. Locking the device turns off the display to save your battery and to prevent unintended operation of the device.

To wake up the device, press the Power button again, then press the Lock button and drag the slider.

The Clip Button (Fig 1. pt.9) enables/disables the touch screen (eg. to prevent accidental touches when watching a movie)

## 1.7 HOME SCREEN

When the device is turned on, it will enter into the Home screen.

### Menu bar

1. Search bar for web browser
2. Main menu button
3. Widget & Shortcut button
4. Return button
5. Home button
6. Running application
7. Volume - button
8. Volume + button
9. Option Menu button

### Status bar


10. USB connection
11. USB debugging
12. Memory card indication
13. Time Display
14. Wi-Fi connection
15. Battery indicator

Flick upwards on the right of the status bar to display an ongoing process list, tap, to display more status messages. Tap 

## Customizing Home Screen

### Adding icons on home screen

You can add shortcuts, widgets or folders to the home screen.

To add icons to the home screen, tap  (always located on top right of screen) to enter Main menu-> press and hold on the desired app -> drag the icon to the desired place on screen.


### Moving icons on the home screen

Touch and hold the icon to be moved until you see a shadow of the icon. Drag the icon to the desired place.

### Removing icons from the home screen

Touch and hold the desired icon to be removed until an “x” appears at the top screen -> drag the icon on “x”, when the icon turns red, release it to remove.

### Setting wallpaper for the home screen


Tap  (located on the lower bar on the screen) -> Wallpaper -> select the desired picture as wallpaper.

### Additional home screens

You can use up to five screens. Flick left or right to go to other home screen. To go to the first Home screen, press the Home button.








## 1.8 MAIN MENU

All application icons are on the Main menu.

- On home screen, tap  to show the Main menu.
- Tap an icon on the Main menu to open the desired application.



## 1.9 TOUCH SCREEN BUTTONS

- Tap an icon to open an application.
- Tap on the bottom of the screen to display the menu bar.
- At the Menu bar, tap  to return to the previous screen, press and hold to return to home screen.
- Tap  to return to the home screen.
- Tap  to display the option menu.
- Tap  to show running applications.
- Tap  /  to adjust volume level or use volume buttons on the device 

### Scrolling

- Drag your finger up and down to scroll file list.
- Flick to scroll quickly.
- On webpage, drag up and down to scroll around the page
- Tap or touch anywhere on the screen to stop immediately.

## 1.10 SWITCHING SCREEN ORIENTATION

Screen orientation can be set to vertical or horizontal via the built-in G-sensor. From Main menu, tap Settings -> Accessibility, select Auto-rotate screen. Rotate the unit and the screen rotates too, automatically adjusting to fit the screen.

## 1.11 ONSCREEN KEYBOARD

Use the onscreen keyboard to enter text, such as text messages, or web addresses.

1. Tap a text field to bring up the keyboard.
2. Touch and hold on the text field to select an input method.

 Uppercase key

 Backspace key

 Enter key

 Input Options

 Numeric / Punctuation / Symbol key


## 1.12 CONNECTING TO THE INTERNET

### Turn on WiFi

1. From Main menu choose Settings -> Wireless & Networks -> Wi-Fi.
2. Tap the other end next to OFF. Then ON will appear when you have turned on the Wi-Fi.

### Join a WiFi network

1. From the detected network list, select a network, if necessary, enter a password and tap "Connect" to save the settings for the encrypted connection and connect to Wi-Fi. (Networks that require a password appear with a lock icon).
2. Select "show advanced option" to show more options.
3. Once you have joined a Wi-Fi network manually, it automatically connects to it whenever the network is in range.

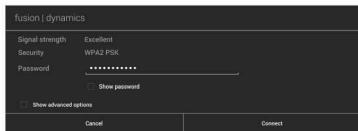




CHAPTER 2  
GETTING STARTED

## 2.1 WEB BROWSER

### View a webpage

- From Main menu, tap Browser to open web browser.
- Tap the address bar at the top of the screen.
- On address bar, type the web address and tap Enter.
- Tap the link on the webpage to open a new webpage.
- Drag up and down to scroll around the webpage.
- Double tap or pinch on the webpage to zoom in or zoom out.
- In zoom mode, drag left, right, up, down to move the webpage.
- The multiple webpage windows opened at a time are shown on the top screen. Tap on the desired window to enlarge to full screen mode.
- To return to the previous page, tap the  (the Back button).


Notes:

- To switch screen orientation, rotate the unit.
- Browser start page always defaults to Google home page.


### Add a bookmark

Tap  to add current visited page as a bookmark.



### Bookmark List

Tap  to show bookmarks list, tap a bookmark to open the webpage. Touch and hold the bookmark to display the option menu for bookmark.

### History

Access history to view lists. To remove these lists, tap  then select Clear history.

### Settings

Tap  /  to use more available functions, including Privacy & Security, Accessibility and so on.


## Refresh/Stop


Tap  to refresh the current page, tap  to stop loading the current page.

## Forward / Back

Tap  /  to go the previous/next webpage you visited.

## Using the option menu

- Tap  to display the browser option menu.
- Tap on the desired item to use webpage viewing control.

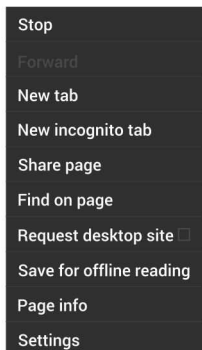

## 2.2 VIDEOS


### Viewing videos

Play or Pause a video	Tap 
Play Previous / Play Next video	Tap 
Fast Rewind or Fast Forward	Touch and hold 
Skip to any point in a video	Tap anywhere or drag the playhead on the progress bar.
Display video menu	Tap 
Adjust the Volume Level	Tap  or use the buttons on the side of tablet.
Return to the browser screen	Tap 

#### Note:


- If a bookmark is added, it allows you to continue playing from the bookmark when you open the video file the next time.
- Video player supports subtitle file, please load the subtitle file to be displayed on the current video, unless the subtitle is integrated into the video itself.
- The Tablet supports subtitle of .sub, .ssa, .srt, .lrc format, and encoded in UTF8 format.
- The file name of the subtitle must be identical to that of the video file. The subtitle will be loaded automatically during video playback.

### Using video playback menu

- During the video playback, tap  to display the Playback menu.
- Tap on the option icon to use more video playback control, such as set full screen ratio, Subtitle, 3D mode and so on.

## 2.3 MUSIC

### Music library

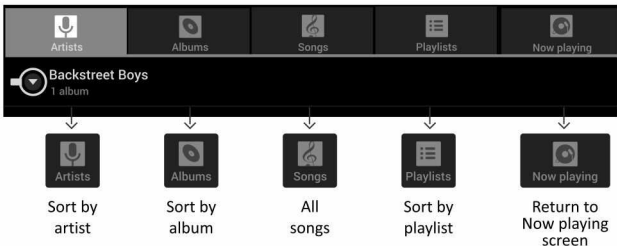

### Playing songs













1. From Home screen or Main menu, tap Music to enter music library.
2. Tap on a desired tab to enter song list.
3. Drag up and down to scroll the song list.
4. Tap the desired songs to start playing.

#### Note:

If you want to exit music mode, tap  to pause, then tap  or .

## Controlling song playback:





Play/Pause a song	Tap 
Play previous/Play next song	Tap 
Fast rewind/Fast forward a song	Tap and hold 
Skip to any point in a song	Tap anywhere and drag the playhead on the progress bar
Adjust the volume level	Tap on  /  or use the button next to the screen.
Display current songs list	Tap 
Set shuffle mode	Tap 
Set repeat mode	Tap 
Display the music playback menu	Tap 
Add the current song to the playlist	Tap  -> Add to playlist
Delete the current song	Tap  -> Delete
Return to the media library	Tap 

## Using the playlist

Use the Playlist to manage the songs in the library.

## Creating new playlist

In the music playback screen, tap  ->  **New** and enter the name for the new playlist, then tap Save.

## Adding current song to the playlist


In the music playback screen, tap  on a desired playlist, then the current song has been added into the selected playlist.

## 2.4 PHOTOS

On the Home screen or Main menu, tap Gallery -> Photo folder to view photo.


### Thumbnail view











Thumbnail view displays the catalog as a table of thumbnail images in adjustable sizes. Tap on the desired photo to full screen view. In full-screen mode, tap  to return to the thumbnail view mode.

### View photo

Tap on the screen to show / hide the control bar.

View previous/next photo	Flick left/right on the screen
Zoom-in/Zoom-out	Use two fingers to pinch on the viewing screen
Set slide show effect	Tap  -> Slideshow






Edit the picture	Tap  -> Edit
Rotate the photo by 90°, clockwise	Tap  -> Rotate clockwise, Left/Right
Crop the picture	Tap  -> Crop
Set photo as wallpaper	Tap  -> Set picture as wallpaper
Display photo information	Tap  -> Details
Share photos with others	Tap 
Delete or save photo	Tap 
Return to thumbnail mode	Tap 

#### Note:

- In zoom in /out mode, drag your finger up, down, left or right to move photo.
- Rotate the unit to switch screen orientation.

## 2.5 CAMERA


From main menu tap Camera to enter the camera mode

- Tap  to select Camera mode, tap  to switch to Camcorder mode.
- Tap  to preview taking a photo or recording a video.
- Press  to take photo or record video, the photo/video file is saved automatically.
- Tap  to display settings menu.
- Tap the thumbnail icon at top right to view the photo or play back the video.
- Press the Return button to exit from the camera mode.

### Camera settings

Tap  to set White balance.

Tap  to set exposure.

Tap  to set Store location/Picture size.

## Camcorder settings


Tap  to set White balance.

Tap  to set Time lapse interval.




Tap  to set Store location.

## 2.6 SOUND RECORDER

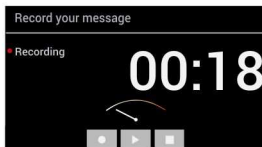From Main menu, tap Sound Recorder to enter sound recording mode.



### Record a voice file

- Press  to start recording a voice file.
- Press  to stop recording a voice file.
- Press  to playback the current recorded voice file.

It will display a message window to choose “Done” or “Discard”, choose “Done” to save the voice file; choose “Discard” to discard the voice file.

A recording time indicator will appear during the recording.

Repeat the above steps to record more voice files.

### Playing back the voice file

The recording is saved in the Record folder, open “Explore”, then open the Record folder, tap on the desired recorded file to be played.

## 2.7 GMAIL

### Setting up GMail Accounts

Prior to the use of e-mail, you need to set up the mailbox account.

1. From Main menu, tap Gmail -> Sign In.
2. Enter your user name and password, tap Sign In to continue.


3. Set POP3/IMAP server (If necessary, obtain the required information from your network administrator, then tap Next to check server setting).

## Using the mailbox

In the mailbox, drag up and down to scroll the mail list.



- Tap to open the mail you want to read.
- On the mail list, touch and hold on the mail to display option menu.
- Use the option menu, the available options are: Read, Archive, Mute, Mark read, Delete, Add bar, Change labels.

## About the mailbox

In the mail list, Tap  to display a mail menu.

- Refresh: Refresh Mail
- Compose: Write a new mail
- Account: View all e-mail accounts
- Go to labels: go to home screen of the GMail
- Search: Search for the desired mail
- Setting: Set email account

## Delete email account

- In the mail list, tap  to display a mail menu.
- Tap Accounts to display email account.
- Tap  to display an option menu, select Account settings.
- Tap on the mail to be deleted to go to next screen, then tap on Remove account.

### Note:

You can set multiple mail accounts, tap Add account.

Each time you use mail, the system will automatically jump to the default account.

## 2.8 FILE MANAGER

From Main menu, tap File Manager .

- Tap to select Internal / SD card memory/USB at the top bar to enter .

- Drag up and down to scroll through the file list to select the desired folder or file.
- Touch and hold the selected file or folder to display the edit menu.
- To open a file or folder, tap on the file or folder.

## About the toolbar and Edit menu toolbar

- |   |  |
|---|--|
|  Back            |  Internal memory    |
|  SD card memory  |  USB storage        |
|  Sort by picture |  Sort by video      |
|  Tool box        |  Multiple selection |

## Edit menu

Touch and hold on the selected file or folder to show the Edit menu.

### 1. File Edit menu


File Operations
Delete File
Rename File
Copy File
Move(Cut) File
Email File

### 2. Folder Edit menu

Folder operations
Delete Folder
Rename Folder
Copy Folder
Move(Cut) Folder
Zip Folder
Paste into folder
Extract here

## Select multiple files or folders

You can select multiple files or folders at the same time.

1. On the Tool bar, tap 
2. Tap the desired files/folders to be selected, then they will be marked with a “ ”. To cancel the selected items, tap on them again.

## Copy / move files or folders

1. From the file list, tap to select the desired files/folders to be copied or moved, then select Move or Copy.
2. Go to the target folder that you want to put the selected file or folder, touch and hold to show the folder Edit menu .
3. Select “Paste into folder”.

### Note:

It may take longer time to copy/move large files/folder.

## Rename the file or folder

1. From the file list, touch and hold the desired file or folder to show the edit menu, select Rename folder/file
2. In file name field, use onscreen keyboard to enter a new file name.
3. Tap Rename to confirm.

## Delete files or folders

1. From the file list, tap to select the desired files/folders to be copied or moved, then they will be marked with a “ ”.
2. Select Delete a message window appears.
3. Select Delete to confirm the deletion.

### Note:

If you only want to copy/move/delete one file/folder, you can touch and hold the desired file or folder to show the Edit Menu, then follow the above steps.

## Attach file/folder via email


1. From the file list, tap to select the desired files/folders to be copied or moved, then they will be marked with a “ ”.
2. Select Attach.




## Using the option menu

In file manager screen, tap  to show the option menu.

## Creating a new folder

1. Go to the desired directory.
2. Tap  New Directory.
3. In file name field, use onscreen keyboard to enter a new directory name.
4. Tap Create to confirm.

## Searching for a file

1. On File Manager screen, tap  to show the option menu.
2. In file name field, use onscreen keyboard to enter the desired file name.
3. Tap Search to start searching for the desired file.

## Configuring the File Manager settings

1. On file manager screen, tap  -> Settings.
2. Choose the desired item on Display and Sorting to start setting.

## 2.9 MANAGING THIRD PARTY APPLICATIONS

This unit supports third party applications (such as Yahoo!, etc.), you can install or uninstall applications from the system.


## Downloading and installing applications

1. Download the desired applications into your computer.
2. Copy the downloaded applications to the unit ( you can also download the desired applications from the browser in your Tablet.).
3. Disconnect this unit from the computer .  
The system only supports .apk format applications to be installed.
4. From Main menu, tap Settings -> Security unknown source.
5. In Explorer, find the directory where the application is placed to tap to start the installation.
6. After finishing the installation, you will see the Applications on the Main menu.

## Uninstalling applications

From the Main menu, tap Settings -> Manage applications. Select the application you desire to uninstall, and then tap Uninstall. The default applications can't be uninstalled from the unit.

## 2.10 ALARMS

From Main menu, tap Clock ->  Clock alarm setting.

### Set an alarm

On clock setting screen, tap "Add alarm" to start to alarm setting.

**Note:**

You can set multiple alarms.

### Adjust any of the following settings

Tap Time to set the alarm time, tap + or - button to adjust the desired hours and minutes. Then tap Set to confirm.

Tap Ringtone to choose the ringtone that sounds when the alarm goes off .

Tap Repeat and choose the days to set the alarm to repeat on certain days.

Tap Label to give the alarm a description. It displays the label when the alarm sounds.

If at least one alarm is set and turned on, it will appear "Alarm set: Time" on home clock screen.

### Turn an alarm on or off

Tap the  check box next to the desired alarm to turn the alarm on or off . If an alarm is set to sound only once, it turns off automatically after it sounds. You can turn it on again to re-enable it.

### Change settings for an alarm

Tap the time of the desired alarm to be changed.

## **Delete an alarm**

Tap the time of the desired alarm to be deleted, select Delete to delete the alarm.



## CHAPTER 3 SETTINGS

## SETTINGS

From Home screen or Main menu, choose Settings -> tap the desired items to be configured to start.

### 3.1 WIRELESS & NETWORKS

The Wi-Fi settings allow you manage networks, such as turn Wi-Fi on and join Wi-Fi networks.

#### **Turn on Wi-Fi**

From Main menu choose Settings -> Wireless & networks -> Wi-Fi and tap the other end next to "OFF". Then "ON" will appear when you have turned on the Wi-Fi.

#### **Join a Wi-Fi network**

From the detected network list, select a network, if necessary, enter a password and tap "Connect" to save the settings for the encrypted connection and connect to Wi-Fi. (Networks that require a password appear with a lock icon).

Select "show advanced option" to show more network control options. If more than one previously used network is in range, the tablet joins the one last used.

When the tablet is connected to a Wi-Fi network, the Wi-Fi icon at the top of the screen shows connection strength.

Tap More to use more wireless network control including setting Airplane mode, Ethernet network setting, VPN settings and Portable Hotspot.

### 3.2 SOUND

Customize the sound settings, including the settings for Volumes, Notification, Vibrate and ring, Touch sounds, Screen lock sound and Vibrate on touch.

### 3.3 DISPLAY

Customize the display settings, including the settings for Brightness, Wallpaper, Auto-rotate screen, Sleep, Font size, Accelerometer coordinate system and screen adaption, G Sensor, Auto Zero.

### 3.4 STORAGE

View the memory status of SD card and internal storage, format SD card memory.

### 3.5 BATTERY

View the battery status of the tablet.

### 3.6 APPS

Allows you to manage applications sorted by Download, On SD card, and Running.

### 3.7 ACCOUNTS & SYNC

Allows you to add new account and sync all the accounts.

### 3.8 LOCATION SERVICE

Let apps use data from sources such as Wi-Fi and mobile networks to determine your approximate location. Moreover, let Google use your location to improve search results.

### 3.9 SECURITY

Allows you to set Screen security, Encryption, Passwords, Device administration and Credential storage.

### 3.10 LANGUAGE & INPUT

Set region and language, keyboard, text input methods, speech, and Mouse/Track pad.

### 3.11 BACKUP & RESET

Allows you to backup account, app data, Wi-Fi passwords, and other settings to Google servers. Additionally, you can erase all the data on the tablet and reboot into the system in Recovery mode.

### 3.12 DATE & TIME

Set date, time, time zone and display format.

### 3.13 ACCESSIBILITY

Allows you to install web scripts, set large text, auto-rotate screen feature, speak passwords, touch and hold delay.

### 3.14 DEVELOPER OPTIONS

**(Warning :** Please be careful when in this section)

Helps you manage the tablet system, such as USB debugging, Stay awake, HDCP checking and so on.

Please ensure that "Use Unknown Sources" is checked in order to install KIDO'z applications from its App Store.

### 3.15 ABOUT TABLET

Display the information about tablet, such as, product status, model number, firmware version, Build number and so on.

If the device does not function as it is expected, please try the following steps in the following chapter.



CHAPTER 4  
TROUBLESHOOTING

### **The device is not responding or can't be turned on?**

- Reset the device by pressing the Power button for 6 seconds. The device will be forced shutdown if it is on and you are required to restart the device again.
- Battery has been fully depleted. Please charge the device via USB or USB AC Adapter .

### **Battery Life seems short?**

- The operating temperature is below 5°C, this is due to the characteristics of battery and not a malfunction.
- The battery is not used for prolonged period. Please recharge the battery of the device again
- The battery is not fully charged. Please charge the device for 4 hours.
- The battery needs to be replaced. Please consult the authorized dealer for service.

### **The device cannot be operated during USB connection?**

- The device cannot be operated while it is connected to PC.
- At status bar, flick upwards to display an Ongoing list, then select "Turn off USB storage" to resume operation.

\*For any other assistance please contact customer support.



**CHAPTER 5  
APPENDIX**

## 5.1 MAINTENANCE

- If Tablet PC does get wet, turn off Tablet PC immediately. Wait for Tablet PC to dry completely before turning on again.
- Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive.
- When carrying your Tablet PC in bag, keep Tablet PC in a protective case to avoid scratches.
- If Tablet PC needs service, please consult the authorized dealer through the contact information provided in the warranty card. Faulty service may void the warranty.

## 5.2 PRODUCT SPECIFICATIONS

### Display

7 inch TFT-LCD Display, High resolution capacitive multi-touch screen, 1024x600 pixels.

### System

Processor : Cortex A8 (1GHz)

RAM Memory: 512 MB

Operating System: Android 4.0.4

### Network

Wi-Fi 802.11 b/g

### Storage memory

Built in memory: Up to 32GB.

Expandable upto 32GB via an SD card.

### Media File Formats supported

Documents: .pdf, .txt, .chm, .doc, .docx, .xls, .epub, .rtf, .fb2

Audio: .mp3, .wma, .ape, .flac, .aac, .ac3, .wav, .ogg

Photo: .jpg, .png, .bmp, .gif, .tiff

Video: .avi, mpg, mkv, rm, rmvb, mp4, mov, vob, dat, flv, 3gp, webm (Vp8), 1080p decoder .

## **Connectivity**

Data transfer: microUSB 2.0 High Speed

Audio: 3.5mm audio jack

Record : Microphone

Storage: SD Card

## **Miscellaneous**

Built -in speaker

G-sensor

Web Camera

Voice recording

Clock / Date

Real-time battery indication

## **Battery life**

Reading: more than 6 hours

Music: up to 10 hours (with backlight off )

Video: more than 4.5 hours

Web browsing : more than 4.5 hours

Standby time : 7 days

## **Charging**

Power: DC 5.0V, 1.5A

Duration: 4 hours (approx.)

## **Physical properties**

Dimension: 211.9 x 157.7 x 16.7 (17.9) mm

Weight: 440g (approx)

\*Design and specifications are subject to change without prior notice

## 5.3 CERTIFICATION INFORMATION

### FCC

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver .
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


#### **Note:**

Changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

**WARNING:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT .

### CE

The symbol means that the unit complies with Indian safety and electrical interference directives.

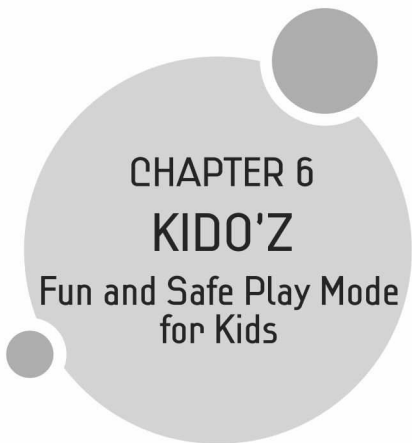

CHAPTER 6  
**KIDO'Z**  
Fun and Safe Play Mode  
for Kids

# USING KIDO'Z

## 6.1 CREATING A KIDO'Z ACCOUNT

Open the KIDO'Z app from the apps page on your device. The page shown in Fig. (a) will appear. If you already have a registered account in KIDO'Z tap on "Sign In" and enter your registered email and password. Or click on "Create account". The page shown in Fig. (b) will appear.



(a)



(b)

Enter the details and tap on "Register". That's it! You are now ready to use KIDO'Z.

## 6.2 CREATING ACCOUNT FOR KIDS

After you sign in, a form for creating account for a kid is displayed. Just enter the details asked for and tap on "create" as shown below.



(a)



(b)

Your kid is now added to your KIDO'Z Kids Account. On the next page displayed, tap on "Change Picture" if you want to change the display picture. The picture can be selected from among the Gallery photos.

You can also take a fresh photo by selecting camera. Click on "Save and add another child" to create another kid account or tap on "Start KIDO'Z" To let your kid play with the tab.

## 6.3 SELECTING THE KIDO'Z LAUNCHER

Next page will display how to select the KIDO'Z launcher [Shown below in Fig (a)]. You need to first tap on the checkbox that says “Use by default for this action” and then tap on “KIDO'Z launcher”. After reading this tap on continue to select the launcher. Next screen displayed will be for selecting KIDO'Z launcher. Follow the instructions displayed in the previous screen to successfully enter KIDO'Z [Shown below in Fig (b)].




(a)




(b)


If you have followed the instruction carefully, the screen below will be displayed.

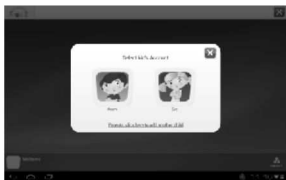


Tap on the kid account and let you kids have fun with their tab.

## 6.4 EXITING KIDO'Z


To exit KIDO'Z, tap on  icon on your screen. The message below will be displayed.

Enter your password and tap on the  icon to exit.



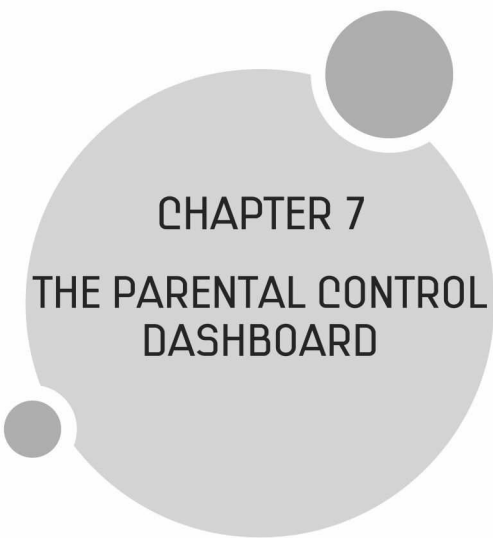


**CHAPTER 7**  
**THE PARENTAL CONTROL**  
**DASHBOARD**

Parental Control Dashboard in KIDO'Z provides the parents with a control over the content a kid will have access to when he/she are using KIDO'Z. To go to Parental Control Dashboard, tap on the  icon at bottom of your screen. The various settings are listed below :

## 7.1 KIDO'Z STORE



The KIDO'Z Store is an android app store wherein all the apps displayed are researched thoroughly to check if its contents are safe and age-appropriate for kids. The parents can download these apps for their kids.

To download any app, just tap on the app and tap on the  icon to start download.

## 7.2 APPS



This feature allows the parents to add/remove any app from a particular kid account in KIDO'Z. To do this, tap on the apps icon first. Then select the kid account where you want to make changes. The next screen displayed will show the list of apps that can be integrated with the account.

To add/remove an app, tap on checkbox next to the app. After you're done tap on "Save" to update the account. A snapshot of the screen is shown below for your assistance.



## 7.3 ONLINE CONTENT

This feature in the Parental Control Dashboard of KIDO'Z allows the parents to control the online content the kid can access from their accounts viz. websites, videos, or games.



This feature in the Parental Control Dashboard of KIDO'Z allows the parents to control the online content the kid can access from their accounts viz. websites, videos, or games.

To restrict certain online content, tap on the Apps icon, then select the kid account for which you need to make changes in. The next screen displayed is shown below:



The screen shows a list of all the KIDO'Z apps that give the kids internet access. Select any of the app whose content you need to change. Each app is discussed below:

### KIDO'Z Browser



To allow/disallow any website that your kid can view, tap on KIDO'Z Browser. The next screen shows list of all the websites the kid can view from the KIDO'Z Browser. To disallow viewing any website, tap on the checkbox next to the website. To add a website, just tap on the checkbox such that a tick appears.

Website can also be added by the parents by clicking the “Add New”. In the next screen enter the website URL, website name and thumbnail and tap on “Save”. The website will be updated to your kid's account.

### KIDO'Z TV



To allow/disallow certain video channels that your kid can view, tap on KIDO'Z TV. The next screen will show a list of all the video channels the kids can view from KIDO'Z TV. To disallow viewing any channel, tap on the corresponding checkbox. To add new videos, tap on “My Channels”.

On the next screen displayed tap on “Add Video”. The videos can be either searched by entering in search box or you can embed a YouTube video. After you are done selecting the video, specify a video title and thumbnail and the channel to which you want to add it. Tap on “Save” to update the changes to the kids account.

## KIDO'Z Games



To allow/disallow any online games that your kids can play, go to KIDO'Z Games. To allow any game, tap on the corresponding checkbox. A green tick will indicate that the game has been added. To disallow any game, tap on checkbox. An empty checkbox indicates that the games is disallowed.

## 7.4 TIME LIMIT



The Time Limit feature in KIDO'Z allows the parents to set a limit on the usage of tab by your kids.

To set time limit, tap on Time Limit in the Parents Control Dashboard.

Next, if you have not yet set a time limit, tap on “Activate Time Limit Control”.

Then, select the daily usage limit by tapping the drop down menu. Also select the daily time frame for the time limit, i.e. start-time and the end-time for the time limit. Tap on “Save” to update the changes.

Set the daily limit time for using KIDO'Z

Activate Time Limit Control

Set the daily usage time limit:

1  HOURS

Set the daily time frame:

From: 01:00

until: 01:00

Save

## 7.5 SECURITY



Security option in the Parental Control Dashboard is for making security setting for starting KIDO'Z and exiting from KIDO'Z or settings for the content that appears in KIDO'Z.

KIDO'Z Security has two sections:

### 1. Start/Quit Settings

Block Exiting KIDO'Z with parent's password: To enable /disable exiting

KIDO'Z by typing parent's password.

Remember safe environment status when device is re-started (automatically): The tab starts with KIDO'Z launcher when the device is re-started while using KIDO'Z.

## 2. Apps/Content Security

**Activate Safe Environment:** Activates all the security settings made by the parents to kid's account when KIDO'Z Safe Mode is started.

**Block Unapproved Apps:** Blocks apps that are not approved as child safe by KIDO'Z from appearing in KIDO'Z Safe Mode.

**Block access to unapproved online content:** Blocks access to online games and websites that are not approved by KIDO'Z Safe Mode.

## 7.6 ACCOUNT



From Account in the Parental Control Dashboard, the parents can change their KIDO'Z account details and password.

To edit the any of the kids account, tap on “Edit” next to the Kids account. Make the necessary changes and save to update the changes. To delete any of the kids account, tap on “Delete Kid's Account” and save.

 
## 7.7 JOIN COMMUNITY



Tap on Join Community, if you would like to join the KIDO'Z Facebook Community and receive updates about KIDO'Z on your Facebook account.




Tap to give customers ratings for KIDO'Z Safe and Play Mode for Kids on Google Play Store.

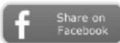

Tap to share you experience with KIDO'Z with others.



Tap if you have queries about KIDO'Z or need customer support.

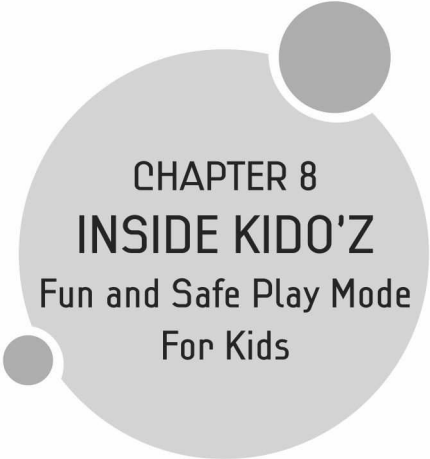

CHAPTER 8  
**INSIDE KIDO'Z**  
Fun and Safe Play Mode  
For Kids


## 8.1 MORE APPS




KIDO'Z More Apps is an app store from where your kids can download android apps. All the listed apps have been researched and approved as child-safe by KIDO'Z. A glimpse of the More Apps is shown below (a).



(a)

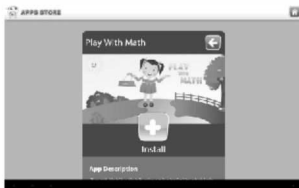


(b)

To download any app, just tap on the app and then on Install  to download and install the app.



## 8.2 KIDO'Z BROWSER



KIDO'Z Browser is a collection of numerous websites that are approved to be kids appropriate. Each of the thumbnail you see when you open KIDO'Z Browser is a link to the sites (See the Snapshot below).

Tap on any of the thumbnails to view the website. All the KIDO'Z websites are listed under Public .




Tap on  to view the websites that the parents have added. To view your favorite websites, tap on .






## 8.3 KIDO'Z TV



KIDO'Z TV is collection of quality videos that are approved to be kids appropriate by KIDO'Z researchers. A snapshot of KIDO'Z TV is shown below. When you open KIDO'Z TV, it shows all the channels each of which contains numerous videos.

Tap on any channel and then select the video you need to watch. All the KIDO'Z channels are listed under Public channels 




Tap on   to watch the previous or next video from a selected channel. Tap on  to add the current video to your Favorites channel. Tap on  to view the websites that the parents have added. To view you favorite websites, tap on 

## 8.4 KIDO'Z GAMES



KIDO'Z Games is a collection of online games that have been researched and approved as kids appropriate games by KIDO'Z. Tap on any game the kid wishes to play and let them enjoy.

While playing a game, tap on  to add the game to your favorite. Tap on  to view all you favorite games.



**IMPORTANT:** The KIDO'Z More Apps, KIDO'Z Browser, KIDO'Z TV, KIDO'Z Games content requires internet access. Make sure that the device is connected to the internet before using these apps.

## COPYRIGHTS AND TRADEMARK NOTICE

Copyright laws prohibit copying the data of this product or the contents of this manual (illustrations, related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this manual is not allowed without vendor's permission except for personal use.

All the brand and product names are trademarks of their respective companies.


## DISPOSAL AND RECYCLING INFORMATION

The tablet must be disposed of properly according to local laws and regulations.

Because this product contains a battery, the product must be disposed of separately from household waste. When your Tablet PC reaches its end of life, contact your local authorities to learn about recycling options.

## BATTERY REPLACEMENT

The rechargeable battery in the tablet should be replaced only by an authorized service provider .

 This symbol on the product or in the instruction means that your electrical or electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU, for more information, please contact the local authority or the retailer from where you purchased the product.

## DISCLAIMER

All the information, design and specifications contained in this manual is correct at the time of publication. However, as the product is under constant development, the final device may vary in appearance or be modified in functionality than presented in this manual. Certain content and services provided in this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided only for your personal noncommercial use. You may not use any content or services in a manner that has not been authorized by the applicable content owner or service provider. You may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services provided and displayed through this device.

Third party content and services may be terminated or interrupted at any time, and MOSTI makes no warranty that any content or service will remain available for any period of time.

MOSTI is neither responsible nor liable for customer service related to the content and services. Any questions or request for service relating to the content or services should be made directly to the respaective content and service providers.

**MOSTI**™

For more information visit [www.chhotabheemtab.com](http://www.chhotabheemtab.com)

For further assistance, please mail us at  
[hello@mosti.in](mailto:hello@mosti.in)

Copyright © **MOSTI** 2013