


RMAJ300

Security Furniture Mount for Philips Model #AJ300D Clock Radio

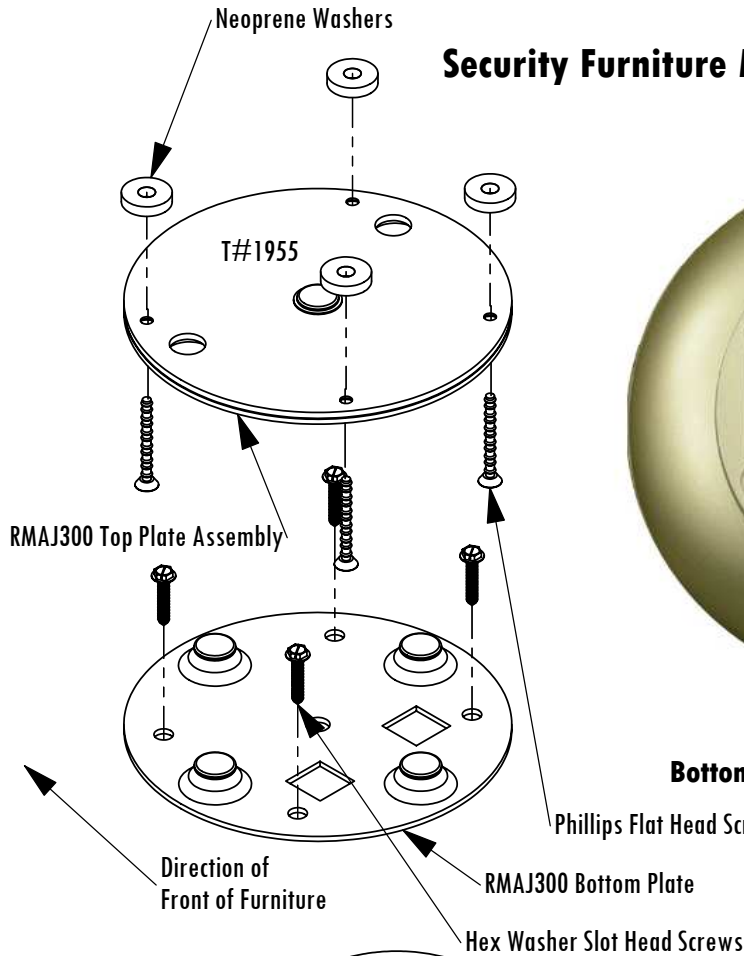

Bottom of Philips AJ300D/37 Clock Radio

1) Remove the rubber feet that are adhered to the bottom of the AJ300 Clock Radio to expose the screw holes.

2) Remove the four black screws from the recessed holes in the bottom of the AJ300 Clock Radio. Leave the silver screws that are flush with the bottom in place.

3) Align the RMAJ300 Top Assembly with the holes on the bottom of the AJ300 Clock Radio. Notice that two of the base screws are farther apart and two are closer together.

4) Rotate the RMAJ300 Swivel Plate until one of the countersunk holes in the RMAJ300 Top Plate is aligned with the slot in the RMAJ300 Swivel Plate.

5) Place one of the Neoprene Washers between the RMAJ300 Top Plate screw hole location aligned in step #4 and the appropriate hole location on the AJ300 Clock Radio.

6) Screw one of the Philips Flat Head Screws into appropriate hole in the bottom of the AJ300 Clock Radio until the neoprene washer is slightly compressed.

7) Repeat steps 4, 5 & 6 with the remaining three Philips Flat Head Screws.

8) Determine the appropriate location for the clock radio on the furniture. Orient the RMAJ300 Base Plate with the two square holes towards the back of the furniture and attach with the Hex Washer Slot Head Screws provided.

9) Align the AJ300 Clock Radio, including the attached plates, with the RMAJ300 Base Plate so that the two square holes in the RMAJ300 Base Plate will engage the metal clips protruding from the RMAJ300 Top Plate Assembly.

10) When engaged properly, there will be an audible click and the RMAJ300 Top Plate Assembly will not be able to be removed from the RMAJ300 Base Plate without the RMAJ300 Release Tool.

Hardware List

- 4 ... #4 x 1" Philips Flat Head Plastite Screws
- 4 ... 3/16" x 1/2" x 1/8" Thk. Neoprene Washers
- 4 ... #8 x 5/8" Hex Washer Slot Head Tapping Screws

