
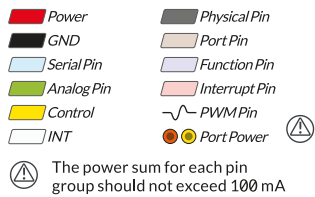




Connected to the ATmega and used for the USB software and communicating with it

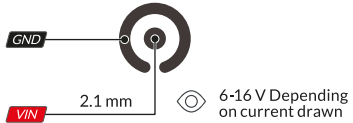

EN: Download this guide in your language at www.bq.com

EN: Discover and share everything you can do at diwo.bq.com


Warranty information: www.bq.com/warranty

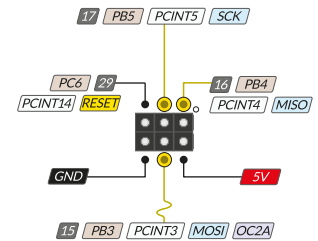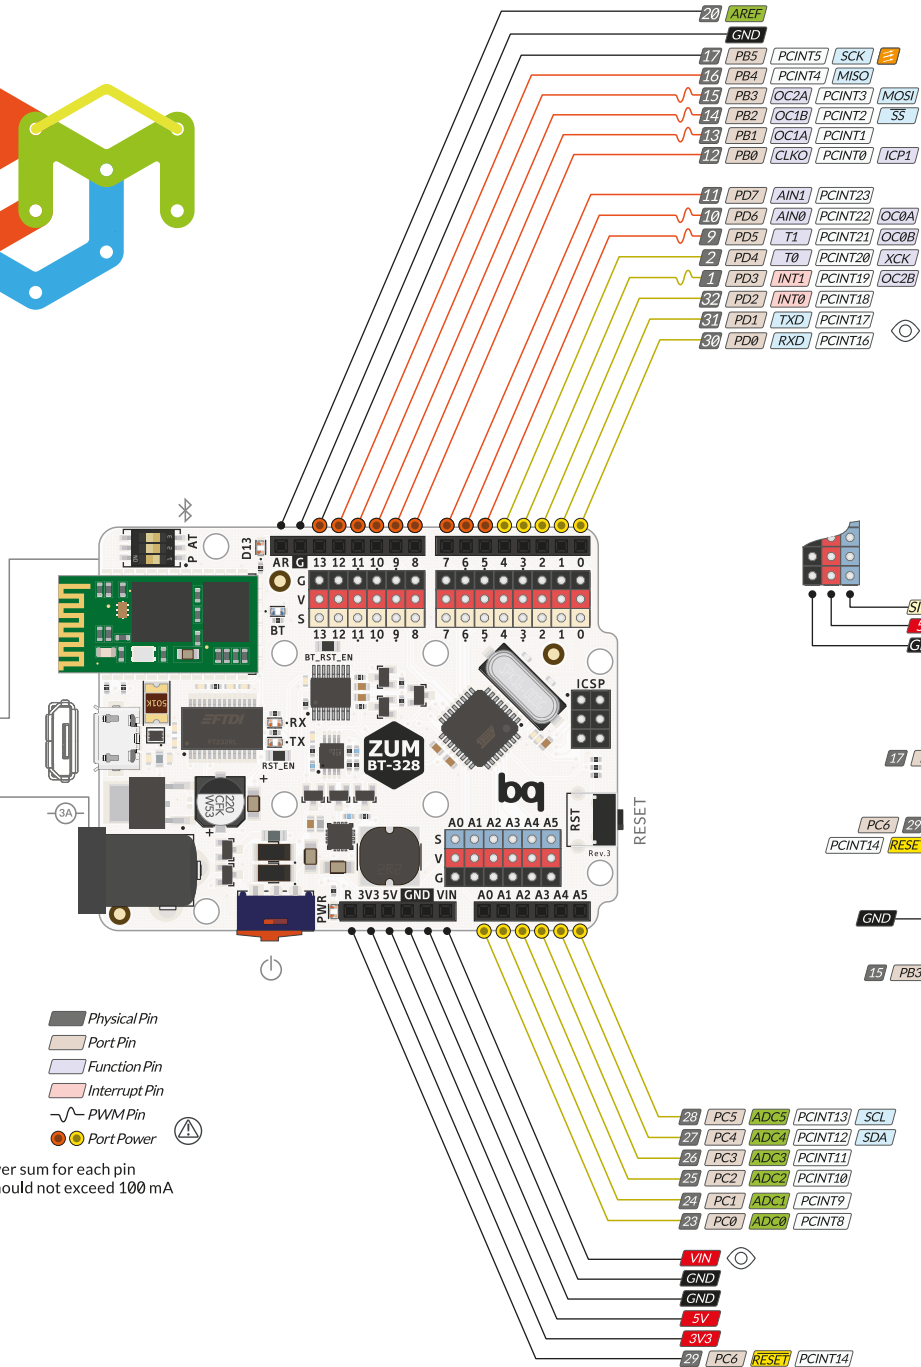

The input voltage to the board when it is running from external power not USB bus power

Absolute MAX per pin 40 mA recommended 20 mA

Absolute MAX 200 mA for entire package

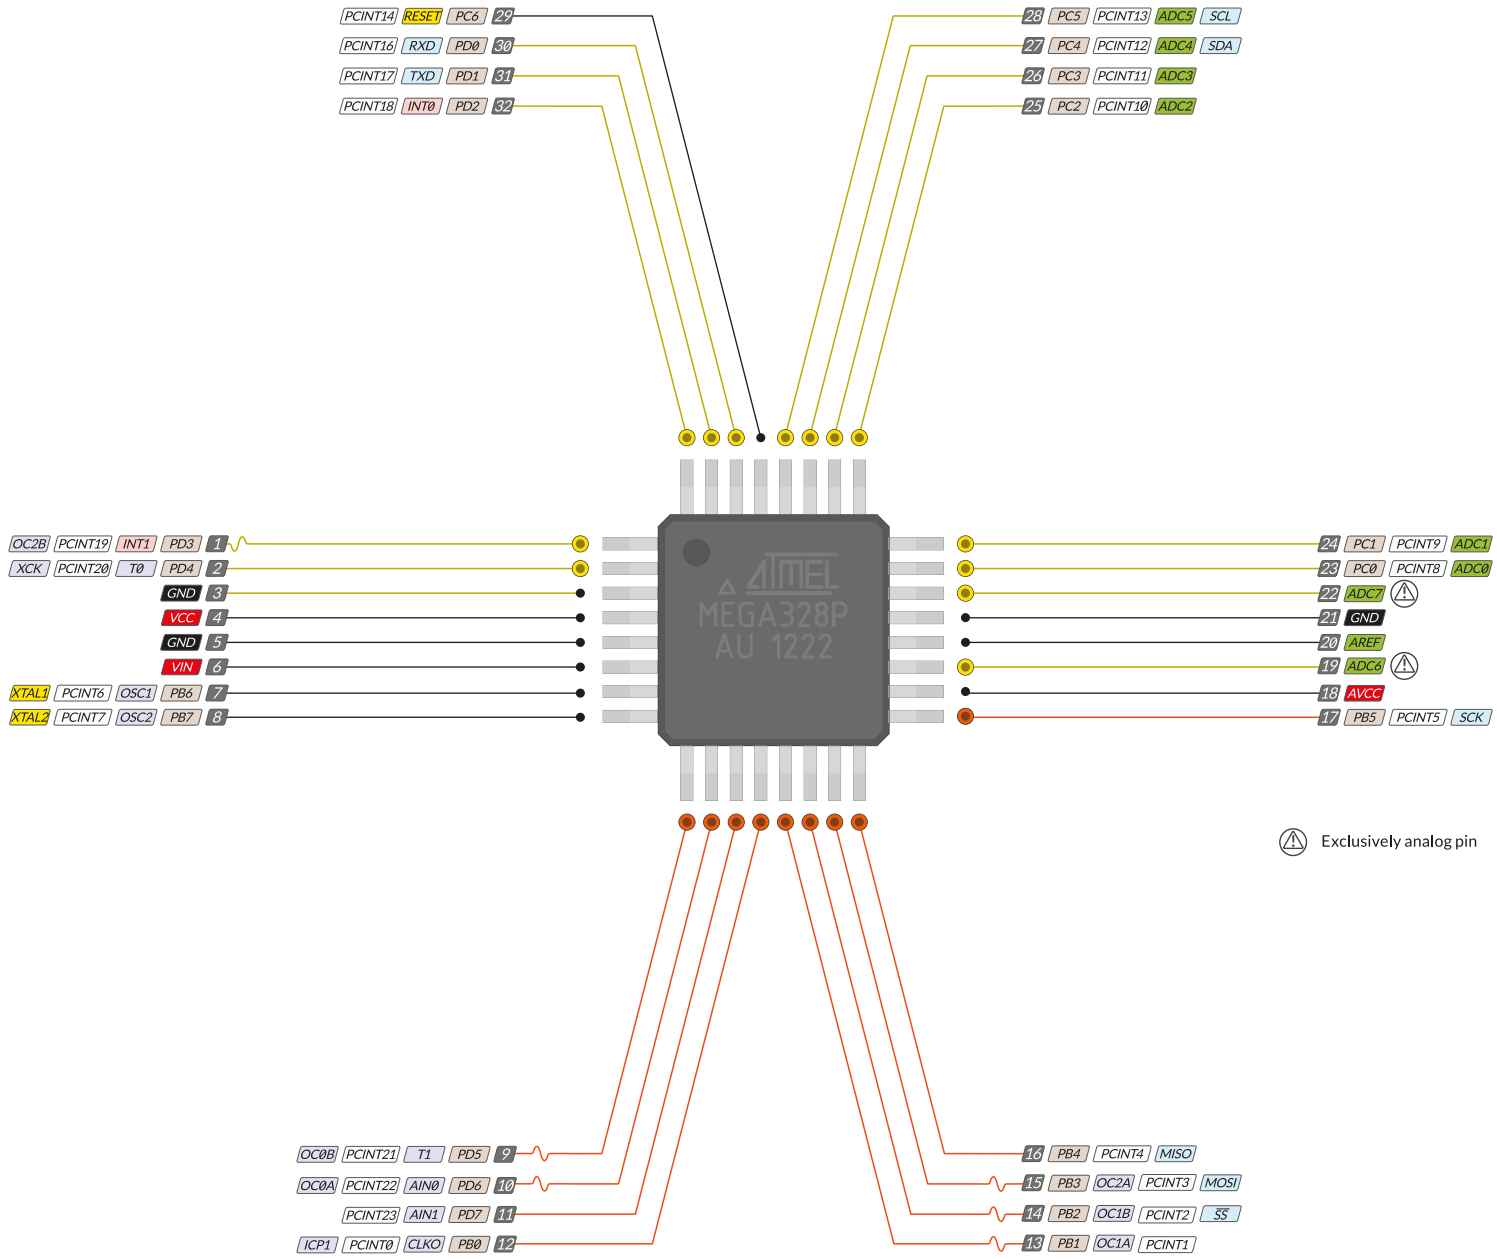

Exclusively analog pin

- The power sum for each pin group should not exceed 100 mA
- Absolute MAX per pin 40 mA recommended 20 mA
- Absolute MAX 200 mA for entire package