



MD-702 Internet Tablet User Manual



Using this manual

This device, built on the Google Android operating system, gives you access to many useful and entertaining applications to enrich your mobile web experience.

With integrated Wi-Fi access and a responsive touch screen, you can play games, read books, stay up-to-date on the latest news, sports, and weather, manage your multimedia and business files, and browse the web for maps, business locations, and more.

Read me first

- Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use.
- The descriptions in this manual are based on the default settings of your device.
- Images and screenshots used in this user manual may differ in appearance from the actual product.
- Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice.
- Available features and additional services may vary by device, software, or service provider.
- Formatting and delivery of this user manual is based on Google Android operating systems and may vary depending on the user's operating system.
- Applications and their functions may vary by country, region, or hardware specifications. Dupo is not liable for performance issues caused by third-party applications.

- Dopo is not liable for performance issues or incompatibilities caused by user editing of registry settings.
- Sound sources, wallpapers, and images provided in this device are licensed for limited use. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws.
- Please keep this manual for future reference.
- Use only approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by your manufacturer's warranty.
- The items supplied with your device may vary depending on the software and accessories available in your region or offered by your service provider.
- Accessories other than the supplied ones may not be compatible with your device.

Instructional icons

Before you start, familiarize yourself with the icons you will see in this manual:



Warning—situations that could cause injury to yourself or others




Caution—situations that could cause damage to your device or other equipment



Note—notes, usage tips, or additional information

► **Refer to**—pages with related information, for example: ► p. 10 (represents “see page 10”)

→ **Followed by**—the order of options or menus you must select to perform a step, for example: In Menu mode, select **Settings** → **Wireless & network** (represents **Settings**, followed by **Wireless & network**)

[] **Square brackets**—device keys; for example: [] (represents the Power/Resting)

Copyright

This user manual is protected under international copyright laws.

No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Dopo.

Trademarks

- The Android logo, Google Maps™, Google Mail™, YouTube™ are trademarks of Google, Inc.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- DivX®, DivX Certified®, and associated logos are trademarks of DivX, Inc. and are used under license.

- All other trademarks and copyrights are the property of their respective owners.

ABOUT DIVX VIDEO

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

DivX Certified® to play DivX® video up to HD 720p, including premium content May play DivX® video up to HD 1080p.

ABOUT DIVX VIDEO-ON-DEMAND

This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DIVX[™]
HD

Contents

Assembling06

Unpack 06

Charge the battery 06

Insert a memory card (optional) 07

Getting started09

Turn your device ON and OFF 09

Switch to Silent mode 09

Get to know your device 10

Using the touch screen 11

Get to know the home screen 13

Access applications 15

Customize your device 16

Enter text 18

Web19

Browser 19

Amazon Appstore 22

YouTube 23

Maps 24

Places 25

Google Search 25

Communication26

Google Mail 26

Email 27

Entertainment29

Music 29

Camera 30

Video 33

Gallery 33

Calendar 34

Connectivity	35	Applications	46
PC connections	35	Accounts & sync	47
Wi-Fi	36	Privacy	47
3G connection	38	Storage	47
Ethernet connection	38	Language & keyboard	47
		Date & time	48
		About device	48
Tools	39	Troubleshooting	49
Shelves	39	Safety precautions	51
OfficeSuite	39	FCC warning	59
Explorer	40	Disclaimer	60
Clock	42		
Calculator	43		
Settings	44		
Access the Settings menu	44		
Wireless & networks	44		
Sound	45		
Display	45		
HDMI Setting	45		
Location and security	46		

Assembling

Unpack

Check your product box for the following items:


- Mobile device
- Power adaptor
- PC data cable
- Stereo Earphone

Charge the battery

Your device has a built-in battery. Before using the device for the first time, you must charge the battery.



Use only supplied chargers. Unauthorized chargers/adaptors can cause batteries to explode or damage your device.

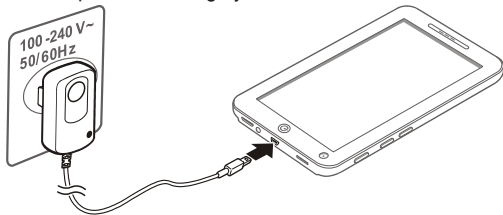


- Charge the battery only with the supplied charger. You cannot charge the battery with the PC data cable.
- When your battery is low, the device will emit a warning tone and display a low battery message. The battery icon will also be empty and turn red. If the battery level becomes too low, the device will automatically power off. Recharge your battery to continue using your device.
- The rechargeable battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider.
- Improperly connecting the travel adaptor can cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.
- You can use the device while it is charging, but it may take longer to fully charge the battery.

- While the device is charging, the touch screen and the touch keys may not function due to an unstable power supply. If this happens, unplug the power adaptor from the power outlet or unplug the PC data cable from the device.
- While charging, the device may heat up. This is normal and should not affect your device's lifespan or performance.
- If your device is not charging properly, bring your device and the charger to your service provider .
- When the battery is fully charged unplug the power adaptor .

Inserting the memory card (optional)

To store additional files, you must insert a memory card into the card reader.

Your device accepts **microSD™** or **microSDHC™** memory cards with maximum capacities of 32 GB (depending on memory card manufacturer and type).

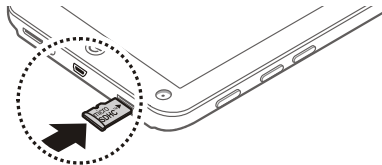

- Your device supports only the FAT file structure for memory cards. If you insert a card formatted with a different file structure, your device will ask you to reformat the memory card.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.
- When you insert a memory card in your device, the file directory of the memory card will appear in the external_sd folder under the internal memory.

>>Removing the memory card

Before removing a memory card, first unmount (dismount) it for safe removal.

In Menu mode, select **Settings** [] → **Storage**


→ **Unmount SD card** → **OK**.



Push the memory card gently until it disengages from the device.
Pull the memory card out of the memory card slot.
Do not remove a memory card while the device is transferring or accessing information, as this could result in loss of data or damage to the memory card or device.

>>Format the memory card

Formatting your memory card on a PC may cause incompatibilities with your device. Format the memory card only on the device.

In Menu mode, select **Settings** [] → **Storage**
→ **Erase SD card** → **Erase SD card**.




Before formatting the memory card, remember to make backup copies of all important data stored on your device. The manufacturer's warranty does not cover loss of data resulting from user actions.


Getting started

Turn your device ON and OFF


1. To turn on your device,


Press and hold [].


If you turn on your device for the first time, follow the on-screen instructions to set up your device.

2. To turn off your device, press and hold [] and then select Power off → OK.

Switch to Silent mode


- Press and hold [] and then select Silent mode.
- You can set the device to alert you to various events in Silent mode.

In Menu mode, select **Settings** [] → **Sound** → **Silent mode**.

When you switch to Silent mode, [] will appear in place of status bar.



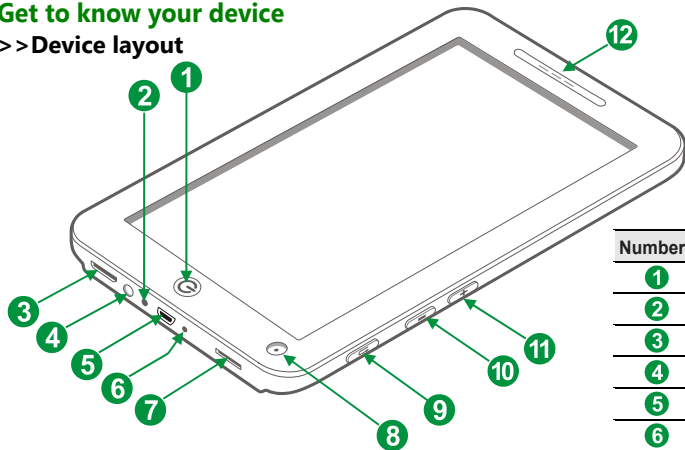

Get to know your device

>> Device layout




Number	Function
1	Power/Lock/Wake key
2	Reset/Indicator light
3	Mini HDMI port
4	Headset jack (Φ3.5mm)
5	Mini USB data/charge port
6	Microphone
7	Memory card slot
8	Camera
9	Return key
10	Volume - key
11	Volume + key
12	Speaker

>>keys

Number	Function
	Power ON/OFF Lock the Screen Wake up the Screen
	Return
	Increase device's volume
	Decrease device's volume

Use the touch screen

Your device's touch screen lets you easily select items or perform functions. How to use the touch screen.

-  • To avoid scratching the touch screen, do not use sharp tools.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water.

- For optimal use of the touch screen, remove the screen protection film before using your device.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen.











You can control your touch screen with the following actions:








- Tap: Touch once with your finger to select or launch a menu, option, or application.
- Drag: Tap and drag your finger up, down, left, or right to move to items on lists.
- Tap and hold: Tap an item and hold it for more than 2 seconds to open a pop-up option list.
- Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item.
- Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos.

>> Indicator icons


Icons shown on the display screen may vary depending on your products.

Icon	Definition
	Applications / Main menu
	Return to the home screen
	Menu
	Return to the previous screen
	Volume UP
	Volume DOWN
	Unable to charge
	Battery power level
	Signal strength
	Ethernet

Icon	Definition
	WLAN activated
	Silent mode
	Connected to PC
	Music playback in progress
	Music playback in pause

Get to know the home screen

When the device is in Idle mode, you will see the home screen. From the home screen, you can view your device's status and access Menu mode. Scroll left or right to a panel of the home screen. The screen below may differ depending on your region or service provider.

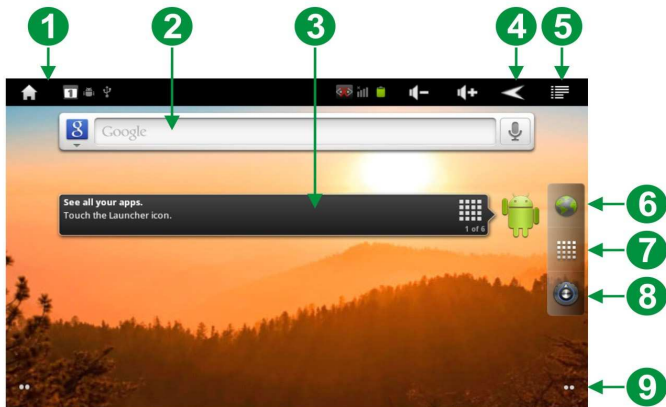

Numbe	Function	Numbe	Function
①	Display indicator and device's current status	⑥	Open the web browser
②	Search the web with the Google Search widget	⑦	Access Main Menu mode
③	Help for home screen	⑧	System setting
④	Return to the previous screen	⑨	Move to corresponding panel
⑤	Applications Menu / setting		

>>Add items to the home screen

You can customize the home screen by adding shortcuts to applications or items in applications, widgets, or folders. In Idle mode, tap at the blank space of the screen for 3 seconds.

1. Select an item category.



- Shortcuts: Add shortcuts to items, such as applications, bookmarks, and contacts.
- Widgets: Add widgets. Widgets are small applications that provide convenient functions and information on your idle screen.
- Folders: Create a new folder or add folders for your contacts.
- Wallpapers: Set a background image.

2. Select an item to add to the home screen.

>>Move items on the home screen

To move an item, Tap and hold the item until it vibrates.

Drag the item to the location you want.

>>Remove items from the home screen

Tap and hold the item you want to remove.

The trash bin appears at the bottom of the home screen.

Drag the item to the trash bin.


When the item and the trash bin turns red, release the item.



>>Add a shortcut to an application

In Menu mode, tap and hold an application icon.

The shortcut icon for the application is added to the home screen. Move the icon to the location you want or move it to another panel of the home screen.

Access applications

1. In Idle mode, select **Applications** [] to access Menu mode.
2. Scroll left or right to another menu screen.


3. Select an application.
4. Press [] to return to the previous screen;
Press [] to return to the home screen.



Customize your device

Get more from your device by customizing it to match your preferences.

>> Change the language of the display

In Menu mode, select **Settings** [] →

Language & keyboard → **Select language**.


Select a language you want.

>> Set the current time and date

In Menu mode, select **Settings** [] → **Date and time**.

Select your time zone, set the time and date, and change other options.

>> Select a wallpaper for the home screen

In Idle mode, press [] → **Wallpaper**.

Select an image folder → an image.

Select **Set wallpaper**.

Dopo is not responsible for any use of default images or wallpapers provided on your device.

>> Activate animation for switching windows

You can set a transition effect between windows while using the device

In Menu mode, select **Settings** [] → **Display** → **Animation**.

Select an animation option.

>> Display Brightness Adjustment

In Menu mode, select **Settings** [] → **Display** → **Brightness** → **OK**.

The brightness level of the display will affect how quickly the device consumes battery power.

>>Set up screen lock

You can lock the touch screen with a secret pattern or password to prevent unauthorized people from using the device.



- Once you set a screen lock, your device will require an unlock code each time you turn it on or unlock the touch screen.
- If you forget your PIN or password, bring your device to a Service Center to reset it.
- Dopo is not responsible for any loss of security codes or private information or other damages caused by illegal software.

>>Set an unlock pattern

In Menu mode, select **Settings** [] →

Location & security → **Set up screen lock** → **Pattern**.

See the on-screen instructions and example patterns and select **Next** (if necessary).

Draw a pattern by dragging your finger to connect at least 4 dots.

Select **Continue**.

Draw a pattern again to confirm.

Select **Confirm**.

>>Set an unlock PIN code

In Menu mode, select **Settings** [] →

Location & security → **Set up screen lock** → **PIN**.

Enter a new PIN (numeric) and select **OK**.

Enter the PIN again and select **OK** to **Confirm your PIN**.

>>Set an unlock password

In Menu mode, select **Settings** [] →

Location & security → **Set up screen lock** → **Password**.

Enter a new password (alphanumeric) and select **OK**.

Enter the password again and select **OK** to **Confirm your password**.

Once the PIN lock is enabled, you must enter the PIN each time you turn on the device or access menus that require the PIN.

Enter text

You can enter text by selecting characters on the virtual keypad.

You cannot enter text in certain languages. To enter text, you should change the writing language to one of the supported languages.

>>Change the text input method

Tap and hold the text input field and select Input method → a text input method (Android Keyboard or Chinese Keypad).

>>Copy and paste text

While you are entering text, you can use the copy and paste feature to use text in other applications. Place the cursor where you want to start. Drag or select to the text you want.

Select to **Copy**, or to **Cut** the text onto the clipboard.

In another application, place the cursor where you want to paste the text.

Select **Paste** → to insert the text from the clipboard into the text field.

Web

Web services require a data connection. Contact your operator to choose the best data plan.


Browser


Learn to access and bookmark your favorite web pages.



- You may incur additional charges for accessing the web and downloading data. For details, contact your service provider.
- The web browser menu may be labeled differently depending on your service provider.
- Available icons may vary depending on your region or service provider.

>> Browse web pages


1. In Menu mode, select **Browser** [] to launch your homepage.






To access a specific web page, select the URL input field and enter the web address of the web page [].

2. Navigate the web



Number	Function
①	Return to previous web page
②	Menu
③	Bookmark


While browsing the web page, use the following options, select [] → **More**.

- To bookmark the current web page, select [] → **More** → **Add bookmark**.
- To search for text on the web page, select [] → **More** → **Find on page**.
- To customize browser settings, select [] → **More** → **Settings**.
- To send the web address of the web page to others, select [] → **More** → **Share page**.
- To view page details, select [] → **More** → **Page info**.

>> Open multiple pages

You can open multiple pages and switch back and forth between them. In Menu mode, select

Browser [].

Select [] → **Windows**.

The web displayed on the icon means the currently open windows.

Select New **Windows** to open a new window.

Access another web page on the new window.

To switch back and forth between currently open windows, select **Windows** and select a web page to retrieve.

>> Bookmark your favorite web pages

If you know the web address of the web page, you can manually add a bookmark.

>>Add a bookmark

In Menu mode, select **Browser** [].

Select [] → **More** → **Add bookmark**.

To bookmark the web page you were viewing, select **OK**.

To use bookmark options, select → **Bookmarks**, and tap and hold a **bookmark**:



- To open the web page in the current window, select **Open**.
- To open the web page in a new window, select **Open in new window**.
- To edit the web page information , select **Edit bookmark**.
- To add the bookmark shortcut to the home screen, select **Add shortcut to Home**.
- To send the web address of the web page to others, select **Share link**.
- To copy the web address of the web page, select **Copy link URL**.
- To delete the bookmark, select **Delete bookmark**.
- To use the web page as your homepage of the browser, select **Set as homepage**.

Amazon Appstore

Your device's functionality can be extended by installing additional applications. Amazon Appstore provides you an easy and quick way to get games and mobile applications.



- This feature may be unavailable depending on your region or service provider.
- Your device will save user files from downloaded applications to the internal memory.

>>Download and install an application

In Menu mode, select **Amazon Appstore**.

If you are launching this application for the first time, read the terms and conditions and select **Accept**.

Search for a file or application and download it.

YouTube

Learn to view and upload videos via YouTube.
This feature may be unavailable depending on your region or service provider.

>> Watch videos

In Menu mode, select **YouTube**.

If you are launching this application for the first time, select **Accept**.

Select a video from the list.

Rotate the device to landscape view.

Maps

Learn to use Google Maps™ to find your location, search the map for streets, cities, or countries, and get directions.







>> Search for a specific location

In Menu mode, select **Maps**.

If you are launching this application for the first time, select **OK**.


The map will display your current location.

Enter a keyword for the location and select [].


- To view a list of all results for your search, select [].
- To zoom in or out, select [] or [].
- To search for a place around you, select [].
- To add layers to the map, select [].
- To view your current location, select [].

>> Get directions to a specific destination

In Menu mode, select **Maps**.

Press [] → **Directions**.


Enter the addresses of the **My Location** and the **End Point**.


To enter an address from your contact list or point the location on the map, press [] →

Contacts or **Point on map**.

Select a travel method (car, bus, or walk) and select **Go**.

Select a travel route to view details of your trip (if necessary).

When you are finished, press [] → **Clear**


Map [].

Places

Learn to search for a place around you. This feature may be unavailable depending on your region or service provider.

1. In Menu mode, select Places.
2. Select a category.
3. Your device searches for places around your current location that are related to the category.
4. Select the name of a place to view its details.



To view the place on the map, select [].

To view the route to the place, select




[].

Google Search

You can search for applications in your device and specific data on the web. In Menu mode, select Google Search.

Enter a letter or a word of the data to search for. Select the item's name you want to access.

Change the Google Search settings, press []
→ **Search settings** → **Google search**

- **Show web suggestions:** Set the device to display suggestions while you are entering a keyword.
- **Use My Location:** Set the device to use your current location for Google search and other Google services.
- **Search history:** Set the device to show the search of your Google account.
- **Manage search history:** Manage the search history of your Google account.

Communication



Google Mail

You can retrieve new email messages from Google Mail™ to your Inbox. When you access this application, the Inbox screen appears. The total number of unread messages displays in the title bar and they display in bold.

- This feature may be unavailable depending on your region or service provider.
- This Google Mail menu may be labeled differently depending on your service provider.


>>Send an email message


In Menu mode, select **Gmail** [].


Press [] → **Compose** [].

Enter a name or address in the recipient field.

Enter a subject and message.

To attach an image file, press [] → **Attach**

[] → a file.







Select [] to send the message.

>>View an email message

In Menu mode, select **Gmail** [].

Select an email message.

From the message view, use the following options:

- To reply to the message, select [].
- To reply to the message including all recipients, select [] → **Reply all**.
- To forward the message to other people, select [] → **Forward**.
- To add a star to the message, select [].
- To view an attachment, select **Preview**. To save it to your device, select **Download**.
- To archive the message, select **Archive**.
- To delete the message, select **Delete**.
- To move to the previous or next message, select [] or [] .

>>Organize email by labels

You can organize your email by labeling your messages or adding stars to mark important messages. You can sort messages by label filter.



Add a label to a message

From the Inbox screen, tap and hold a message. Select **Change labels**. Select a label to add and select OK.

Add a star to a message

From the Inbox screen, tap and hold a message. Select **Add star**. The star icon next to the message is activated.



Filter messages

From the Inbox screen, press [] → **Go to labels** []. Select the label of the messages you want to view.

Email

Learn to send or view email messages via your personal or company email account.


>>Set up an email account

1. In Menu mode, select **Email** [].
2. Enter your email address and password.
3. Select **Next** (for general email accounts) or **Manual setup** (for other company email accounts).
4. Follow the on-screen instructions.
5. To add more email accounts, press [] → **Account manager** → **Add account** and repeat steps 2-4 above.

When you are finished setting up the email account, the email messages are downloaded to your device. If you have created more than two accounts, you can switch between email accounts. Select an account name at the top left of the screen and select one you want to retrieve messages from.



>>Send an email message

In Menu mode, select **Email** [] → an email account.

Press [] → **Compose**.

Add recipients of your message.

- Enter email addresses manually, separating them with a semicolon or a comma.
- Select email addresses from the lists .

- Press [] → **Add Cc/Bcc** to add more recipients.
- Press [] → **Add attachment** to add more files.

You can attach media files, contacts, or location information.

Select **Send** to send the message.

If you are offline or outside your service area, the message will be held in the outbox until you are online and in your service area.

>>View an email message

When you open an email account, you can view previously retrieved emails offline or connect to the email server to view new messages. After retrieving email messages, you can view them offline.

In Menu mode, select **Email** → an email account.

Press [] → [] **Refresh** to update the message list.

Select an email message.

Entertainment

Music

Learn to listen to your favorite music while on the go with the music Player.


>> Add music files to your device


Start by transferring files to your device or memory card:

- Download from the wireless web.
- Download from a PC ▶ p. 35
- Copy to your memory card.



>> Play music

After transferring music files to your device or memory card,

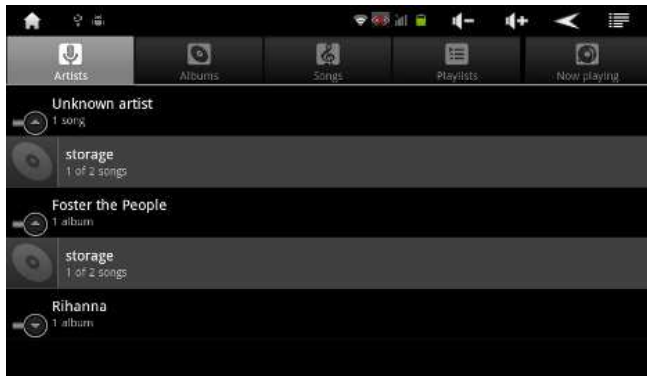1. In Menu mode, select **Music** [].
2. Select a music category.
3. Select a music file.



>>Create a play List

In Menu mode, select **Music** [] → **Play lists**.
Select **Recently added** → [] → **Save as play list** → **Play list name**.

Enter a title for your new playlist and select **Save**.
Select the files you want to include and select **Add to play list**.

Camera

Learn how to capture and view photos and videos. You can take photos at resolutions up to 640 x 480 pixels (0.3 megapixels) and videos at resolutions up to 640 x 480 pixels.



- The camera interface appears only in the landscape orientation.
- The memory capacity may differ depending on the shooting scene or shooting conditions.


>> Capture a photo

In Menu mode, select **Camera** [] to turn on the camera.

Rotate the device to landscape view.

Aim the lens at the subject and make any necessary adjustments



Select [] to take a photo. The photo is saved automatically. After taking photos, select the image viewer icon to view the captured photos.



- To view more photos, scroll left or right. You can also tap the screen and scroll through the thumbnails of photos at the bottom of the screen.
- To zoom in or out, place two fingers on the screen and spread them apart (move your fingers closer together to zoom out) or double-tap the screen.
- To send a photo to others, select **Share**.
- To set a photo as wallpaper, select **More** → **Set as**.
- To delete a photo, select **Delete**.


>> Record a video


In Menu mode, select **Camera** [] to turn on the camera.

Slide up to switch to the camcorder [].

Aim the lens at the subject and make any necessary adjustments.





Select [] to start recording.

Select [] to stop recording.
The video is saved automatically.

The camera may not be able to properly record videos to a memory card with a slow transfer speed.

After recording videos, select

the [] to view the recorded videos.

- To view more videos, scroll left or right. You can also tap the screen and scroll through the thumbnails of videos at the bottom of the screen.
- To play a video, select [] → **Play**.
- To send a video to others, select **Share**.
- To delete a video, select → **Delete**.

Video

Learn to use the video player to play various video formats.

In Menu mode, select **Video** [].

Select a video to play.


Control playback with the following keys, displayed at bottom of video



Gallery

Learn to view photos and play videos saved in your device's memory and memory card.





>>View a photo

In Menu mode, select **Gallery** [].
Select a folder.

To change the view mode, select  or  at the top right of the screen.
Select a photo (with no icon) to view.

>>Play a video

In Menu mode, select **Gallery** [].
Select a folder.


To change the view mode, select  or  at the top right of the screen.
Select a video (with the icon) to play.
Control playback with the virtual keys.

Calendar

Learn to create and manage daily, weekly or monthly events, and set alarms to remind yourself of important events.

>>Change the calendar view

In Menu mode, select **Calendar** [].

Press [], select a view mode from the top of the calendar.

- **Day:** Hourly blocks for one full day
- **Week:** A list of scheduled appointments for the days in one full week
- **Month:** Daily blocks for the current month
- **Agenda:** A list of all scheduled appointments

>>Create an event

In Menu mode, select **Calendar** [].

Press [] → **More** → **New event** .

Enter the details of the event as required.

Select **Done**.

>>View events

To view today's schedule,

In Menu mode, select **Calendar** [].

Select **Today**.

Select an event to view its details.

Connectivity

PC connections

Learn to connect your device to a PC with the supplied PC data cable.

By connecting the device to a PC, you can transfer data to and from your device directly.

>>Connect as a mass storage device


You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the file directory of the memory card by using the device as a memory card reader.

The file directory of the memory card will appear as a removable disk, separate from the internal memory.

If you want to transfer files from or to a memory card, insert a memory card into the device.

Use the PC data cable to connect your device to a PC.

When connected, it shows USB connected

[], slide down the status bar, then select **USB connected** → **Turn on USB storage** → **OK**.
Open the folder to view files.
Copy files from the PC to the memory card.
When you are finished, slide down the status bar, then select **Turn off USB storage**.

To disconnect the device from the PC, click the USB device icon on the Windows task bar and click the option to safely remove the mass storage device. Then remove the PC data cable from the PC.

Otherwise, you may lose data stored on the memory card or damage the memory card.


Wi-Fi

Learn to use your device's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 a/b/g/n standards.

You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

Your device uses non-harmonized frequency and is intended for use in all European countries. The WLAN can be operated in EU without restriction indoors, but cannot be operated outdoors in France.

>>Activate the WLAN feature


In Menu mode, select **Settings** [] → **Wireless & networks** → **Wi-Fi settings**.

Select **Wi-Fi** to activate the WLAN feature.

An active WLAN running in the background will consume battery power faster.

To preserve battery power, activate the WLAN only when needed.

>>Find and connect to a WLAN

In Menu mode, select **Settings** [] → **Wireless & networks** → **Wi-Fi settings**.


The device will automatically search for available WLANs.

Select a network under **Wi-Fi networks**.

Enter a password for the network (if necessary).

Select **Connect**.

>>Add a WLAN manually


In Menu mode, select **Settings** [] → **Wireless & networks** → **Wi-Fi settings** → **Add Wi-Fi network**.

Enter the SSID for the network and select the security type.

Set the security settings depending on the selected security type. Select **Save**.


>>Connect to a WLAN using a Wi-Fi Protected Setup (WPS)

You can connect to a secured network by using a WPS button or WPS PIN. To connect to a WLAN with a WPS button,

In Menu mode, select **Settings** [] → **Wireless & networks** → **Wi-Fi settings** → **WPS PBC**.

Press a WPS button on the access point within 2 minutes.

To connect to a WLAN with a WPS PIN,

In Menu mode, select **Settings** [] → **Wireless & networks** → **Wi-Fi settings**.

Select a network indicated by the WPS icon and select **WPS PIN**.

On the access point, enter the PIN and press the start button.

3G connection

Select **Setting** [] → **Wireless & networks**
→ **Mobile networks** → **Data enabled**

Ethernet connection

Select **Setting** [] → **Wireless & networks**
→ **Ethernet settings** → **Ethernet**

Tools

Shelves





How to open and read book files.

>> To read books

In Menu mode, select **Shelves** [].

Select a book from the bookshelf.


While reading a book, use the following options:

- To move pages, drag your finger left or right or tap near the left or right margin of a page.
- To view the table of contents, bookmarks, etc. , select [] .
- To customize the settings for fonts, select [] → **Font Size** .
- To view book details, select [] → **Book Info** .
- To bookmark the current page, delete Bookmarks and Show Bookmarks , select [] → **Bookmarks** .

OfficeSuite


Learn to open and read document files on your device. This application supports the following file formats:

DOC, DOCX, XLS ,XLSX, PPT,PPTX,PPS , PPSX, TXT.

For more information, select **OfficeSuite** [] in the menu mode, then select **OfficeSuite Pro**. (Need to log on to the internet)

Explorer

Learn to quickly and easily access all of your images, videos, music, sound clips, and other types of files stored on your device and memory card.

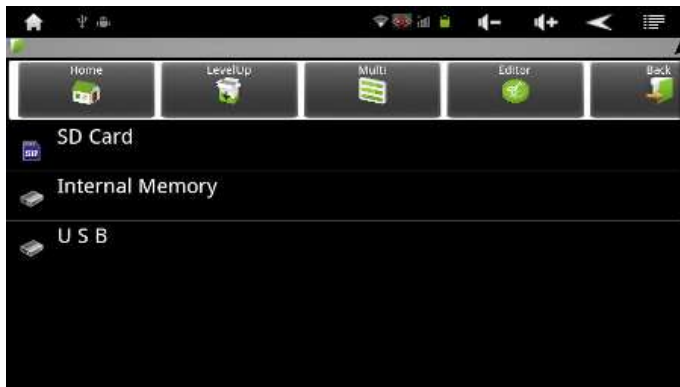

>>Supported file formats

Type	Format
Image	bmp, gif, jpg, png,3gp, mp4, avi, wmv, flv, mkv (Codec: MPEG4, H.263, Sorenson H.263, H.264, VC-1, DivX/XviD)
Music	mp3, m4a, mp4, 3gp, 3ga, wma, ogg, oga, aac, flac



- Some file formats are not supported depending on the software of the device.
- If the file size exceeds the available memory, an error can occur when you open files.
- Avoid locking the device's screen while playing a DivX Video- On-Demand. Each time you lock the screen while playing a DivX Video-On-Demand, one of your available rental counts will be decreased.

>>Open a file

In Menu mode, select **Explorer** [].

Select a route **SD Card / Internal Memory / USB**

Select a folder.

To move up one level in the file directory, select **level UP** .

Select a file to open.

>>Copy and Move files

In Menu mode, select **Explorer** [] → **Editor**.

Select folders or files to copy or move.

Select **Copy or Move** .

Locate a folder and select **Paste**.

>>Delete files

In Menu mode, select **Explorer** [] → **Editor**.


Select folders or files to delete.


Select **Delete** → **Delete**.

Clock

Learn to set and control alarms .

>>Set a new alarm

In Menu mode, select **Alarm Clock** [].

Press [] → **Add alarm**.

Set alarm details.


When you are finished, select **Set**.

>>Stop an alarm

To snooze or dismiss the reminder, select **Snooze** or **Dismiss** .

>>Delete an alarm

In Menu mode, select **Clock**.

Press [] → Select alarms to delete
Select **Delete**.



Calculator

Learn to perform mathematical calculations directly on your device like a typical hand-held or desktop calculator.

In Menu mode, select **Calculator** [].

Use the keys that correspond to the calculator display to perform basic mathematical operations.

Rotate the device to landscape view to use the scientific calculator.



Settings

Access the Settings menu

1. In Menu mode, select **Settings** [].
2. Select a setting category and select an option.

Wireless & network

Change the settings for wireless network connections.

>> Wi-Fi

Turn the WLAN feature on or off.

>> Wi-Fi settings

- **Wi-Fi:** Turn the WLAN feature on or off. ► p. 55
- **Network notification:** Set the device to notify you when an open network is available.
- **WPS PBC:** Connect to a WLAN using a Wi-Fi Protected setup (WPS) button.
- **Add Wi-Fi network:** Add WLAN APs manually.

>> Mobile networks

Connect to a 3G network via USB 3G modem.

- **Modem power:** Turn modem power on / off.
- **Data enabled:** Enable data access over Mobile network
- **Data roaming:** Connect to data services when roaming

>> Ethernet settings

Select **Ethernet** to turn on wired Ethernet, when connecting the device from USB to Ethernet (RJ45).



Select **Static IP Settings** → **Use Static IP** if necessary to set the static IP address.

Sound

Change the settings for various sounds on your device.



- **Silent mode:** Activate Silent mode to mute all sounds except media sounds and alarm ring tones.
- **Volume:** Adjust the volume level for call ring tones, music and videos, alarm ring tones, device system, and notifications.
- **Audible touch tones:** Set the device to sound when you touch the keys on the dialing screen.
- **Audible selection:** Set the device to sound when you select an application or option on the touch screen.
- **Screen lock sounds:** Set the device to sound when you lock or unlock the touch screen.

Display

Change the settings for the display.



- **Brightness:** Set the brightness of the display.
- **Auto-rotate screen:** The display will adjust automatically when the device is tilted from portrait to landscape.
- **Animation:** Set the device to display animation when you switch between windows.
- **Screen timeout:** Set the length of time the device waits before turning off the display's backlight.

HDMI Setting

To turn **ON** or **OFF** the HDMI.

Location and security



- **Use wireless networks:** Set to use wireless networks to find your location .
- **Set up screen lock:** Set the unlock security code.
 - **None:** Disable screen unlock security.
 - **Pattern:** Set an unlock pattern to unlock the screen.
 - **PIN:** Set a PIN to unlock the screen.
 - **Password:** Set a password to unlock the screen.
- **Visible passwords:** Set the device to display your password as you enter.
- **Install from SD card:** Install encrypted certificates that are stored in a memory card.
- **Set password:** Create and confirm a password for accessing credentials.

Applications

Change the settings for managing installed applications.



- **Unknown sources:** Select to download applications from any source. If you do not select this option, you can download applications only from the Android Market.
- **Manage applications:** Access the list of the applications installed on the device and check the application information. You can also view the applications that are currently running or stored in a memory card.
- **Running services:** View the services you are using and access them as needed.
- **Storage use:** View available memory and the memory used by applications.
- **Development:**
 - **USB debugging:** Select to connect your device to a PC by using a PC data cable. This is for application development.
 - **Stay awake:** Set the device's screen to stay on while charging the battery.

Accounts & sync

Change the settings for the auto sync feature or manage accounts for synchronization.



- **Background data:** Select this setting to use the auto sync feature. The auto sync will run in the background without opening applications and synchronize data.
- **Auto-sync:** Set the device to synchronize contact, calendar, and email data automatically.

Privacy

- **Back up my data:** Set to back up your settings and application data to the Google server.
- **Automatic restore:** Set to restore your settings and application data when the applications are reinstalled on your device.
- **Factory data reset:** Reset your settings to the factory default values and delete all your data.

Storage

Check memory information of memory cards and your device, and format the external or internal memory.

Language & keyboard

Change the settings for text input.

>> Select language

Select a display language for all menus and applications.

>> Select input method

Select a default keyboard type for text input.

Date & time

Access and alter the following settings to control how time and date are displayed on your device:

- **Automatic:** Use network-provided values.
- **Set date:** Set the current date manually.
- **Select time zone:** Set your home time zone.
- **Set time:** Set the current time manually.
- **Use 24-hour format:** Set to the time to be displayed in 24-hour format.
- **Select date format:** Select a date format.

About device

Access information about your device, check the device's status, and learn how to use your device.

Troubleshooting

Your device displays network or service error messages

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

The touch screen responds slowly or improperly

If your device's touch screen is not responding properly, try the following:

- Remove any protective covers from the touch screen. Protective covers may prevent the device from recognizing your inputs and are not recommended for touch screen devices.
- Ensure that your hands are clean and dry when tapping the touch screen.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is upgraded to the latest version.

- If the touch screen is scratched or damaged, take it to your local service provider .

Your device freezes or has fatal errors

If your device freezes or hangs up, you may need to close programs or reset the device to regain functionality. If your device is still responsive but a program is frozen, close the program using the task manager. If your device is frozen and unresponsive, press **Reset**, and the device will reboot automatically.

If this does not solve the problem, perform a factory data reset. In Menu mode, select **Settings** → **Privacy** → **Factory data reset** → **Reset MID** → **Erase everything**.

The device beeps and the battery icon flashes

Your battery is low. Recharge the battery to continue using the device.

The battery does not charge properly or the device turns off

If the battery will no longer charge completely, contact your service provider.

Your device is hot to the touch

When you use applications that require more power or use applications on your device for an extended period of time, your device may feel hot to the touch. This is normal and should not affect your device's lifespan or performance.

Error messages appear when launching the camera

The device must have sufficient available memory and battery power to operate the camera application. If you receive error messages when launching the camera, try the following:

- Charge the battery.
- Free some memory by transferring files to a PC or deleting files from your device.
- Restart the device.
- If you are still having trouble with the camera

application after trying these tips, contact the service provider.

Error messages appear when opening music files

Some music files may not play on the device for a variety of reasons. If you receive error messages when opening music files on your device, try the following:

- Free some memory by transferring files to a PC or deleting files from your device.
- Ensure that the music file is not Digital Rights Management (DRM)-protected. If the file is DRM-protected, ensure that you have the appropriate license or key to play the file.
- Ensure that your device supports the file type.

A connection is not established when you connect the device to a PC

- Ensure that the PC data cable you are using is compatible with your device.
- Ensure that you have the proper drivers installed and updated on your PC.

Safety precautions

To prevent injury to yourself and others or damage to your device, read the following information before using your device.

Warning: Prevent electric shock, fire, and explosion

Do not use damaged power cords or plugs, or loose electrical sockets

Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord

Do not bend or damage the power cord

Do not use your device while charging or touch your device with wet hands

Do not short-circuit the charger or the battery

Do not drop or cause an impact to the charger or the device.

Do not charge the battery with chargers that are not approved by the manufacturer

Do not use your device during a thunderstorm

Your device may malfunction and your risk of electric shock is increased.

Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery

For safe disposal of your Li-Ion batteries, contact your nearest authorized service center.

Handle and dispose of batteries and chargers with care

- Use only approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device, batteries, and chargers from damage

- Avoid exposing your device and batteries to very cold or very hot temperatures.
- Extreme temperatures can cause the device to become deformed and reduce the charging capacity and life of your device and batteries.

Caution: Follow all safety warnings and regulations when using your device in restricted areas

Turn off your device where prohibited

Comply with all regulations that restrict the use of a mobile device in a particular area.

Do not use your device near other electronic devices

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

Do not use your device near a pacemaker

- Avoid using your device within a 6 inches range of a pacemaker if possible, as your device can interfere with the pacemaker.
- If you must use your device, keep at least 6 inches away from the pacemaker.
- To minimize the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker.

Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency

If you personally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio frequency.

If you are using a hearing aid, contact the manufacturer for information about radio interference

Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid.

Turn off the device in potentially explosive environments

- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at service stations, near fuel or chemicals, and at blasting areas.

- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Turn off your device when in an aircraft

Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft.

Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device

Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information.

Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and remember the following tips:

- Use a hands-free device.
- Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road.

Proper care and use of your mobile device

Keep your device dry

- Humidity and all types of liquids may damage device parts or electronic circuits.
- When wet, turn off your device. Dry your device with a towel and take it to a service center.
- Liquids will change the color of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty.

Do not use or store your device in dusty, dirty areas

Dust can cause your device to malfunction.

Do not store your device on uneven surfaces

If your device falls, it can be damaged.

Do not store your device in hot or cold areas. Use your device at -4°F to 113°F

- Your device can explode if left inside a closed vehicle, as the inside temperature can reach up to 176°F.
- Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Store the battery at -4°F to 113°F.

Do not store your device with metal objects such as coins, keys and necklaces

- Your device may become deformed or scratched and malfunction.

Do not store your device near magnetic fields

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic strip cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

- The battery may leak.
- Your device may overheat and cause a fire.

Do not drop your device or cause impact to your device

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purposes.

Use manufacturer-approved batteries, chargers, accessories and supplies

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction.
- We cannot be responsible for the user's safety when using accessories or supplies that are not approved.

Do not allow infants or pets to bite or suck on the device or the battery

- Doing so may damage the device or cause an explosion.
- If children use the device, make sure that they use the device properly.

Protect your hearing

- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while driving may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Use caution when using the device while walking or moving

Always be aware of your surroundings to avoid injury to yourself or others.

Do not carry your device in your back pockets or around your waist

You can be injured or damage the device if you fall.

Do not disassemble, modify, or repair your device

- Any changes or modifications to your device can void your manufacturer's warranty. For service, take your device to a Local Service Center.
- Do not disassemble or puncture the battery, as this can cause explosion or fire.

Do not paint or put stickers on your device

Paint and stickers can clog ventilation and prevent proper operation. If you are allergic to paint or metal parts of the product, you may experience itching, eczema, or swelling of the skin. When this happens, stop using the product and consult your physician.

When cleaning your device:

- Wipe your device or charger with a clean soft towel.
- Clean the terminals of the battery with a cotton ball or a towel.
- Do not use chemicals or detergents.

Do not use the device if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hands and face. Take the device to a Local Service Center to have it repaired.

Do not use the device for anything other than its intended use. Avoid disturbing others when using the device in public. Do not allow children to use your device

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others or damage the device.

Install mobile devices and equipment with caution

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

Handle memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-colored contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Be sure to back up important data

Dopo is not responsible for data loss.

Do not distribute copyright-protected material

Do not distribute copyright-protected material that you have recorded to others without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance could be avoid the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

Third party services may be terminated or interrupted at any time, and Dopo makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and

transmission facilities. Without limiting the generality of this disclaimer, Dopo expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Dopo is neither responsible nor liable for customer service related to the content and services.



SERVICE CENTER

1845 S. Vineyard Ave, Ste.4 Ontario,CA
91761

Tel: **909-974-2859**

Fax: **909-974-2865**

Hours: 8:30AM - 5PM PST