


REV.	DESCRIPTION/ECO NO.	DATE
	RELEASED	3/24/10

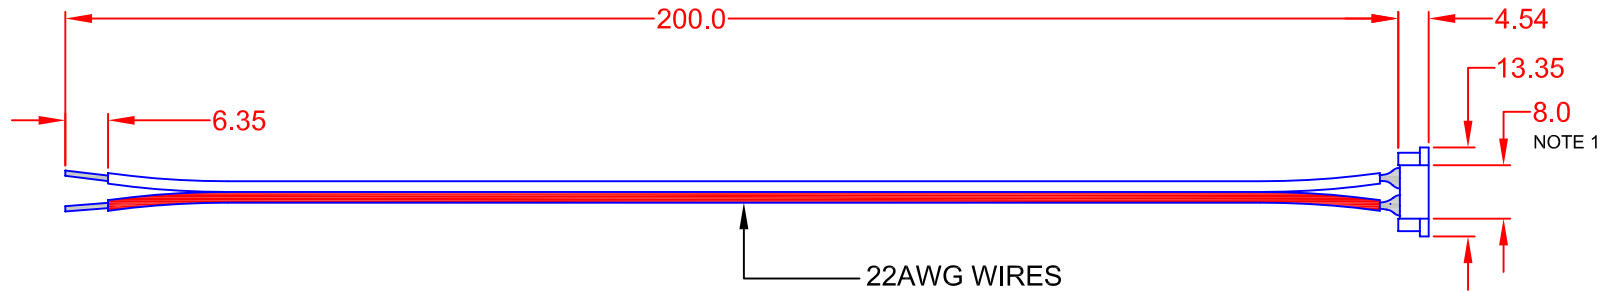

NOTES:

1. OPENING FOR FLEX TAPE.
2. OPERATION:
 1. GENTLY PULL DARK TABS AWAY FROM WIRES
 2. INSERT FLEX TAPE WITH CONTACTS UP
 3. PUSH DARK TABS BACK TOWARDS WIRES TO LOCK FLEX TAPE IN PLACE.
 4. DO NOT USE IF CONTACTS HAVE SOLDER BUILD UP ON THEM.
3. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.

<p>THIRD ANGLE PROJECTION</p>	<p>METRIC</p> <p>DIMENSIONS ARE IN MILLIMETERS</p>	<p>JKL COMPONENTS CORPORATION</p>			
	<p>TOLERANCE UNLESS OTHERWISE SPECIFIED</p> <p>1 PL +/- REF.</p> <p>2 PL +/- REF.</p> <p>ANGLE +/-</p>				
<p>DRAWN BY</p> <p>L. WENGSTROM</p>	<p>APPV'D BY</p> <p>L.R.</p>	<p>DATE</p> <p>3/24/10</p>	<p>SIZE</p> <p>A</p>	<p>FSCM NO.</p> <p>55335</p>	<p>DRAWING NO.</p> <p>ZFS-CH200-I</p>
<p>- CAD DRAWING -</p> <p>MANUAL REVISIONS NOT PERMITTED</p>			<p>SCALE</p> <p>NOT TO SCALE</p>	<p>RELEASED DATE</p> <p>3/24/10</p>	<p>REVISION DATE</p>
				<p>REV. NO.</p>	<p>SHEET</p> <p>1 OF 1</p>