




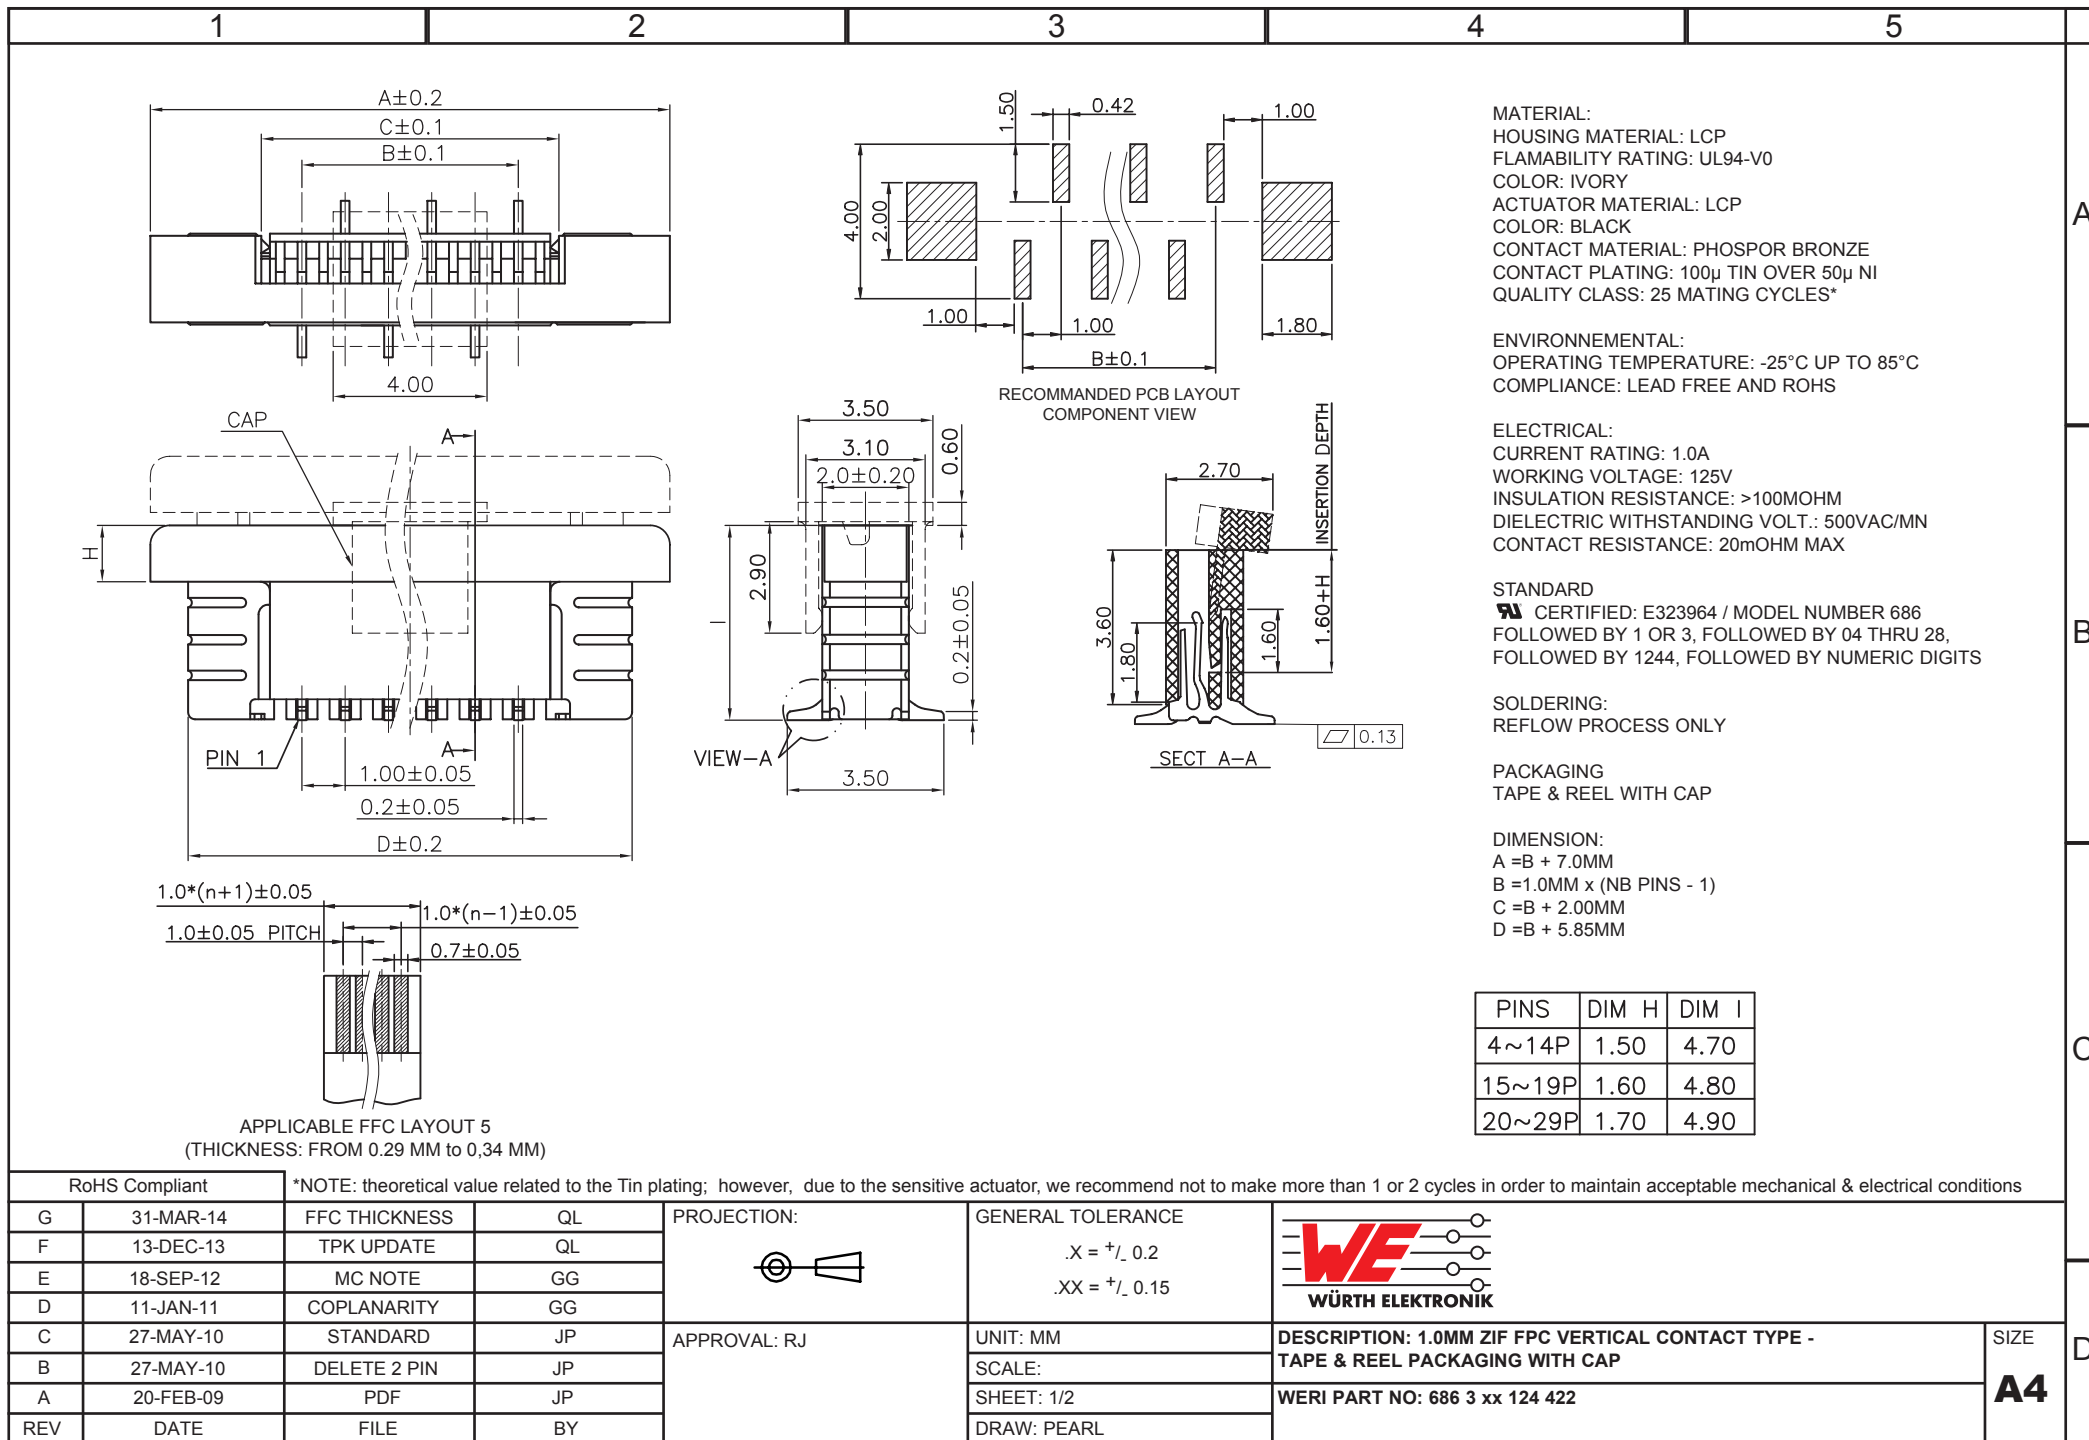


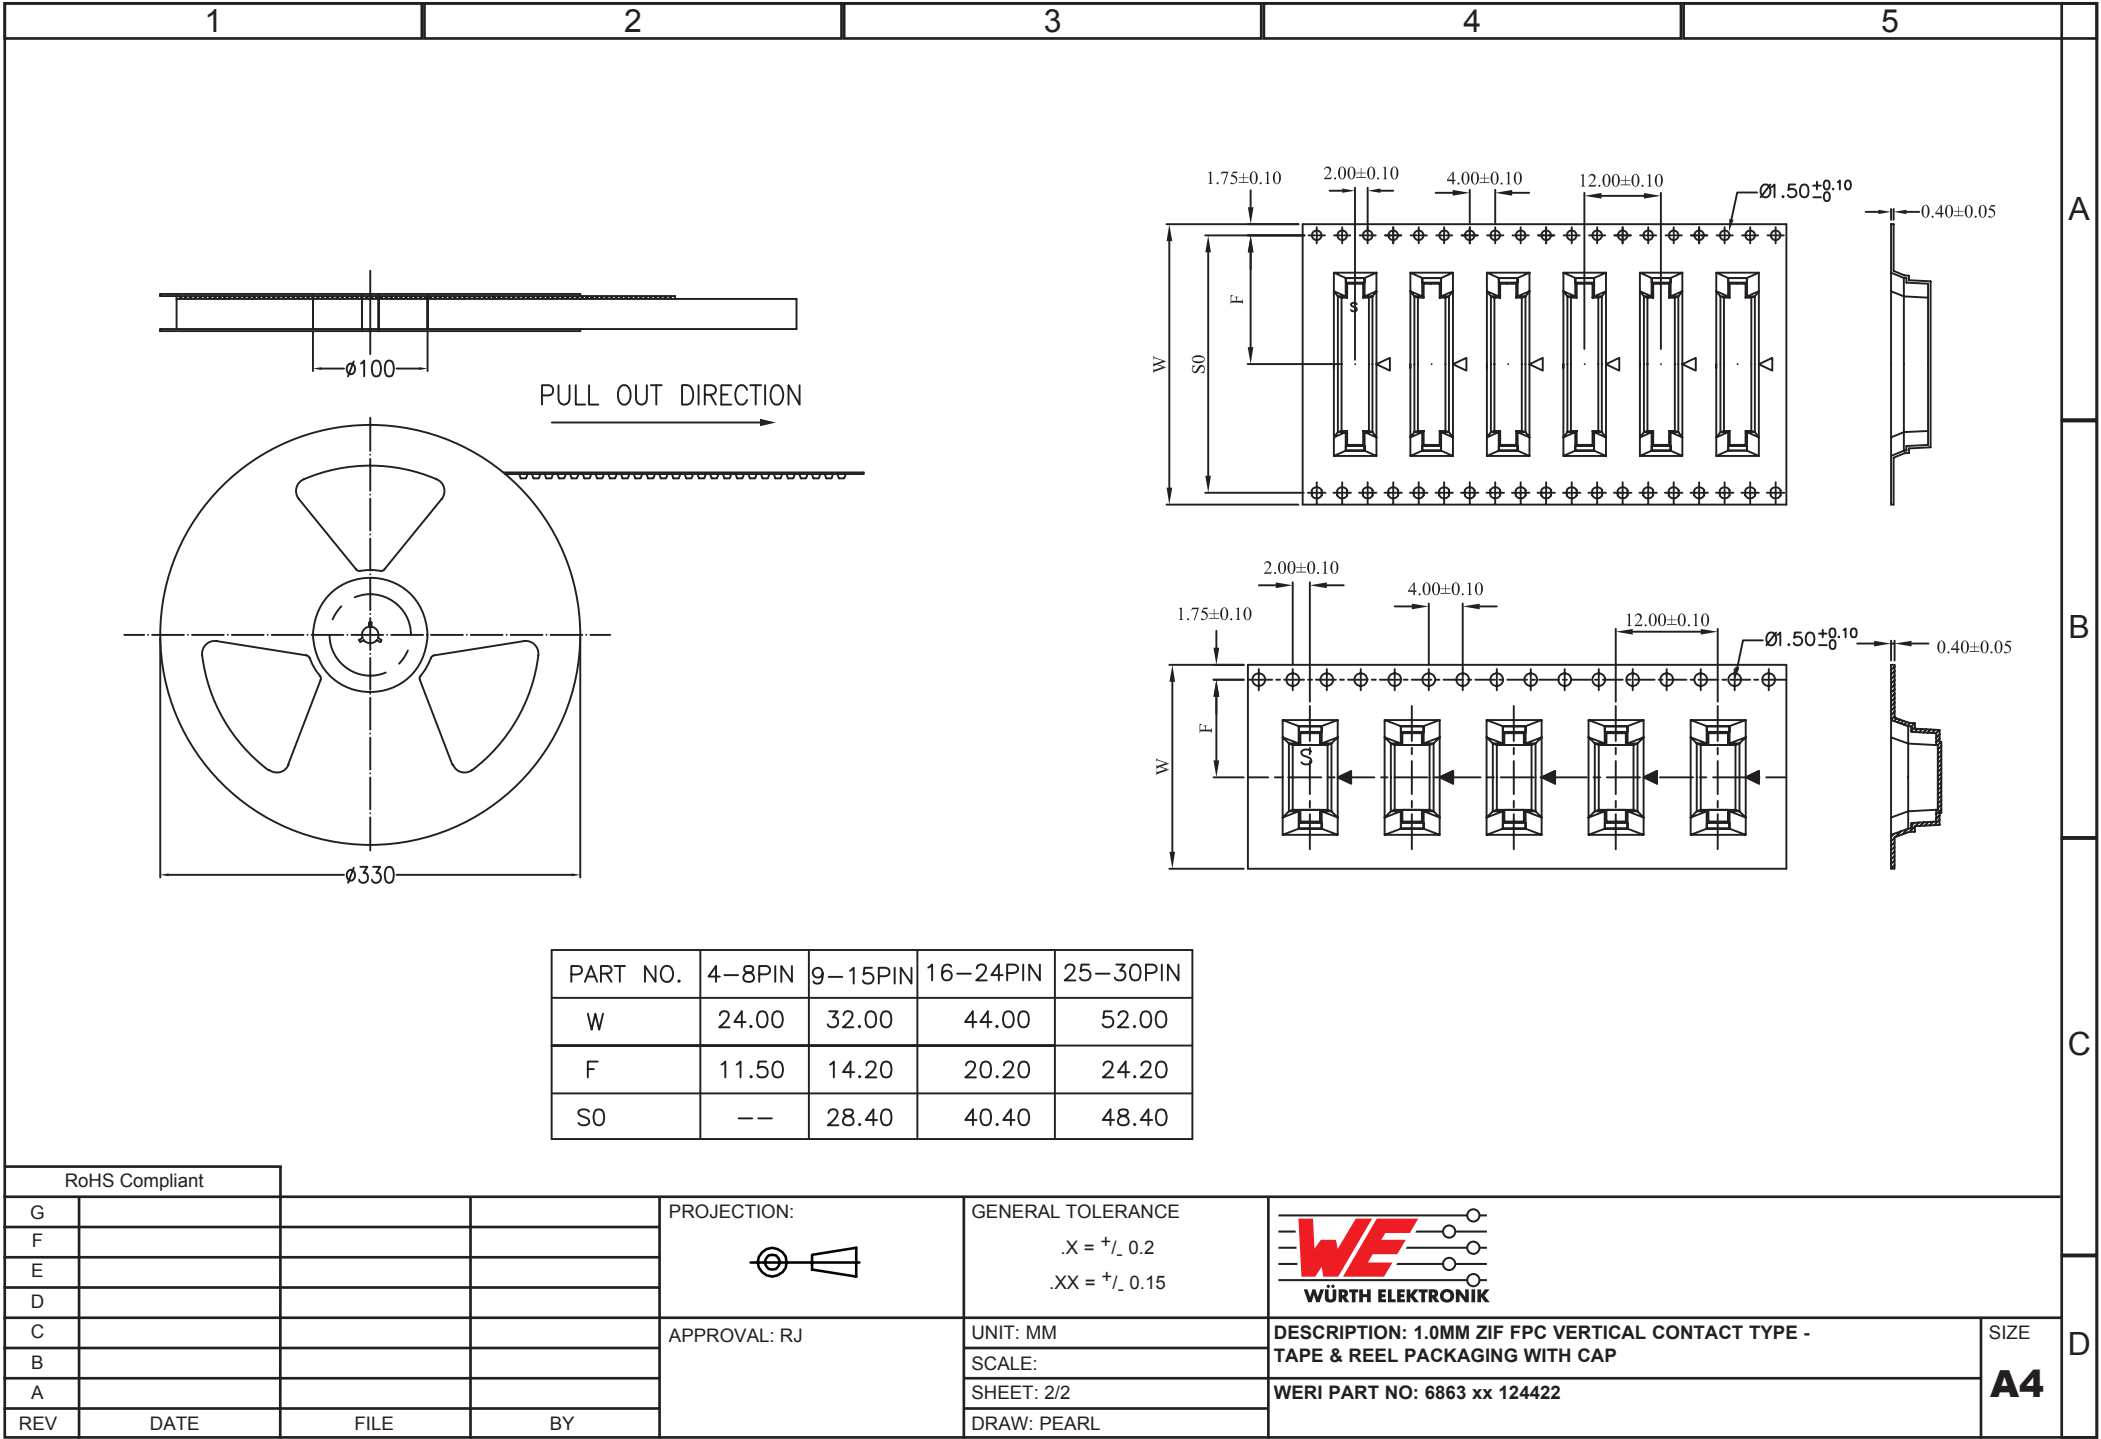

①

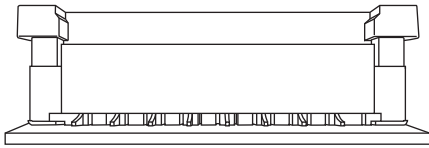


②

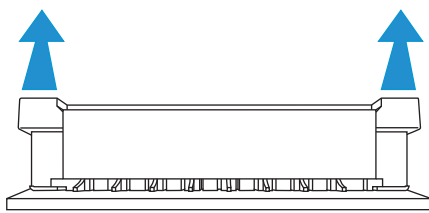


Pull the actuator upwards in the open position

Ⓐ

①

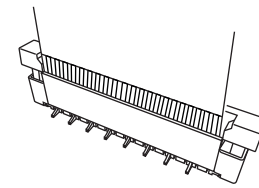

②

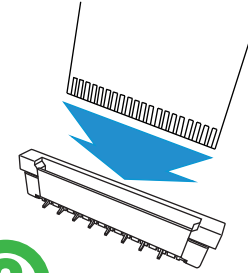


Insert the FFC cable vertically until the conductor almost disappears

Ⓑ




Press actuator in the middle to make there is no gap and the actuator is locked


①

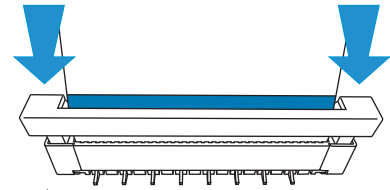



②

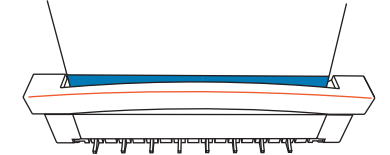

Press both ends of the actuator

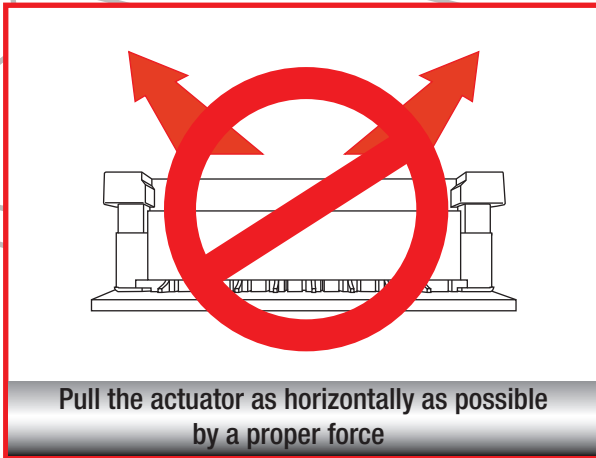

A

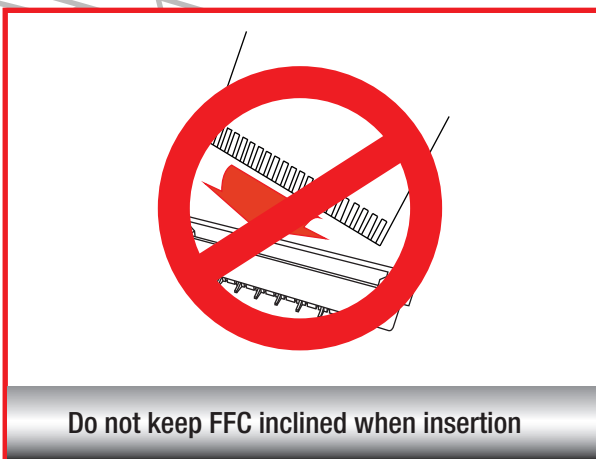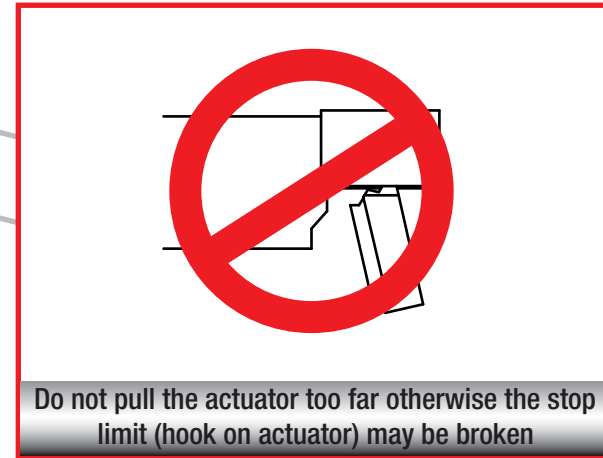

B

