LUCASEY MOUNTING SYSTEMS

APSLEADJ Adjustable Adhesive Adaptor for SLE Furniture Mounts

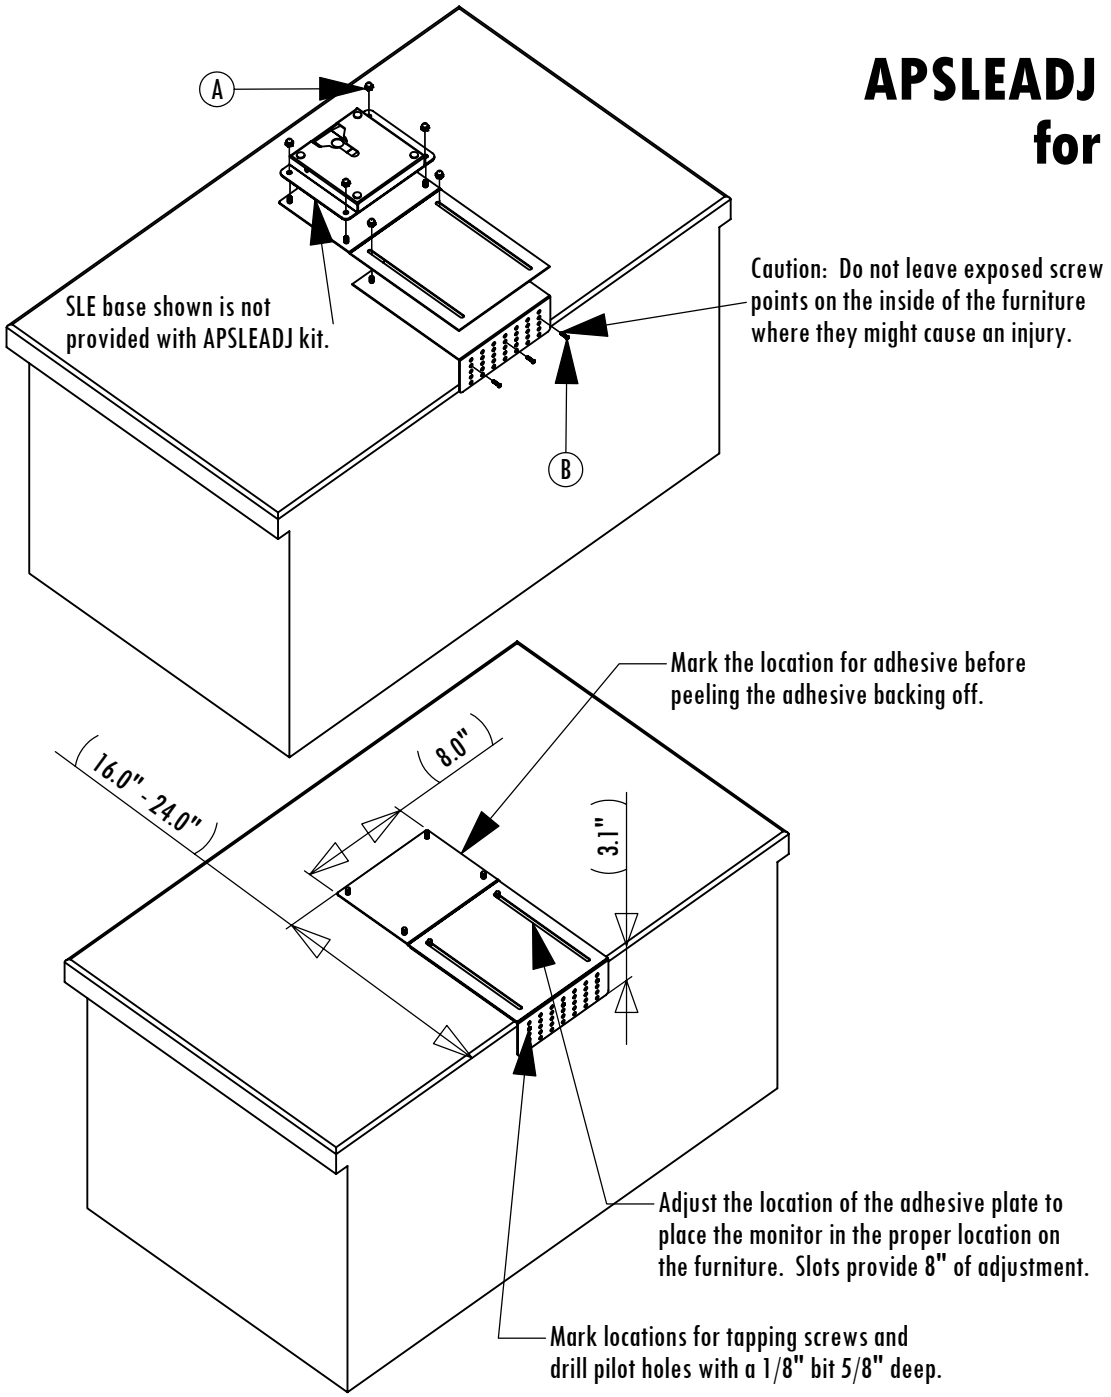

1. Determine the best permanent viewing location on the furniture for your monitor. Mark the location for the SLE base and APSLEADJ.
2. Place the APSLEADJ flush with the back of the furniture. (If the back of the furniture can not be placed flush against the plate, you may need to add shims or wood blocks.)
3. Attach the SLE Base to the APSLEADJ with four of the acorn nuts (A).
4. After adjusting the studs and slots on the two APSLEADJ plates, attach the plates together with two of the acorn nuts (A).
5. Mark the locations for the three screw holes on the back of the furniture.
6. Drill 1/8" pilot holes that are 5/8" deep in the marked locations for the tapping screws.
7. Use rubbing alcohol (C) to clean the furniture surface where the adhesive pad will be placed.
8. Peel the adhesive backing and carefully place where you previously marked. (Important! The adhesive can not be removed easily once placed.)
9. Apply pressure on the adhesive for ten seconds.
10. Attach the back plate to the furniture using the provided screws (B).

Hardware List

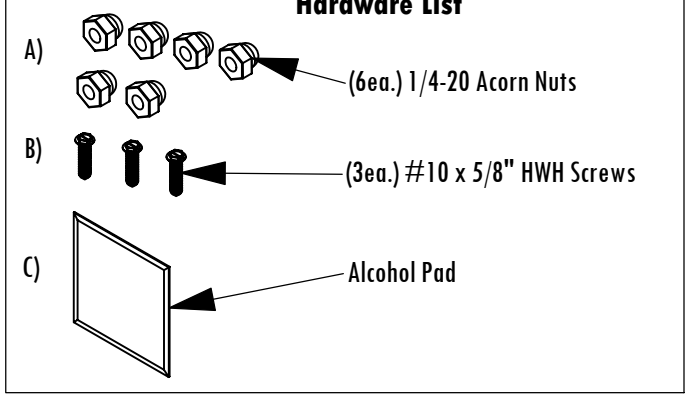

Protected under one or more of these U.S. Patent numbers: 3,291,432 3,559,942 3,724,798 DES.270,689 4,613,109 4,878,645 4,852,842 DES.309,5024,973,023 5,169,114 5,255,884 5,310,152 5,522,576 5,621,614 Re.35,677 DES.398,834 5,826,384 5,941,492 5,964,068 6,060,661 6,102,398 6,158,704 6,454,116B1 6,761,276B2 6,806,425B1

©2005 Lucasey Manufacturing Corporation, Oakland, California