

Download 'IVY' App from Play Store or App store. Sign up for new account using email address and phone number. Click on the link received in email to verify your account. Then login to IVY.

After logging in, you will see Manage Devices page. Click on '+' sign in bottom right corner to go to Scanning Device page.







Tap IVY device one time (you will feel vibration). Click on IVY on this page. Add Name and Picture, and click on Save.




Your IVY will be added on Manage Devices page. The diamond icon on the right side shows if IVY is connected or not. It shows disconnected in this screen. Top right corner shows Notifications received by you.

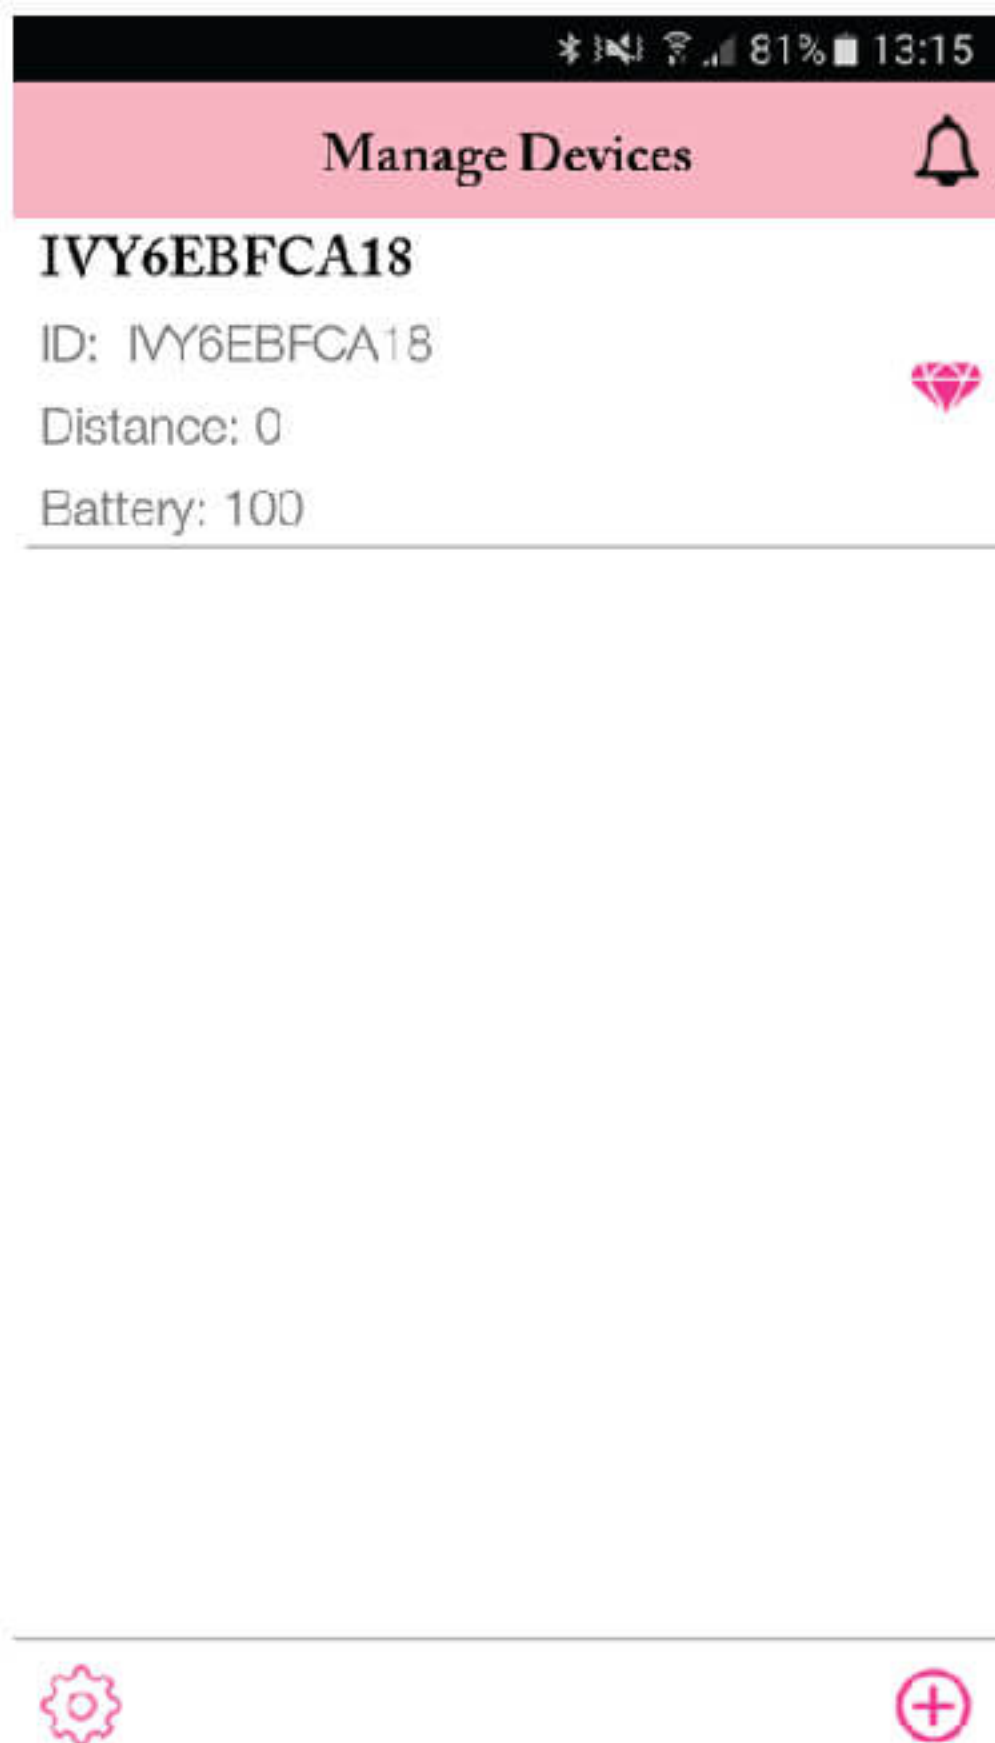


After adding IVY to Manage Devices page, tap on IVY device one more time to connect. After 10 to 20 seconds, the icon on the right side will highlight which means IVY is already connected to App. It shows connected in this screen.

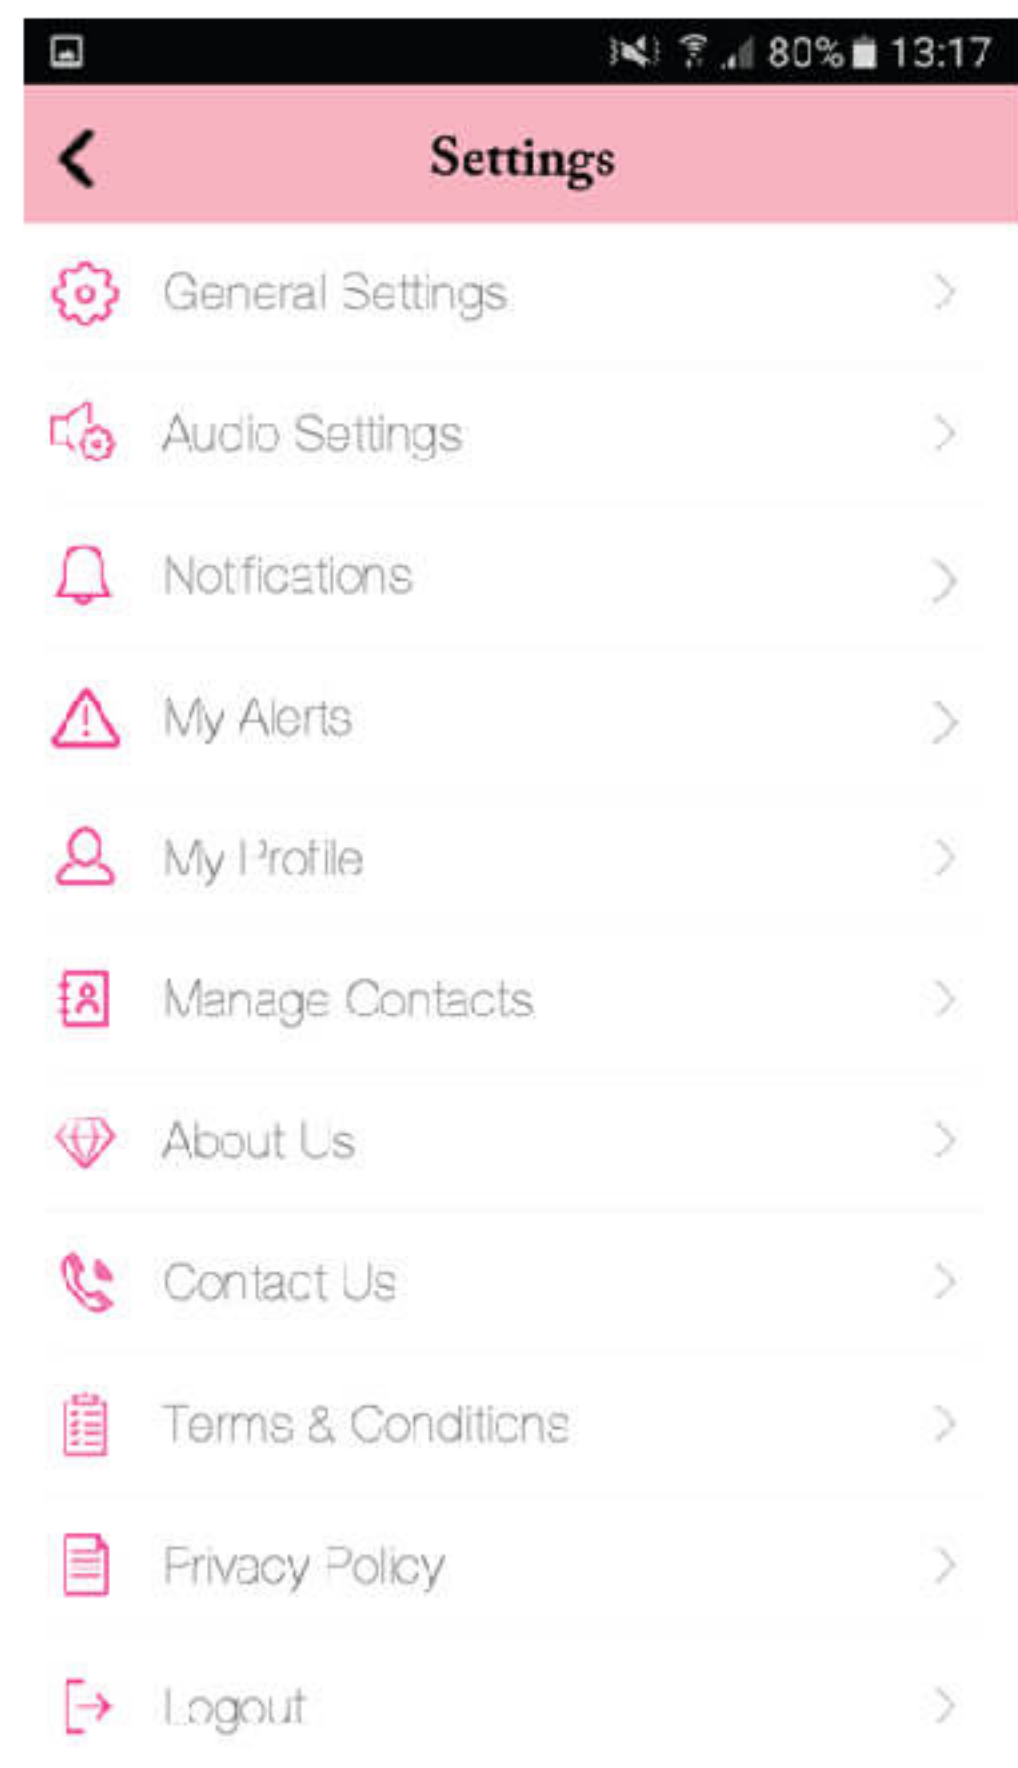

The icon in the bottom left corner of Manage Devices page will take you to settings. You can change password in my profile. My Alerts are alerts sent by you to your Guardians. Notifications are notifications received by you in IVY App.

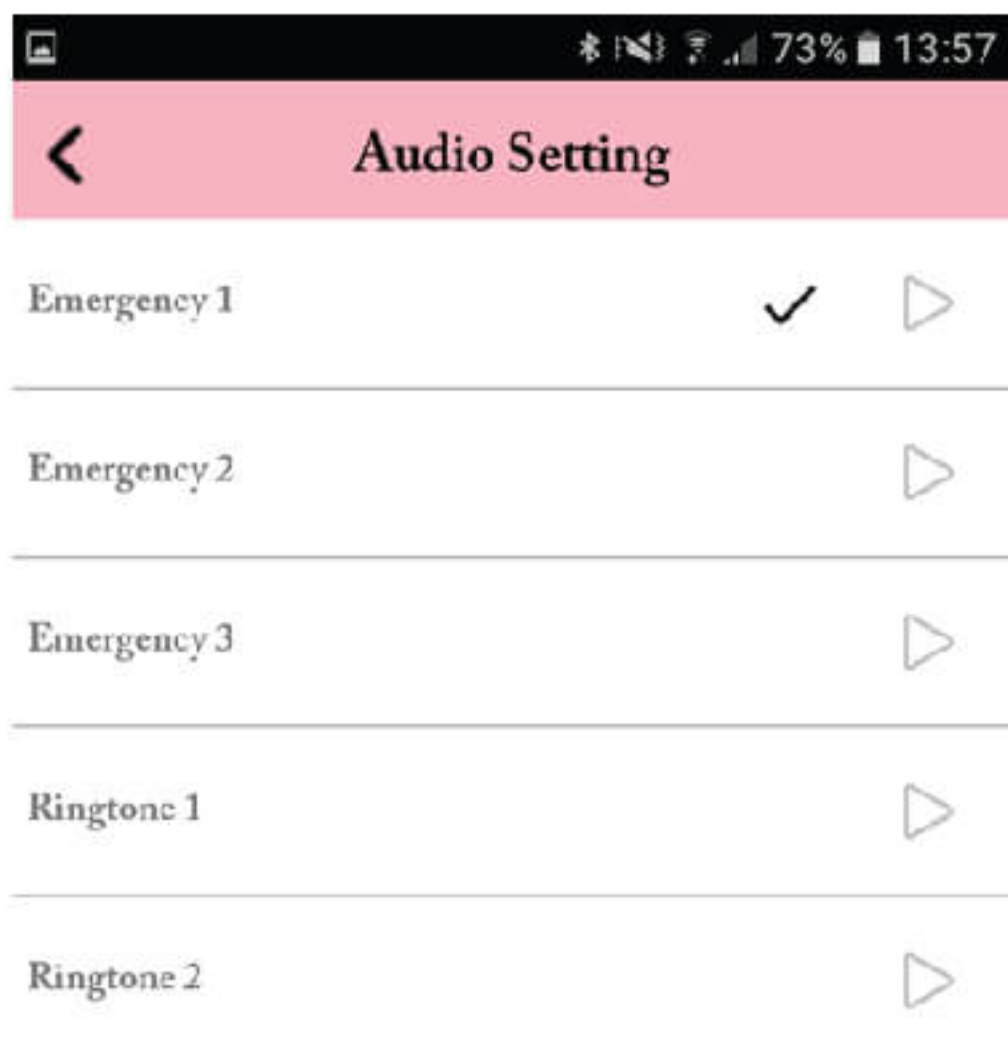


Click on Audio Settings to change the Alarm type (tapping IVY 2 times). There are 3 emergency alarms and 2 ringtones to choose from. Click on play icon to listen. Click anywhere on the left to select.

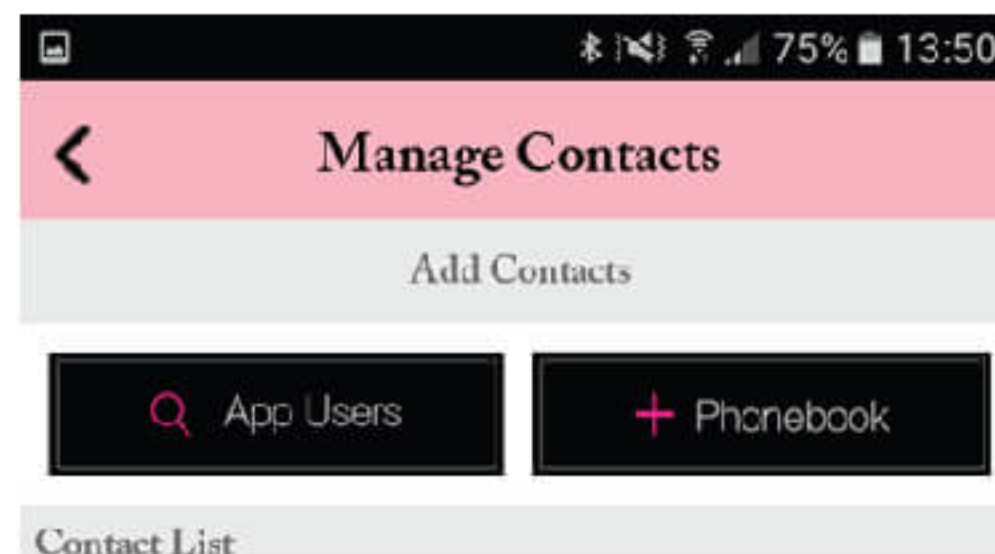


No record found.


Click on Manage Contacts to Add/Remove Guardians. You can add 2 types of Guardians – App users and Phonebook users.

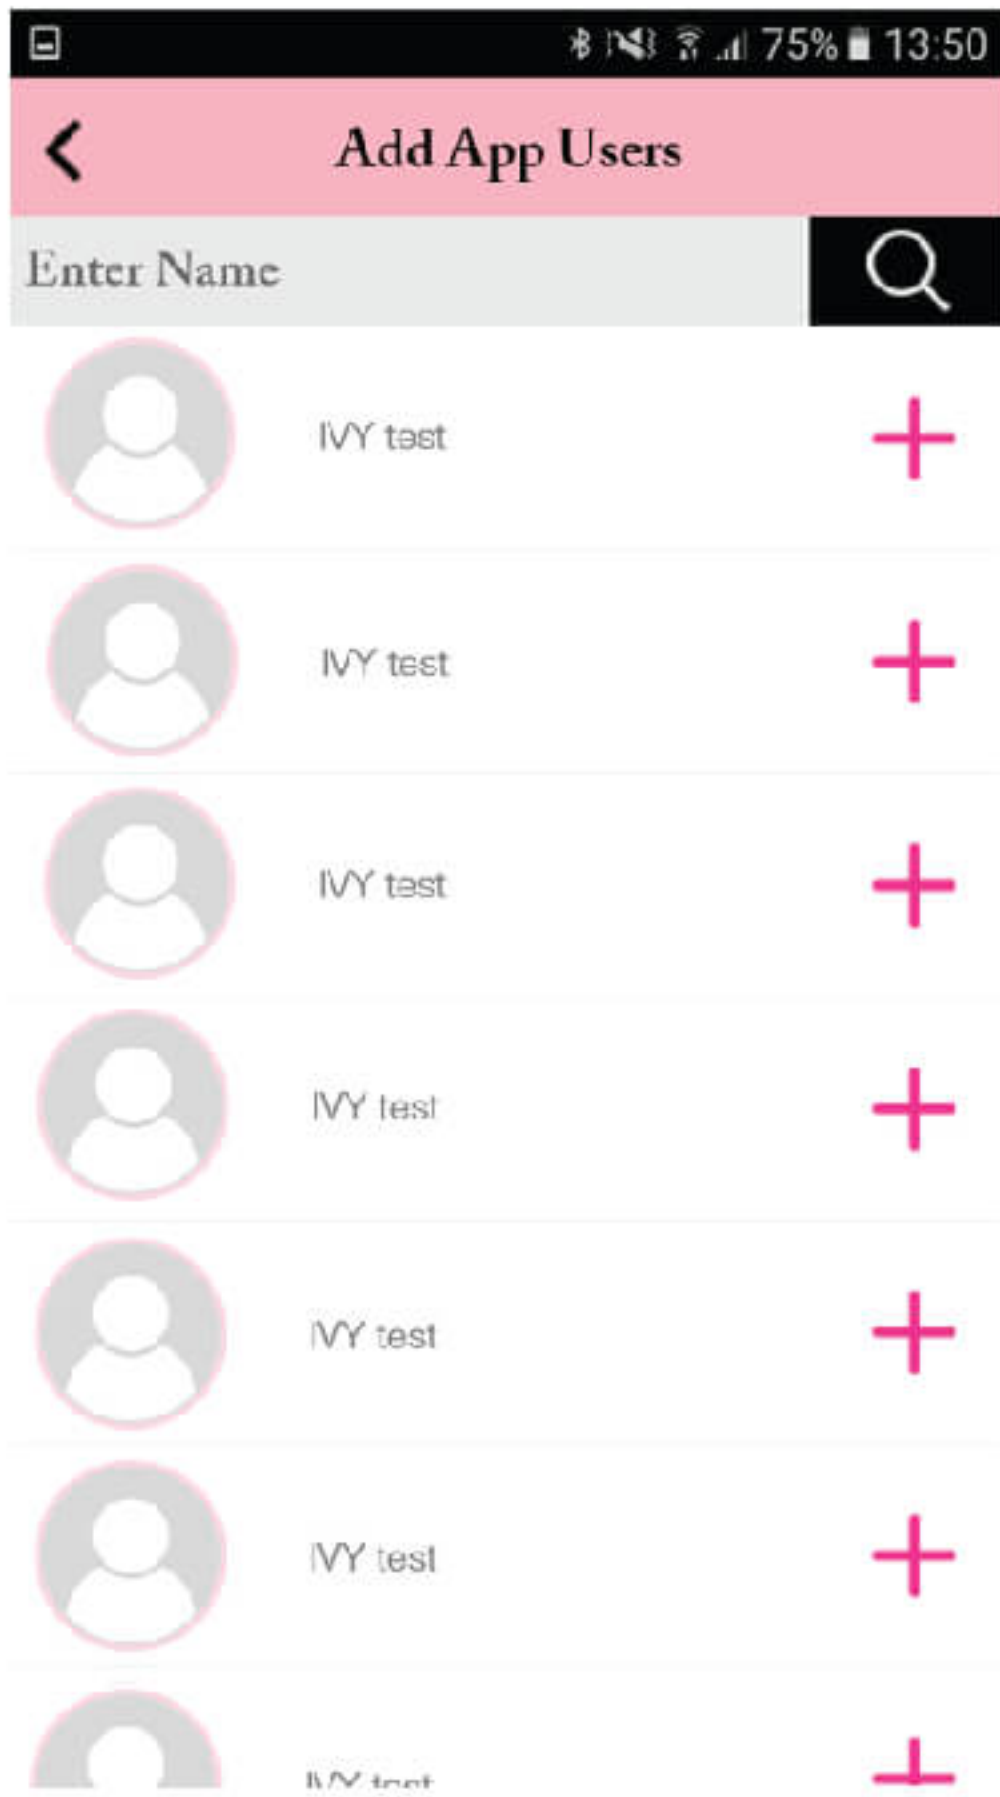


In Phonebook users list, you can search for any user on the top. If you want to add as Guardian, click on '+' icon next to the contact. If that contact doesn't have IVY App installed in the phone, SMS will be sent to notify the user.

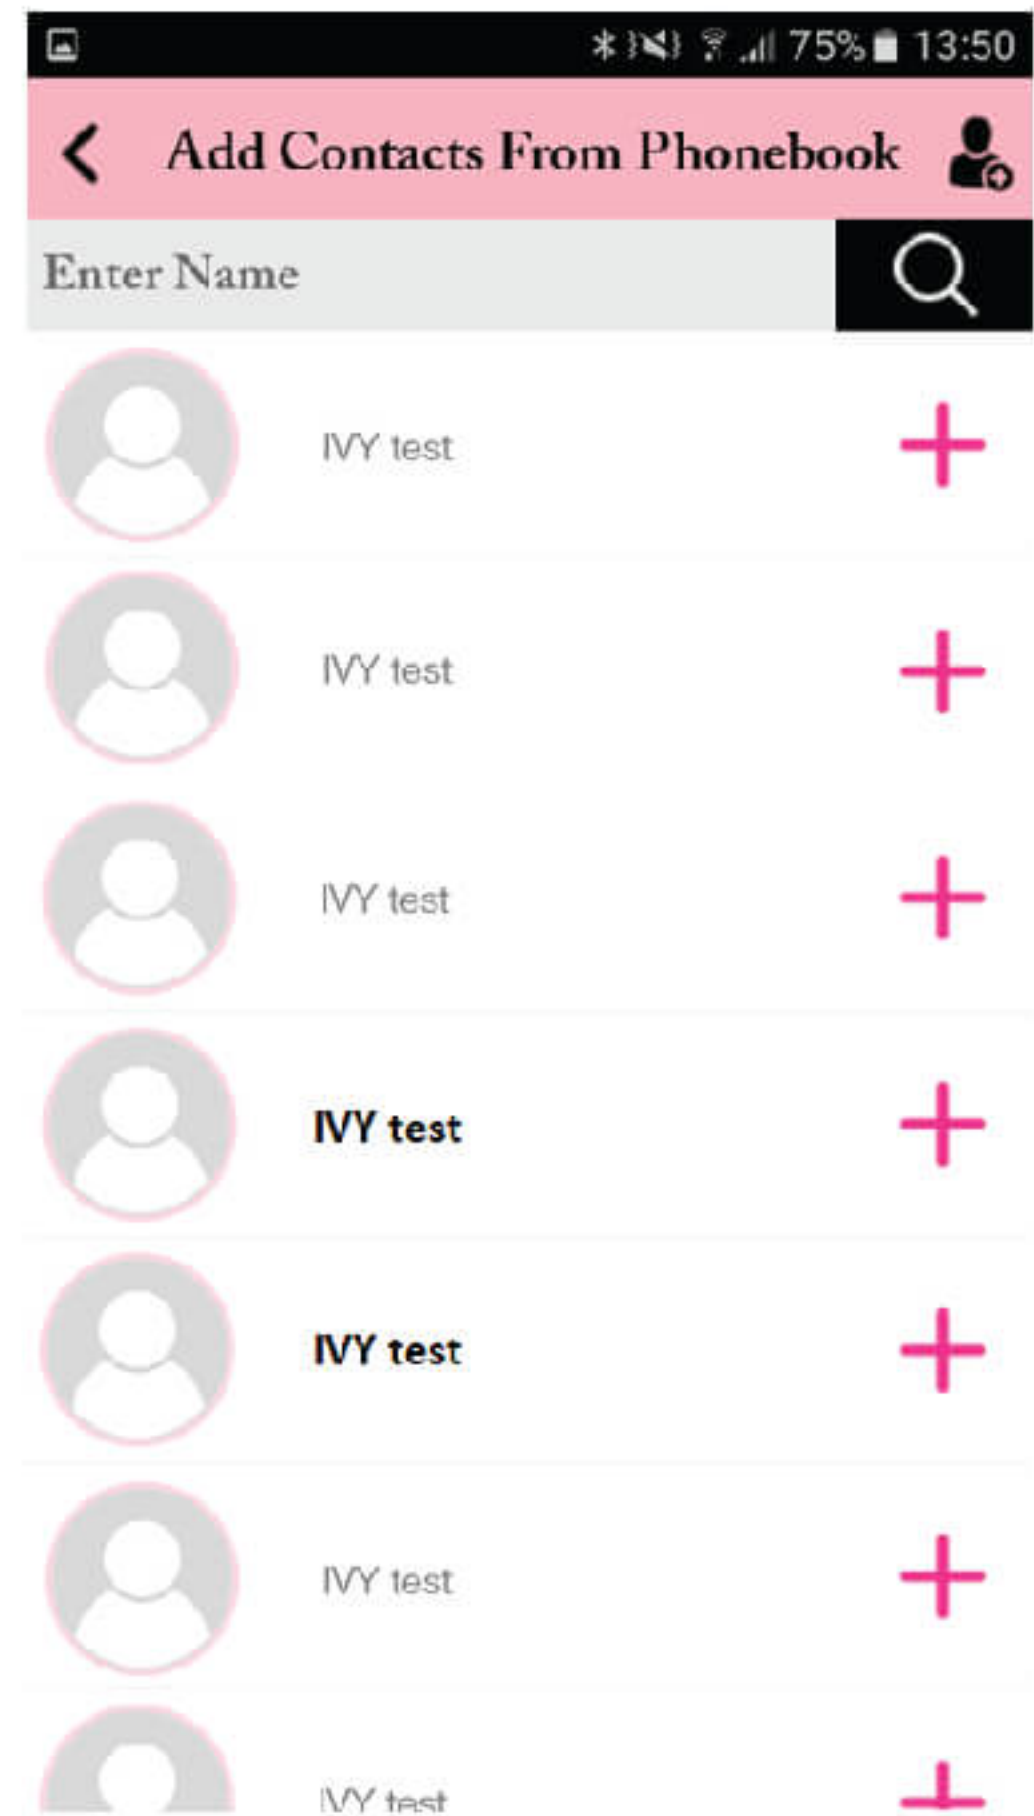


App users are users who have the IVY App installed. They are sorted by vicinity; meaning nearest App users will appear on top. You can search for any user on the top. If you want to add as Guardian, click on '+' icon next to the contact. Highlighted App users are Guardians tested and recommended by IVY team.

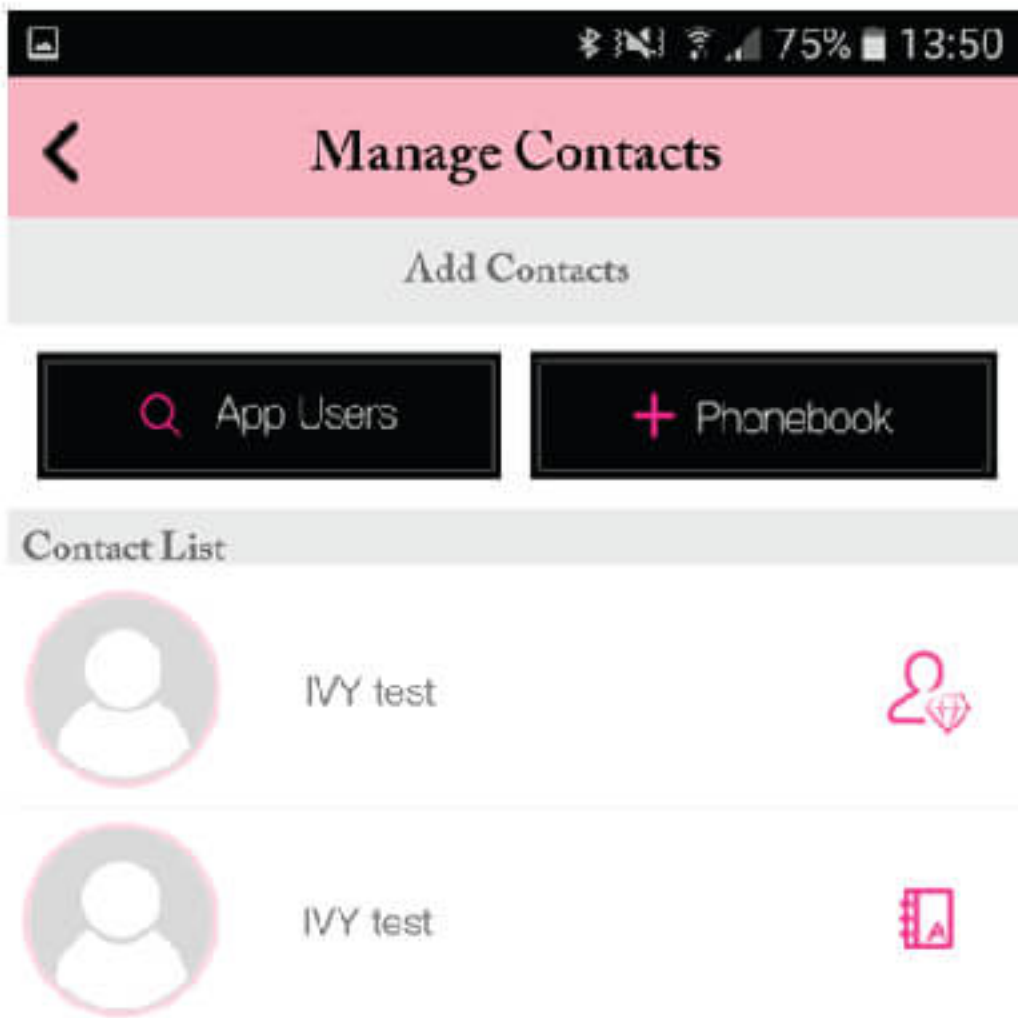


Added Guardians can be seen on Manage Contacts screen. The icons on the right show whether contact is App user or Phonebook user. Long press on any Guardian gives option to delete. Clicking on any Phonebook user gives option to make that Guardian default Guardian for emergency calling (tapping IVY 4 times).

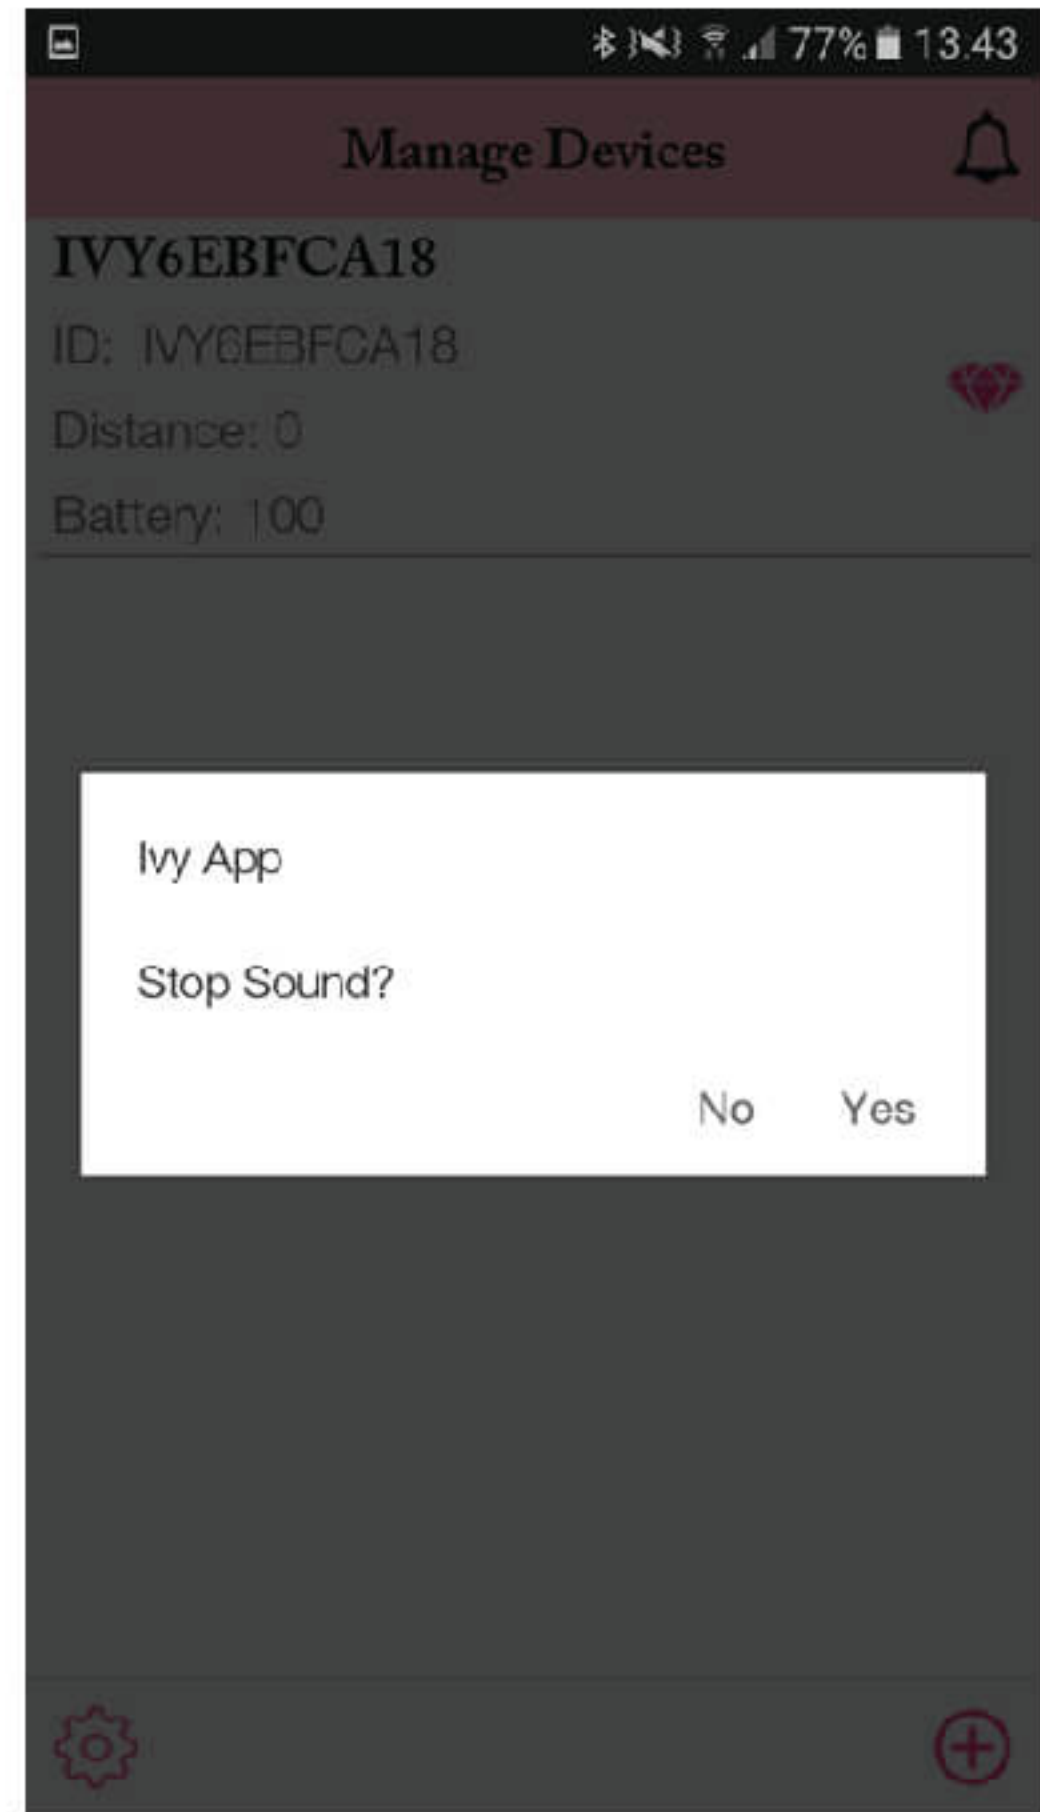


When you tap IVY 2 times (you will feel 2 vibrations), phone will play loud alarm for 5 to 15 seconds. You can stop the alarm from phone.

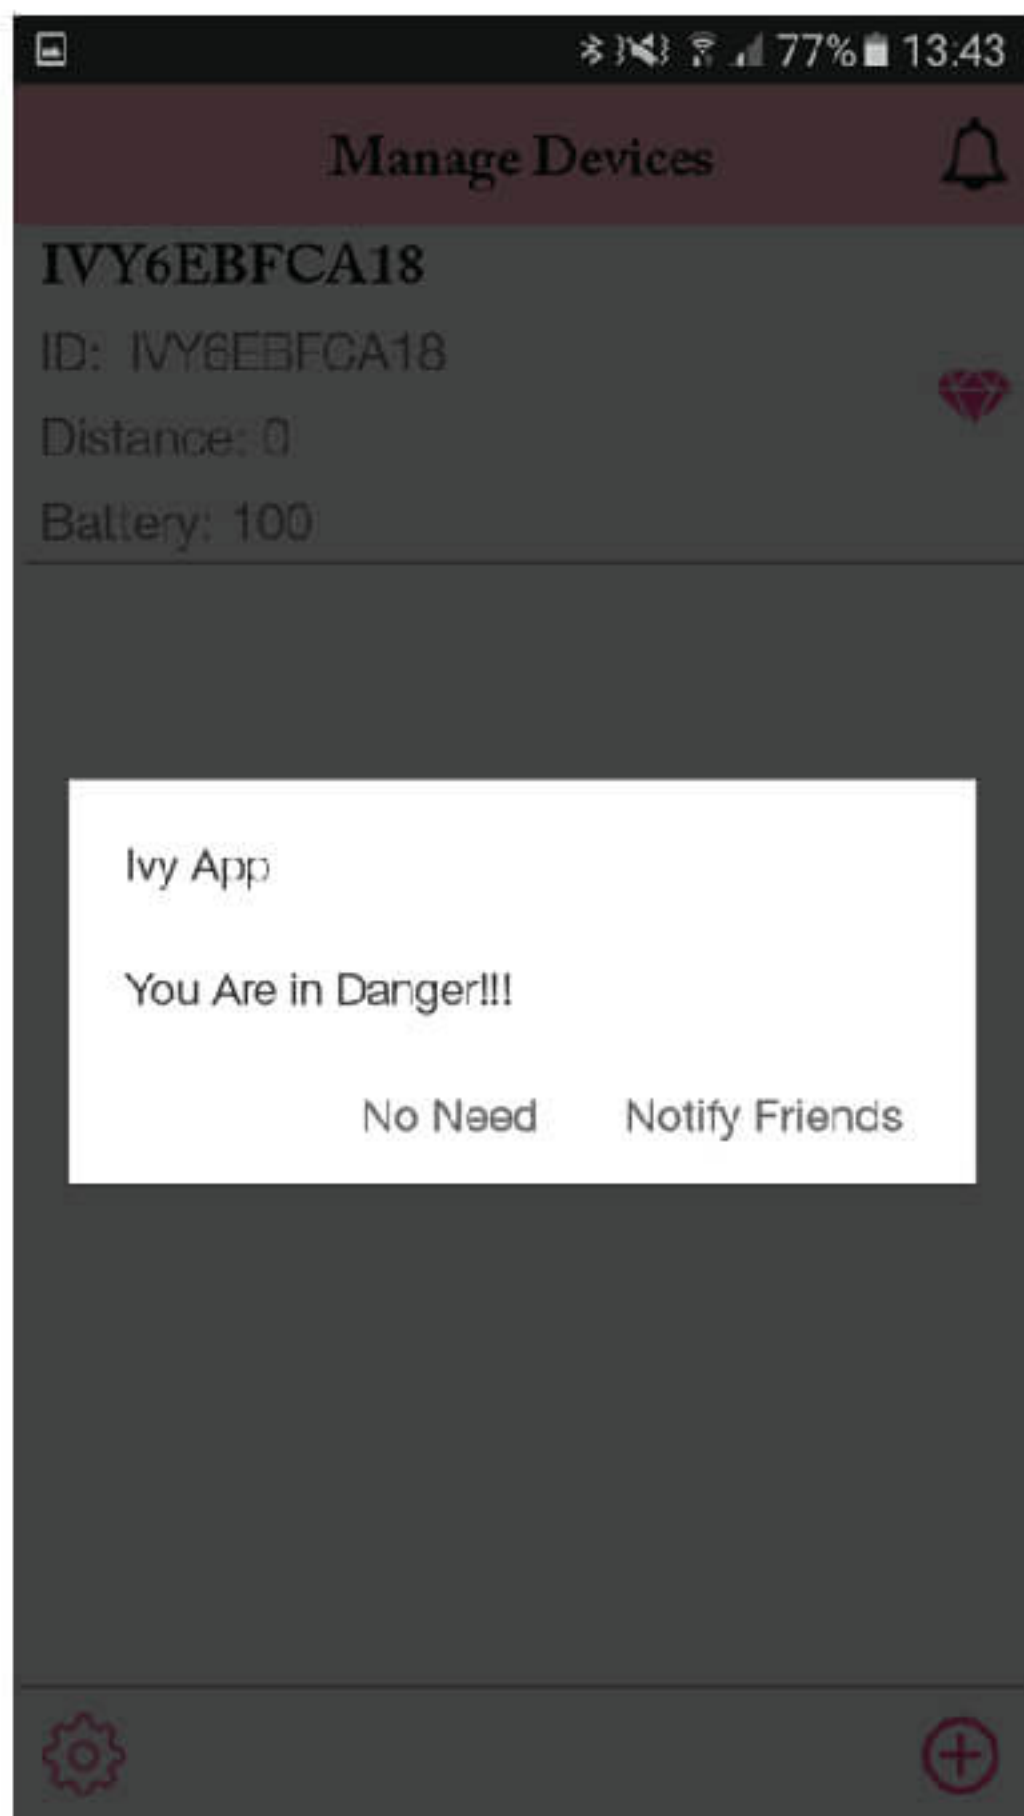


When you tap IVY 3 times (you will feel 3 vibrations), phone will give 5 seconds to cancel before sending SOS message to Guardians. If you don't cancel, phone will record 5 seconds of audio recording and send it together with your GPS location to Guardians.

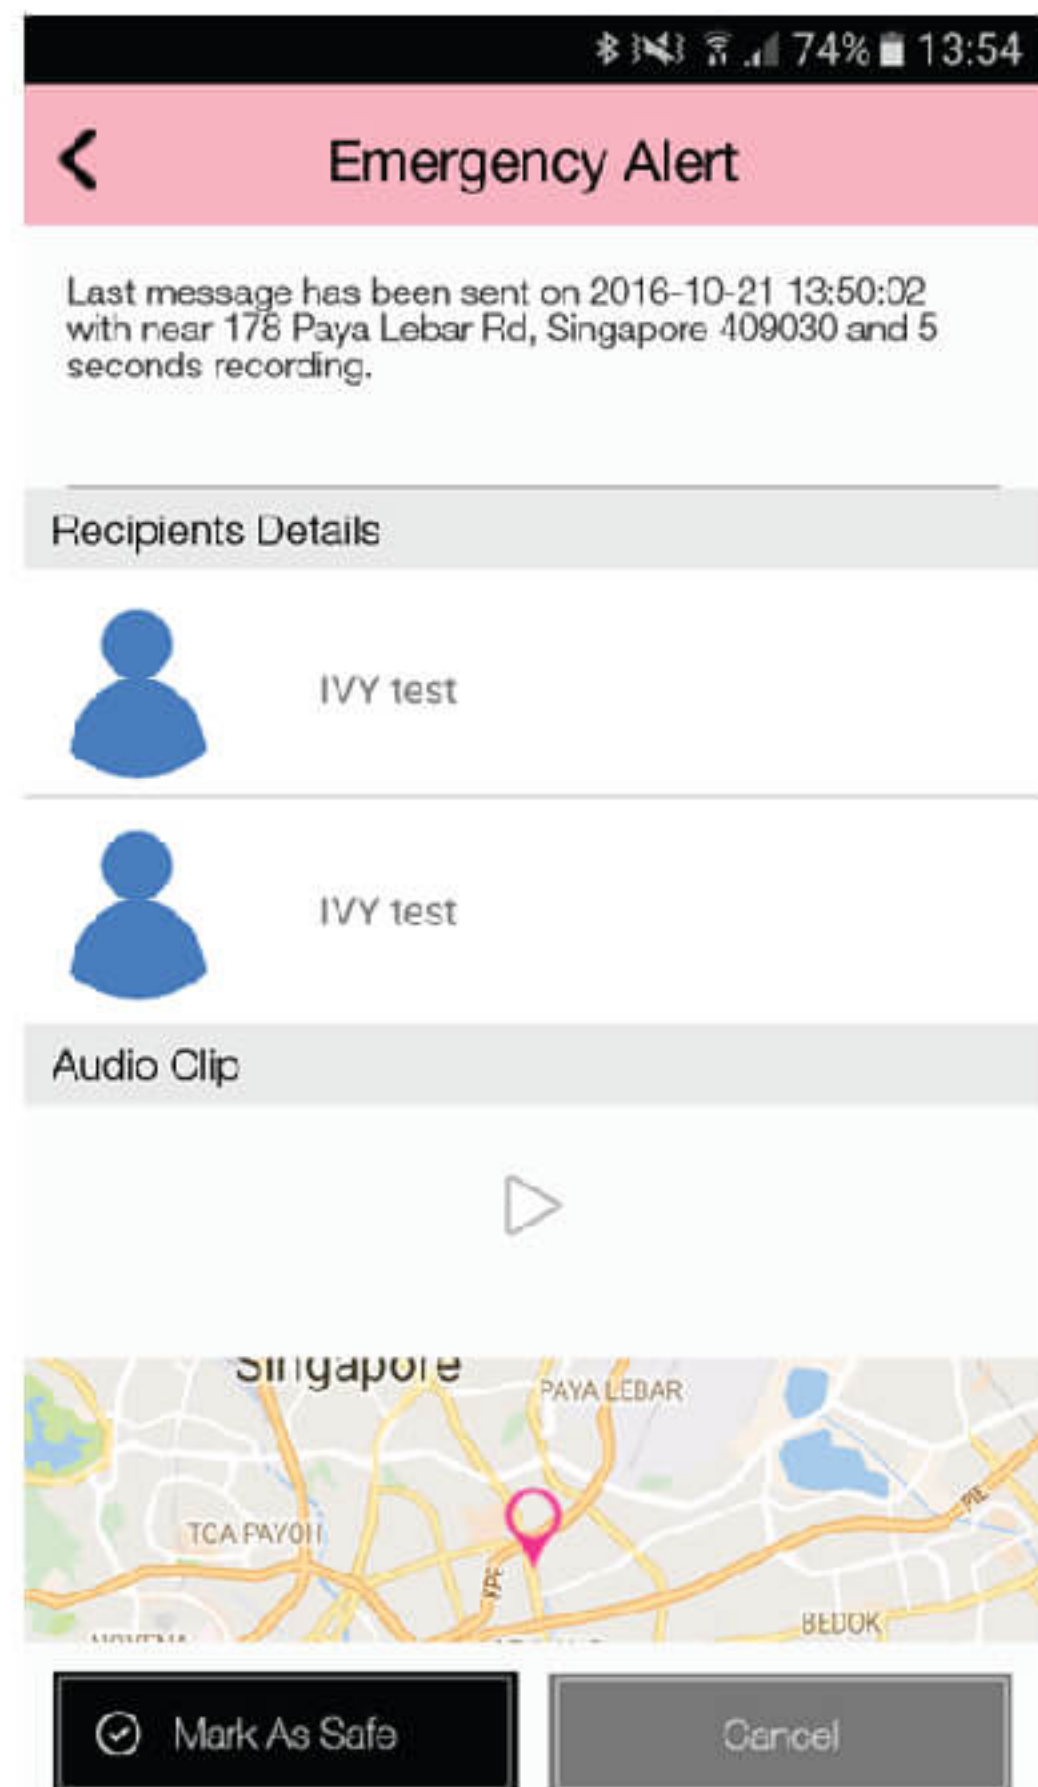

You will be able to see the SOS message that you sent to Guardians. You can also see the list of Guardians you sent the SOS message to. You can Mark yourself as Safe here to notify Guardians.

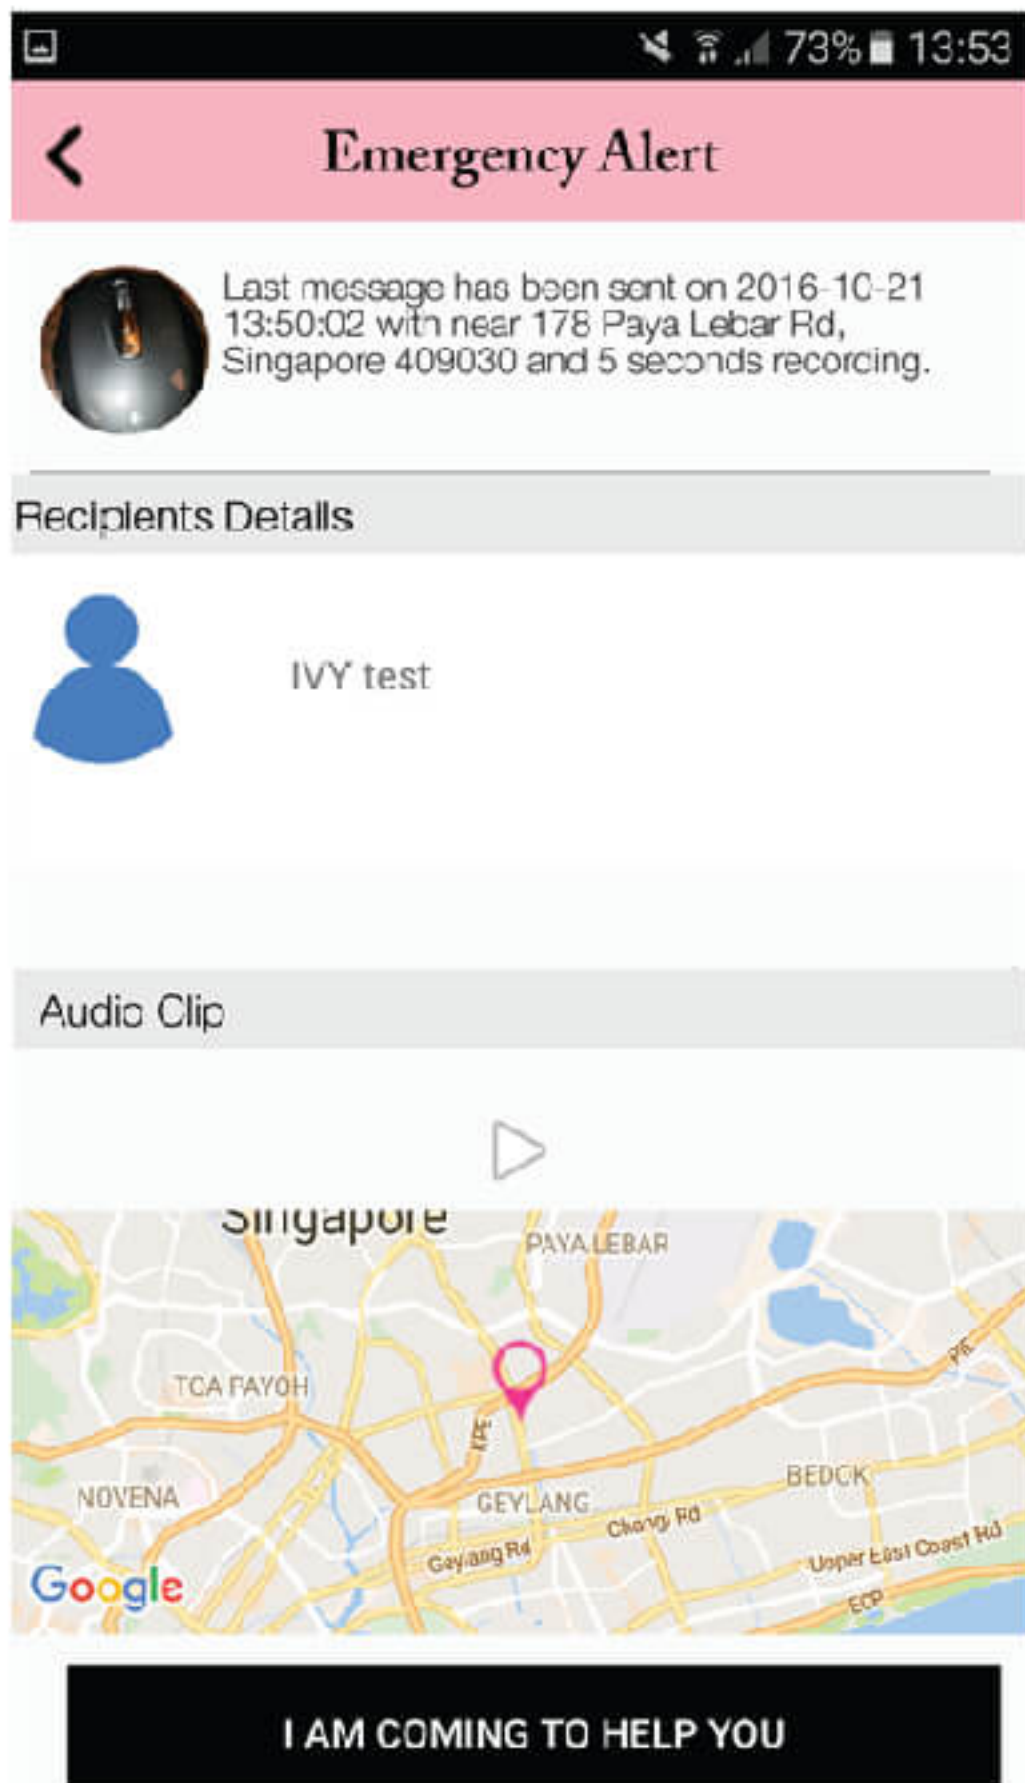

Your Guardians will receive this SOS message. In case they don't have App installed, they will receive SMS with a website link to this SOS message. Guardians will be able to click on 'I am coming to help you' which will send notification with vibration to your phone. Guardians will also be able to see other Guardians who have received this SOS message.

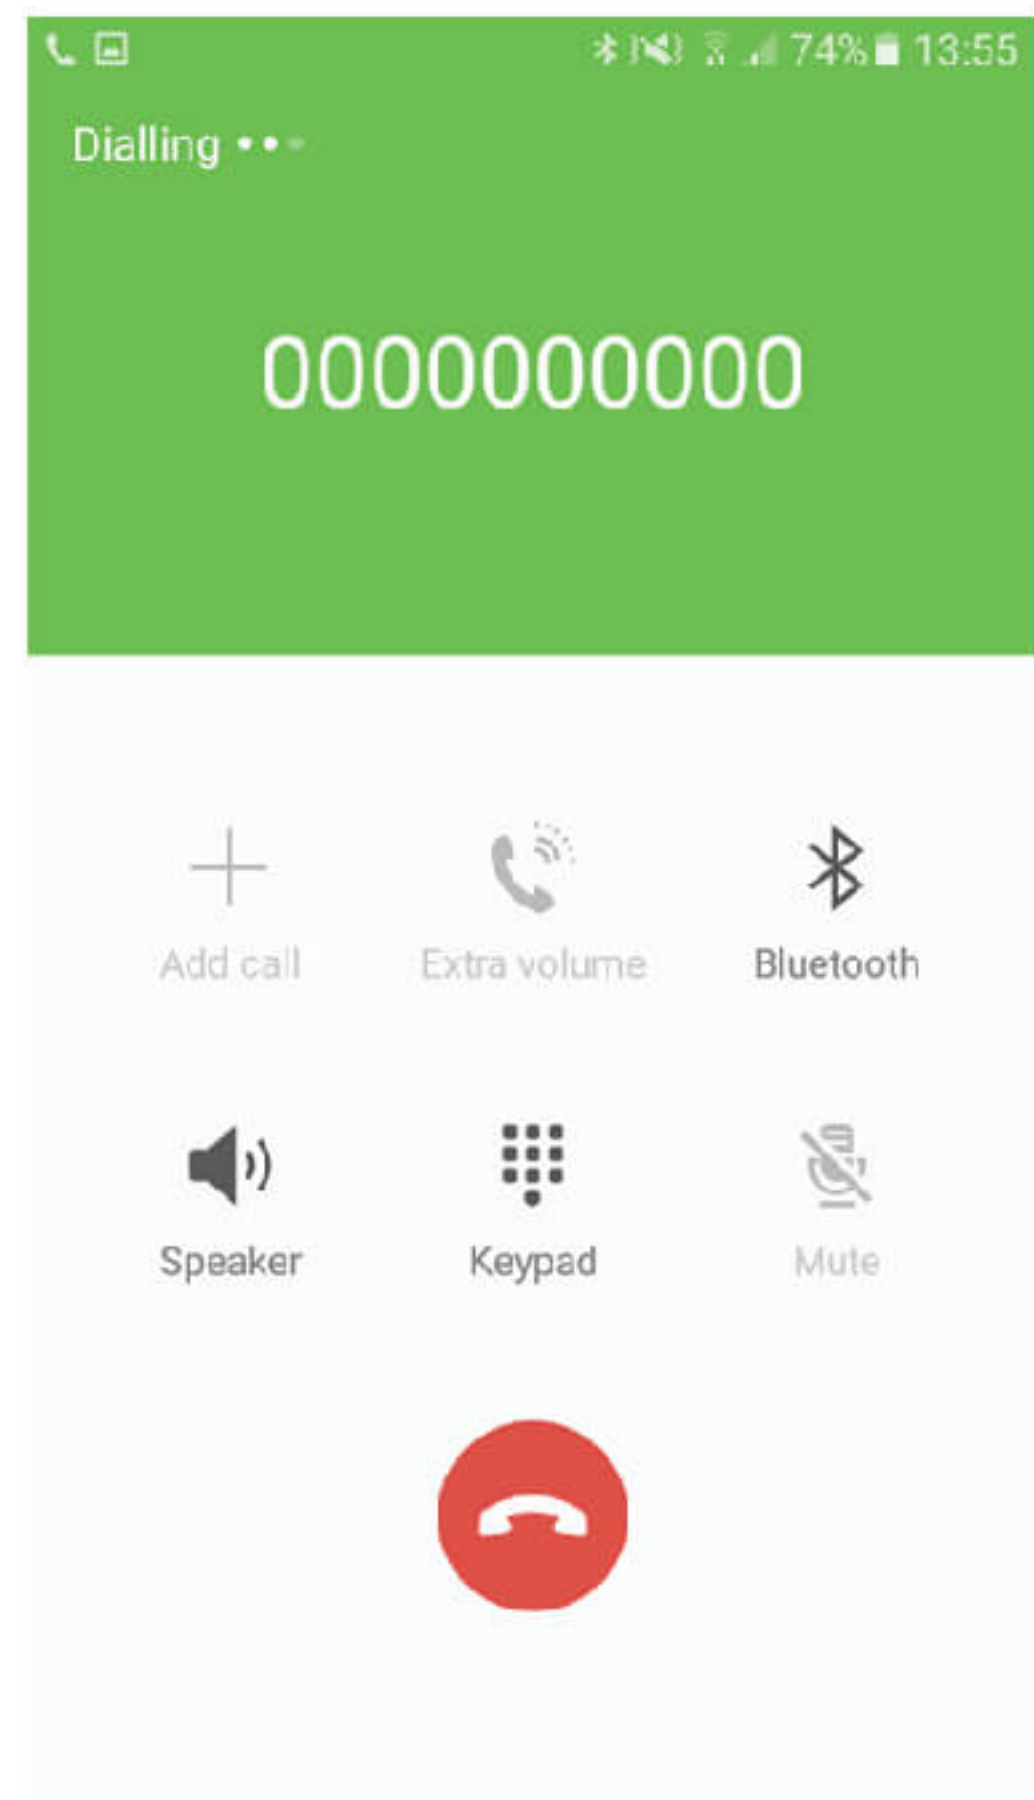

When you Tap IVY 4 times (you will feel 4 vibrations), phone will automatically call default Guardian as chosen in Manage Contacts screen.