

# ***TMS320VC5502 EVM***

*Technical  
Reference*



# TMS320VC5502 EVM Technical Reference

506665-0001 Rev. A  
May 2003

**SPECTRUM DIGITAL, INC.**  
**12502 Exchange Drive, Suite 440 Stafford, TX. 77477**  
**Tel: 281.494.4505 Fax: 281.494.5310**  
**sales@spectrumdigital.com www.spectrumdigital.com**

### **IMPORTANT NOTICE**

Spectrum Digital, Inc. reserves the right to make changes to its products or to discontinue any product or service without notice. Customers are advised to obtain the latest version of relevant information to verify that the data being relied on is current before placing orders.

Spectrum Digital, Inc. warrants performance of its products and related software to current specifications in accordance with Spectrum Digital's standard warranty. Testing and other quality control techniques are utilized to the extent deemed necessary to support this warranty.

Please be aware that the products described herein are not intended for use in life-support appliances, devices, or systems. Spectrum Digital does not warrant nor is Spectrum Digital liable for the product described herein to be used in other than a development environment.

Spectrum Digital, Inc. assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein. Nor does Spectrum Digital warrant or represent any license, either express or implied, is granted under any patent right, copyright, or other intellectual property right of Spectrum Digital, Inc. covering or relating to any combination, machine, or process in which such Digital Signal Processing development products or services might be or are used.

### **WARNING**

This equipment is intended for use in a laboratory test environment only. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to subpart J of part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures necessary to correct this interference.

# Contents

---

---

<b>1</b>	<b>Introduction to the TMS320VC5502 EVM Module</b> .....	<b>1-1</b>
	<i>Provides you with a description of the TMS320VC5502 EVM Module, key features, and block diagram.</i>	
1.1	Key Features .....	1-2
1.2	Functional Overview .....	1-3
1.3	Basic Operation .....	1-4
1.4	Memory Map .....	1-5
1.5	Jumper Settings .....	1-6
1.6	Power Supply .....	1-8
<b>2</b>	<b>Board Components</b> .....	<b>2-1</b>
	<i>Describes the operation of the major board components on the TMS320VC5502 EVM.</i>	
2.1	CPLD (programmable Logic) .....	2-2
2.1.1	CPLD Overview .....	2-2
2.1.2	CPLD Registers .....	2-3
2.1.3	USER_REG Register .....	2-4
2.1.4	DC_REG Register .....	2-4
2.1.5	Version Register .....	2-5
2.1.6	MISC Register .....	2-5
2.1.7	LCD Interface .....	2-7
2.1.8	VC5502 EVM Interface Register .....	2-8
2.2	AIC23 Codec .....	2-9
2.3	Synchronous Memory .....	2-10
2.4	Flash ROM Interface .....	2-10
2.5	SBRAM Memory .....	2-10
2.6	LEDs and DIP Switches .....	2-10
2.7	Daughter Card Interface .....	2-11
<b>3</b>	<b>Physical Specifications</b> .....	<b>3-1</b>
	<i>Describes the physical layout of the TMS320VC5502 EVM and its connectors.</i>	
3.1	TMS320VC5502 EVM Board Layout .....	3-2
3.1.1	Keypad/display Module Layout .....	3-3
3.2	Connector Index .....	3-4
3.3	Expansion Connectors .....	3-4
3.3.1	P1, Memory Expansion .....	3-5
3.3.2	P2, Peripheral Expansion .....	3-6
3.3.3	P3, HPI Expansion Connector .....	3-7
3.4	Audio Connectors .....	3-8
3.4.1	J1, Microphone Connector .....	3-8
3.4.2	J2, Audio Line In Connector .....	3-8
3.4.3	J3, Audio Line Out Connector .....	3-9
3.4.4	J4, Headphone Connector .....	3-9

3.5	Power Connectors	3-10
3.5.1	J5, +5V Main Power Connector	3-10
3.5.2	J6, Alternate Power Connector	3-10
3.6.	Miscellaneous Connectors	3-11
3.6.1	J8, RS-232 Connector	3-11
3.6.2	J7, External JTAG Connector	3-11
3.6.3	JP1, PLD Programming Connector	3-12
3.7	System LEDs	3-12
3.8	Reset Circuitry	3-12
<b>A</b>	<b>Schematics</b>	<b>A-1</b>
	<i>Contains the schematics for the TMS320VC5502 EVM and Keypad/display Module</i>	
A.1	TMS320VC5502 EVM Schematics	A-2
A.2	Keypad/display Module Schematics	A-23
<b>B</b>	<b>Mechanical Information</b>	<b>B-1</b>
	<i>Contains the mechanical information about the TMS320VC5502 EVM and Keypad/display Module</i>	
B.1	TMS320VC5502 EVM Mechanical Information	B-2
B.2	Keypad/display Module Mechanical Information	B-3

## About This Manual

This document describes the board level operations of the TMS320VC5502 Evaluation Module (EVM). The EVM is based on the Texas Instruments TMS320VC5502 Digital Signal Processor.

The TMS320VC5502 EVM is a table top card to allow engineers and software developers to evaluate certain characteristics of the TMS320VC5502 DSP to determine if the processor meets the designers application requirements. Evaluators can create software to execute onboard or expand the system in a variety of ways.

## Notational Conventions

This document uses the following conventions.

The TMS320VC5502 will sometimes be referred to as the C55XX.

The TMS320VC5502 EVM will sometimes be referred to as the EVM.

Program listings, program examples, and interactive displays are shown in a special italic typeface. Here is a sample program listing.

```
equations  
!rd = !strobe&rw;
```

## Information About Cautions

This book may contain cautions.

***This is an example of a caution statement.***

A caution statement describes a situation that could potentially damage your software, or hardware, or other equipment. The information in a caution is provided for your protection. Please read each caution carefully.

## Related Documents

Texas Instruments TMS320VC55XX DSP CPU Reference Guide  
Texas Instruments TMS320VC55XX DSP Peripherals Reference Guide

**Table 1: Hardware History**

Revision	History
A	Alpha Release

**Table 2: Manual History**

Revision	History
A	Alpha Release

# Chapter 1

## Introduction to the TMS320VC5502 EVM

---

---

---

Chapter One provides a description of the TMS320VC5502 EVM along with the key features and a block diagram of the circuit board.

<b>Topic</b>	<b>Page</b>
1.1 Key Features	1-2
1.2 Functional Overview	1-3
1.3 Display/Keypad Overview	1-4
1.4 Basic Operation	1-4
1.5 Memory Map	1-5
1.6 Jumper Settings	1-6
1.7 Emif Clock Select	1-7
1.8 Power Supply	1-8

### 1.0 Key Features

The 5502 EVM is a standalone development platform that enables users to evaluate and develop applications for the TI C55XX DSP family. The EVM also serves as a hardware reference design for the TMS320VC5502 DSP. Schematics, logic equations and application notes are available to ease hardware development and reduce time to market.

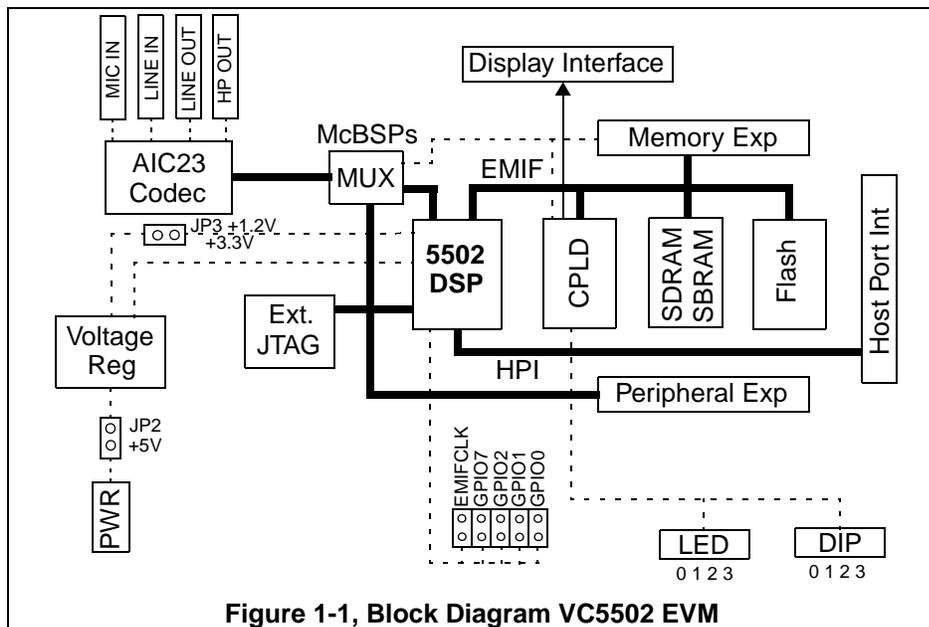


Figure 1-1, Block Diagram VC5502 EVM

The EVM comes with a full compliment of on-board devices that suit a wide variety of application environments. Key features include:

- A Texas Instruments 5502 DSP operating at 300MHz
- An TLC320AIC23 stereo codec
- 8 Mbytes of synchronous DRAM
- 1 Mbyte of synchronous Burst RAM
- 512 Kbytes of non-volatile Flash memory
- I<sup>2</sup>C and SPI serial ROMs
- RS-232 UART
- 4 user accessible LEDs and DIP switches
- Software board configuration through registers implemented in CPLD

- 128 LCD display and keypad
- Jumper selectable boot options
- Standard expansion connectors for daughter card use
- JTAG emulation via external emulator
- Single voltage power supply (+5V)

## **1.2 Functional Overview of the TMS320VC5502 EVM**

The DSP interfaces to external SDRAM, SBRAM, Flash memory and an expansion memory interface connector through its 32-bit External Memory Interface (EMIF). The SDRAM accesses are in 32-bit mode in chip enable 0 memory space. The EMIF provides the necessary refresh signals. The Flash accesses are in 16-bit asynchronous mode in the bottom half of chip enable 1 space. The SBRAM is accessed on chip enable 3 if it is not routed to the expansion connector via the CPLD control register. The EMIF signals are brought out to the daughter card expansion connectors which use chip enables 2 and 3.

An on-board AIC23 codec allows the DSP to transmit and receive analog signals. The I<sup>2</sup>C bus is used for the codec control interface and McBSP1 is used for data. Analog I/O is done through four 3.5mm audio jacks that correspond to microphone input, line input, line output and headphone output. The codec input is software selectable between the microphone or the line input as the active input. The analog output is driven to both the line out (fixed gain) and headphone (adjustable gain) connectors. McBSP1 can be re-routed to the expansion connectors in software.

A programmable logic device called a CPLD is used to implement glue logic that ties the board components together. The CPLD has a register based user interface that lets the user configure the board by reading and writing to the CPLD registers. The registers reside in the upper half of chip enable 1.

The EVM includes 4 LEDs and 4 position DIP switch as a simple way to provide the user with interactive feedback. Both are accessed by reading and writing to the CPLD registers.

A separate Keypad/LCD display card is interfaced via CPLD registers and I<sup>2</sup>C addresses


An included 5V external power supply is used to power the board. On-board voltage regulators provide the +1.3V DSP core voltage, +3.3V digital and +3.3V analog voltages. Voltage supervisors integrated into the regulators monitor voltage regulation, and will hold the board in reset until the supplies are within operating specifications and the reset button is released.

### 1.3 Display/Keypad Overview

The universal display/keypad module interfaces to the EVM via a 16 pin 2mm. ribbon cable.

The display module features a 128 x 64 LCD, 4 I<sup>2</sup>C A/D converters, 2 potentiometers, 9 user keys, and a jog wheel. All switches are accessed via the I<sup>2</sup>C A/Ds, while the display is accessed via an SPI interface generated internally in the CPLD

Figure 1-2 below shows a block diagram of the display/keypad module.

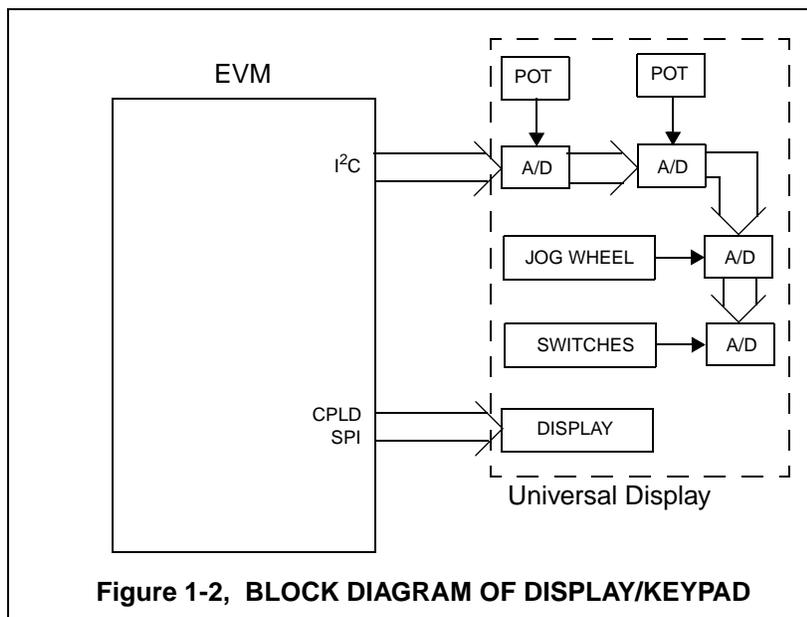

### 1.4 Basic Operation

The EVM is designed to work with TI's Code Composer Studio development environment and is available in an optional package with the board. Code Composer communicates with the board through the JTAG emulator. To start, follow the instructions in the emulator's Quick Start Guide to install Code Composer. This process will install all of the necessary development tools, documentation and drivers.

## 1.5 Memory Map

The C55x family of DSPs has a unified program and data space with a separate distinct I/O space dedicated to on-chip peripheral registers. For a number of reasons (historical and technical) though, program code is addressable in 8-bit bytes while data is addressable in 16-bit words. Both programs and data can reside anywhere in the unified memory space.

The address reach of the 5502 is 24 bits for a total of 16 megabytes (8 bits/byte) or alternatively 8 megawords (16 bits/word). The external memory interface controller (EMIF) divides the address space into 4 equally sized chip enable (CE) spaces when dealing with external memory. The lower 20 address bits are driven on the EMIF as address lines while the top 2 are decoded and driven as the chip enable for that particular region.

Word Address	C5502 Family Memory Type	5502 EVM	
0x000000	Memory Mapped Registers	MMR	
0x000030	Internal Memory (DARAM)	Internal Memory	
0x008000	External CE0	SDRAM	0x008000
0x200000	External CE1	Flash	0x200000
		CPLD	0x380000
0x400000	External CE2	Daughter Card	0x400000
0x600000	External CE3	SBRAM or Daughter Card	0x600000

**Figure 1-2, Memory Map, VC5502 EVM**


The figure above shows a generic memory space map for a C55x family processor and a second map specific to the components on a 5502 EVM. The SDRAM occupies chip enable 0. The Flash and memory mapped registers of the CPLD share CE1 with the Flash in the top half and the CPLD in the bottom half. CE2 is used for expansion daughter card access and CE3 is optionally mapped into SBRAM or expansion connector access.

Internal memory on the 5502 starts at address 0 and takes precedence over any external memory. The DSP's memory mapped registers occupy the first few bytes of the address space, followed by internal DARAM. DARAM stands for Dual-Access RAM and allows two concurrent memory operations to be performed on the same block.

Internal memory is divided into 4Kword blocks, each capable of supporting independent operations. Performance can be optimized by placing code and data so that instructions have their operands spread to different blocks so no stalls are introduced due to contention for one specific block. There are 8 DARAM blocks on a 5502 for a total of 32Kwords of internal memory.

### 1.6 Jumper Settings

The 5502 EVM has 5 on-board CPU configuration jumpers that define the DSP's boot configuration and reset state. The figure below shows these jumpers.

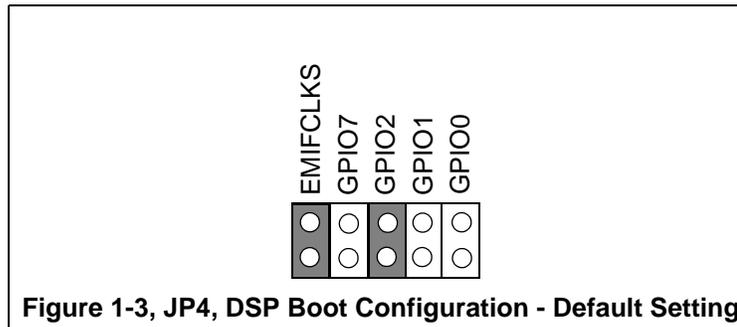

The jumpers drive signals that directly correspond to the input on one of the DSP's configuration pins. If the jumper is on, the signal is driven to a logic 0. If the jumper is off, the signal is driven to a logic 1.

The 5502 has a number of boot modes that are selected at reset by sampling the GPIO[2-0] pins. These pins are also referred to as BOOTM[2-0]. These pins can be configured with the on-board jumpers.

The 5502 can boot from asynchronous memory mapped in CE1 (Flash on the 5502 EVM board), serial EEPROM's connected to McBSP0, I<sup>2</sup>C EEPROM, UART, or a standard serial port on McBSP0. To boot from a particular device such as Flash, I<sup>2</sup>C EEPROM, or SPI EEPROM you must pack the object code into a C55x bootloader formatted table and store it in the device. When you set the appropriate BOOTM jumpers and power cycle the board, the 5502 will parse the bootloader table, load the code into memory and begin execution at the entry point specified in the bootloader table.

The bootloader functionality is contained in on-chip ROM. At reset, the 5502 usually begins execution from the ROM and runs the appropriate bootloader based on the BOOTM pins. In the special case where BOOTM[2:0] are all 0, the internal ROM is not active and execution will begin from external memory at the reset vector (0xFFFF00).

**Table 1: VC5502 EVM Boot Load Options**

BOOTM[2:0]	BOOT PROCESS	EXECUTION START BYTE ADDRESS AFTER BOOT IS COMPLETE
000	No Boot - 16 Bit Asynch	FFFF00h (reset vector)
001	Serial SPI EPROM boot from McBSP0 supporting 24 bit addressing	Destination specified in the boot table
010	Standard Serial Boot McBSP0 (16 bit)	
011 *	Parallel 16 bit EMIF	Flash CE1
010	No Boot - 32 Bit Asynch	0xFFFF00 (Reset vector)
101	HPI Boot	
110	I <sup>2</sup> C Boot	Destination specified in boot table
111	UART Boot	Destination specified in downloaded boot format

Note: Jumper On = Logical 0  
Jumper Off = Logical 1

\* Default Boot Load Option for EVM

## 1.7 EMIF Clock Select

The VC5502 has the option of using a separate clock to operate the external memory interface. This clock is input on the CLKIN pin and is selected at reset by the EMIFCLKS pin. The EVM provides a configuration jumper to select either the internal PLL generated clock or the external PLL generated clock which is driven into the ECLKIN pin. When EMIFCLKS is high ECLKIN is selected for EMIF output clock. When EMIFCLKS is low the internal PLL clock is selected.

## **1.8 Power Supply**

The EVM operates from a single +5V external power supply connected to the main power input (J5). Internally, the +5V input is converted into +1.3V and +3.3V using Texas Instruments voltage regulators. The +1.3V supply is used for the DSP core while the +3.3V supply is used for the DSP's I/O buffers and all other chips on the board. The power connector is a 2.5mm barrel-type plug.

There are two power test points on the EVM at JP2 and JP3. All board current passes through JP2 (the +5V supply). All DSP core current passes through JP3. Normally these jumpers are both closed. To measure the current passing through remove the jumpers and connect the pins with a current measuring device.

The EVM also provides a separate +3.3V, 1A supply for the daughter card. The +3.3V supply is derived from the +5V power source with a separate linear regulator. It is also possible to provide the daughter card with +12V and -12V when the optional external power connector is used.

# Chapter 2

## Board Components

---

---

This chapter describes the operation of the major board components on the TMS320VC5502 EVM.

<b>Topic</b>	<b>Page</b>
<b>2.1 CPLD (Programmable Logic)</b>	<b>2-2</b>
2.1.1 CPLD Overview	2-2
2.1.2 CPLD Registers	2-3
2.1.3 USER_REG Register	2-4
2.1.4 DC_REG Register	2-4
2.1.5 Version Register	2-5
2.1.6 MISC Register	2-5
2.1.7 LCD Interface	2-7
2.1.8 VC5502 EVM Interface Register	2-8
2.2 AIC23 Codec	2-9
2.3 Synchronous DRAM	2-10
2.4 Flash Memory	2-10
2.5 SBRAM Memory	2-10
2.6 LEDs and DIP Switches	2-10
2.7 Daughter Card Interface	2-11

## **2.1 CPLD (Programmable Logic)**

The VC5502 EVM uses an Altera EPM3128TC100-10 Complex Programmable Logic Device (CPLD) device to implement:

- Memory-mapped control/status registers that allow software control of various board features.
- Address decode and memory access logic.
- Control of the daughter card interface and signals.
- SPI for LCD serial interface.
- Assorted "glue" logic that ties the board components together.

### **2.1.1 CPLD Overview**

The CPLD logic is used to implement functionality specific to the EVM. Your own hardware designs will likely implement a completely different set of functions or take advantage of the DSPs high level of integration for system design and avoid the use of external logic completely.

The EMIF on the 5502 can support several heterogeneous memory types with a glueless interface. However, to reserve CE2 and CE3 for potential daughter-card use on the EVM, CE1 is split to include the Flash in its bottom half and the CPLD memory-mapped registers in its top half. The address decode logic is used to implement the split.

The CPLD implements simple random logic functions that eliminate the need for additional discrete devices. In particular, the CPLD aggregates the various reset signals coming from the reset button and power supervisors and generates a global reset.

The EPM3128TC100-10 is a 3.3V (5V tolerant), 100-pin QFP device that provides 128 macrocells, 80 I/O pins, and a 10 ns pin-to-pin delay. The device is EEPROM-based and is in-system programmable via a dedicated JTAG interface (a 10-pin header on the EVM). The CPLD source files are written in the industry standard VHDL (Hardware Design Language) and are included with the EVM on the installation CD-ROM.

## 2.1.2 CPLD Registers

The multiple CPLD memory-mapped registers allows users to control CPLD functions in software. On the 5502 EVM the registers are primarily used to access the LEDs and DIP switches, provide LCD interface, and control the daughter card interface. The registers are mapped into the EMIF data space at word address 0x380000, in the upper portion of CE1. They appear as 16-bit registers with a simple 16-bit asynchronous memory interface, although only the lower 8-bits are valid. The following table gives a high level overview of the CPLD registers and their bit fields:

The table below shows the bit definitions for the 7 registers in CPLD.

**Table 1: CPLD Register Definitions**

Offset	Name	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0	USER_REG	USR_SW3 R	USR_SW2 R	USR_SW1 R	USR_SW0 R	USR_LED3 R/W 0(Off)	USR_LED2 R/W 0(Off)	USR_LED1 R/W 0(Off)	USR_LED0 R/W 0(Off)
1	DC_REG	DC_DET R	TIN0 DIR R/W 0(Low)	DC_STAT1 R	DC_STAT0 R	DC_RST R 0(No reset)	0	DC_CNTL1 R/W 0(low)	DC_CNTL0 R/W 0(low)
2	Reserved								
3	Reserved								
4	VERSION	CPLD_VER[3:0] R				0	BOARD VERSION[2:0] R		
5	Reserved								
6	MISC	McBSP0 On/Off R/W 0 (Onboard)	VCORE ON R/W 0	VCORE STATUS R	VCORE MONOTOR R/W 0	TIN1 IN/OUT R/W 0(INPUT)	TIN0 IN/OUT R/W 0(INPUT)	McBSP2 ON/OFF Board R/W 0 (Onboard)	McBSP1 ON/OFF Board R/W 0 (Onboard)
7	Reserved								
8	LCD_REG0	SHIFT DATA7	SHIFT DATA6	SHIFT DATA5	SHIFT DATA4	SHIFT DATA3	SHIFT DATA2	SHIFT DATA1	SHIFT DATA0
9	LCD_REG1	SHIFT DATA7	SHIFT DATA6	SHIFT DATA5	SHIFT DATA4	SHIFT DATA3	SHIFT DATA2	SHIFT DATA1	SHIFT DATA0
A	BOARD	LCD Busy R 1 BUSY	LCD Reset R/W 0	Reserved R	Reserved R	SBRAM Disable R/W 0(Enabled)	Expansion I <sup>2</sup> C R/W 0(Off)	EMIF Clock R/W 0(ECLK0)	EMIF Clock Status R

### 2.1.3 USER\_REG Register

USER\_REG is used to read the state of the 4 DIP switches and turn the 4 LEDs on or off to allow the user to interact with the EVM. The DIP switches are read by reading the top 4 bits of the register and the LEDs are set by writing to the low 4 bits.

**Table 2: CPLD USER\_REG Register**

Bit	Name	R/W	Description
7	USER_SW3	R	User DIP Switch 3(1 = Off, 0 = On)
6	USER_SW2	R	User DIP Switch 2(1 = Off, 0 = On)
5	USER_SW1	R	User DIP Switch 1(1 = Off, 0 = On)
4	USER_SW0	R	User DIP Switch 0(1 = Off, 0 = On)
3	USER_LED3	R/W	User-defined LED 3 Control (0 = Off, 1 = On)
2	USER_LED2	R/W	User-defined LED 2 Control (0 = Off, 1 = On)
1	USER_LED1	R/W	User-defined LED 1 Control (0 = Off, 1 = On)
0	USER_LED0	R/W	User-defined LED 0 Control (0 = Off, 1 = On)

### 2.1.4 DC\_REG Register

DC\_REG is used to monitor and control the daughter card interface. DC\_DET detects the presence of a daughter card. DC\_STAT and DC\_CNTL provide simple communications with the daughter card through readable status lines and writable control lines.

The daughter card is released from reset when the DSP is released from reset. DC\_RST can be used to put the card back in reset.

**Table 3: DC\_REG Register**

Bit	Name	R/W	Description
7	DC_DET	R	Daughter Card Detect (1= Board detected)
6	0	R	Always 0
5	DC_STAT1	R	Daughter Card Status 1 (0=Low, 1 = High)
4	DC_STAT0	R	Daughter Card Status 0 (0=Low, 1 = High)
3	DC_RST	R/W	Daughter Card Reset (0=No Reset, 1 = Reset)
2	0	R	Always zero
1	DC_CNTL1	R/W	Daughter Card Control 1(0 = Low, 1 = High)
0	DC_CNTL0	R/W	Daughter Card Control 0(0 = Low, 1 = High)

### 2.1.5 VERSION Register

The VERSION register contains two read only fields that indicate the BOARD and CPLD versions. This register will allow your software to differentiate between production releases of the EVM and account for any variances. This register is not expected to change often, if at all.

**Table 4: Version Register Bit Definitions**

Bit #	Name	R/W	Description
7	CPLD_VER3	R	Most Significant CPLD Version Bit
6	CPLD_VER2	R	CPLD Version Bit
5	CPLD_VER1	R	CPLD Version Bit
4	CPLD_VER0	R	Least Significant CPLD Version Bit
3	0	R	Always 0
2	EVM_VER2	R	Most Significant EVM Board Version Bit
1	EVM_VER1	R	EVM Board Version Bit
0	EVM_VER0	R	Least Significant EVM Board Version Bit

### 2.1.6 MISC Register

The MISC register is used to provide software control for miscellaneous board functions. On the 5502 EVM, the MISC register controls how auxiliary signals are brought out to the daughter-card connectors.

The TIN0 and TIN1 bits are used to select whether the DSP's TIN0 and TIN1 (timer) signals are connected to the peripheral expansion connector as inputs or outputs. The expansion connector has separate pins for inputs and outputs so each signal must be routed to one of two physical pins. A 0 indicates that the signal should be connected to the input pin on the expansion connector. A 1 indicates that it should be connected to the output pin.

The power supply logic monitors the core voltage for the DSP and supplies a power good signal that signifies that the core voltage is within an acceptable range. The power good signal can be read on the VCORE\_STAT. If the signal is high, VCORE\_STAT will read 1 indicating that the voltage is within range. A VCORE\_STAT value of 0 indicates the voltage is outside of the normal operating range. The DSP reset circuit uses the power good signal as one of the many terms to hold the DSP in reset when power is first applied as well as when any unexpected voltage glitches are encountered.

In certain circumstances (such as when transitioning back and forth between normal and low voltage mode) it is desirable to temporarily disable core voltage portion of the power monitor's ability to reset the DSP. A VCORE\_MON setting of 1 keeps the DSP from being reset when the core voltage changes. A VCORE\_MON setting of 0 (default) leaves the reset capability enabled.

McBSP0SEL, McBSP1SEL and McBSP2SEL control the McBSP0, McBSP1 and McBSP2 respectively. Usually these ports are used to interface ports to the on-board AIC23 codec, the RS-232 UART driver, or SPI Serial ROM as examples. The power-on state of these bits (both 0s) represents that situation. Setting the corresponding bit to 1 enables the McBSP to the expansion daughter-card instead interface.

**Table 5: MISC Register**

Bit	Name	R/W	Description
7	McBSP0SEL0	R/W	McBSP0 on/off board (0 = on-board, 1 = off-board)
6 *	VCORE_SEL	R/W	Reserved
5	VCORE_STAT	R	Core power good indicator (0=power bad, 1= power good)
4	VCORE_MON0	R/W	Vcore voltage monitor disable (0=enabled, 1= disabled)
3	TIN1SEL	R/W	TIN1 in/out on daughter card (0 = input, 1 = output)
2	TINSEL0	R/W	TIN0 in/out on daughter card (0 = input, 1 = output)
1	MCBSP2SEL	R/W	McBSP2 on/off board (0 = on-board, 1 = off-board)
0	MCBSP1SEL	R/W	McBSP1 on/off board (0 = on-board, 1 = off-board)

\* Currently not implemented

### 2.1.7 LCD Interface

The Liquid Crystal Display (LCD) is a write only interface. It is interfaced via an 8-bit shift register.

Two locations are used when interfacing the LCD panel. Allowing the address bit of the interface to be directly programmed. The shift clock frequency is 5 megahertz.


Writing register LCD0 sets the LCD address line A0 to 0. Writing register LCD1 sets the LCD address line A0 to 1. The write operation to either of these locations starts an internal shift register serializing the data into an 8-bit sequence to the displays. The shift clock frequency is 5 Mhz.

The table below shows the relationship of the DSP data bits to the LCD data bits.

**Table 6: LCD Interface**

D7	D6	D5	D4	D3	D2	D1	D0
LCD D7	LCD D6	LCD D5	LCD D4	LCD D3	LCD D2	LCD D1	LCD D0

The figure below shows the LCD data transfer timing. the CPLD automatically generates this timing.

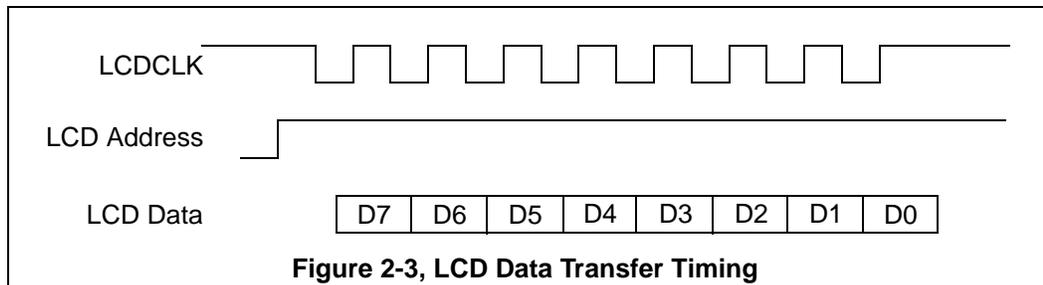

After any write operations the CPLD sets the LCD BUSY bit in the VC5502 EVM interface Register as the output is being serialized. The user should check this bit prior to starting another write operation. When LCD BUSY is high, the LCD shift register is busy, when is low the shift register is ready.

### 2.1.8 VC5502 EVM Interface Register

The VC5502 EVM Interface Register implements specific logic for the VC5502 EVM. The bits used in this register and their function are described in the table below.

**Table 7: VC5509 EVM Interface Register**

Bit	Name	R/W	Description
7	LCD Busy	R	0 = busy, not ready, 1 = not busy, ready
6	LCD Reset	R/W	0 = removes reset from LCD, 1 = forces LCD into reset
5	Reserved		
4	Reserved		
3	SBRAM Disable	R/W	0 = SBRAM Enabled, 1 = SBRAM Disabled
2	I <sup>2</sup> C Expansion	R/W	0 = Disables I <sup>2</sup> C interface to expansion connector 1 = Enables I <sup>2</sup> C interface to expansion connector
1	EMIF ECLK01/ECLK02	R/W	Configure ECLK01/ECLK02
0	EMIFCLKS	R	EMIF_CLKS Pin State

LCD Busy indicates the status of the CPLD implemented shift register which interfaces to the LCD panel. A 1 logic level indicates the shift register is busy, A 0 logic level indicates the shift register is ready.

LCD Reset allows the LCD Reset bit to be toggled under software control. A 1 logic level forces the LCD panel into reset. A 0 logic level removes the LCD reset to normal state.

SBRAM Enable determines if Chip Enable 3 is used to interface to the on board SBRAM or the daughter card interface. The default (logic 0) is that the SBRAM is enabled.

I<sup>2</sup>C Expansion bit enables/disables driving the I<sup>2</sup>C interface to the daughter card expansion bus. A 1 logic level enables the I<sup>2</sup>C bus to the daughter card interface. A 0 logic level disables the interface. Default state is disabled.

EMIF CLOCK CONFIG determines if ECLK01 or ECLK02 is used to drive the EMIF clock. ECLK01 (0 logic level) is the default. Writing a logic 1 to this bit position selects ECLK2.

EMIFCLKS is the state of the clock selection pin on the VC5502.


## 2.2 AIC23 Codec

The EVM uses a Texas Instruments AIC23 (part #TLV320AIC23) stereo codec for input and output of audio signals. The codec samples analog signals on the microphone or line inputs and converts them into digital data so it can be processed by the DSP. When the DSP is finished with the data it uses the codec to convert the samples back into analog signals on the line and headphone outputs so the user can hear the output.

The codec communicates using two serial channels, one to control the codec's internal configuration registers and one to send and receive digital audio samples. The I<sup>2</sup>C bus is used as the unidirectional control channel. The control channel is only used when configuring the codec, it is generally idle when audio data is being transmitted,

McBSP1 is used as the bi-directional data channel. All audio data flows through the data channel. Many data formats are supported based on the three variables of sample width, clock signal source and serial data format. The EVM examples generally use a 16-bit sample width with the codec in master mode so it generates the frame sync and bit clocks at the correct sample rate without effort on the DSP side. The preferred serial format is DSP mode which is designed specifically to operate with the McBSP ports on TI DSPs.

The codec has a 12MHz system clock. The 12MHz system clock corresponds to USB sample rate mode, named because many USB systems use a 12MHz clock and can use the same clock for both the codec and USB controller. The internal sample rate generate subdivides the 12MHz clock to generate common frequencies such as 48KHz, 44.1KHz and 8KHz. The sample rate is set by the codec's SAMPLERATE register. The figure below shows the Coded interface on the VC5502 EVM.

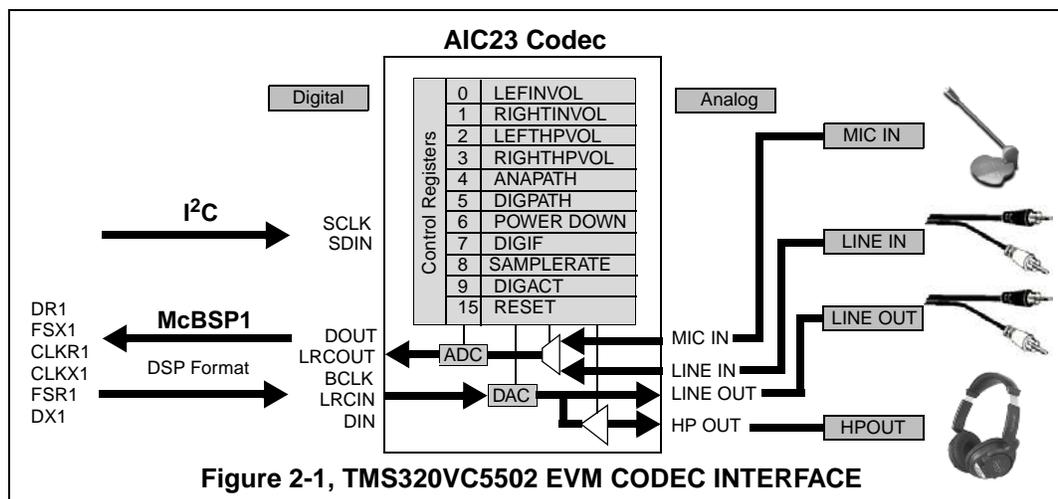

### **2.3 Synchronous DRAM**

The EVM uses an industry standard 64 megabit Synchronous SDRAM. It uses a 32-bit interface and is used with up a maximum 100 MHz. memory clock. Since the DSP runs at 300 MHz, the EMIF must be programmed to use the SDRAM at a divider of the core clock rate or use the alternate EMIF Clock input.

The SDRAM occupies chip enable 0.

SDRAM must be constantly refreshed to maintain the integrity of its contents. This SDRAM must update one row every 15.6 microseconds to meet its minimum requirements. The EMIF can be programmed to automatically generate refresh signals based on this time period.

### **2.4 Flash Memory**

The EVM provides two devices each consisting of 256K x 16-bit words of external Flash memory. The board itself is pinned out to allow expansion to 1M 32 bit words. Typically the Flash is mapped into CE1 space because that is where the 16-bit asynchronous bootloader looks for a boot image when booting from the Flash. Because the bootloader uses 16 bit mode usually only the Flash on D0-D15 is used. The CE1 space is shared by the CPLD and the Flash, but the CPLD timings are subsetted by the Flash so the Flash is the critical factor in configuring CE1.

The Flash itself is a 70ns device but some additional delays are incurred in the CPLD logic that separates the Flash and CPLD registers. Because of this, the EMIF should be programmed for an access time of at least 80ns, and typically 100 ns.

### **2.5 SBRAM Memory**

The EVM has 1 megabyte of SBRAM in CE3 space. If the SBRAM is not used CE3 can be used for expansion daughter card accesses by disabling the secondary chip select on the SBRAM via the Board Register in the CPLD.

### **2.6 LEDs and DIP Switches**

The EVM includes 4 software accessible LEDs (DS1-DS4) and DIP switches (S2) that provide the user a simple form of input/output. Both are accessed through the CPLD USER\_REG register.

## **2.7 Daughter Card Interface**

The EVM provides three expansion connectors that can be used to accept plug-in daughter cards. The daughter card allows users to build on their EVM platform to extend its capabilities and provide customer and application specific I/O. The expansion connectors are for memory, peripherals, and the Host Port Interface (HPI)

The memory connector provides access to the DSP's asynchronous EMIF signals to interface with memories and memory mapped devices. It supports byte addressing on 32 bit boundaries. The peripheral connector brings out the DSP's peripheral signals like McBSPs, timers, and clocks. Both connectors provide power and ground to the daughter card

The HPI is a high speed interface that can be used to allow multiple DSPs to communicate and cooperate on a given task. The HPI connector brings out the HPI specific control signals as well as McBSP2.

Most of the expansion connector signals are buffered so that the daughter card cannot directly influence the operation of the EVM board. The use of TI low voltage, 5V tolerant buffers, and CBT interface devices allows the use of either +5V or +3.3V devices to be used on the daughter card.

Other than the buffering, most daughter card signals are not modified on the board. However, a few daughter card specific control signals like DC\_RESET and DC\_DET exist and are accessible through the CPLD DC\_REG register. The EVM also multiplexes the Mc\_BSP0, McBSP1, and McBSP2 of on-board or external use. This function is controlled through the CPLD MISC register.

The timer signals on the peripheral expansion connector have connections for both inputs and outputs. since the VC5502 does not have separate timer inputs and outputs, the CPLD is used to select whether the input or output pin should be connected to the timer. This selection is also controlled through the CPLD MISC register.



# Chapter 3

## Physical Description

---


---

This chapter describes the physical layout of the TMS320VC5502 EVM and its connectors.

<b>Topic</b>	<b>Page</b>
3.1 TMS320VC5502 EVM Board Layout	3-2
3.1.1 Keypad/display Module Layout	3-3
3.2 Connector Index	3-4
3.3 Expansion Connectors	3-4
3.3.1 P1, Memory Expansion Connector	3-5
3.3.2 P2, Peripheral Expansion Connector	3-6
3.3.3 P3, HPI Expansion Connector	3-7
3.4 Audio Connectors	3-8
3.4.1 J1, Microphone Connector	3-8
3.4.2 J2, Audio Line In Connector	3-8
3.4.3 J3, Audio Line Out Connector	3-9
3.4.4 J4, Headphone Connector	3-9
3.5 Power Connectors	3-10
3.5.1 J5, +5 Volt Connector	3-10
3.5.2 J6, Alternate Power Connector	3-10
3.6 Miscellaneous Connectors	3-11
3.6.1 J8, RS-232 Connector	3-11
3.6.2 J7, External JTAG Connector	3-11
3.6.3 JP1, PLD Programming Connector	3-12
3.7 System LEDs	3-12
3.8 Reset Circuitry	3-12


### 3.1 TMS320VC5502 EVM Board Layout

The VC5502 EVM is a 8.25 x 4.5 inch (210 x 115 mm.) multi-layer board which is powered by an external +5 volt only power supply. The figure below shows the layout of the VC5502 EVM.

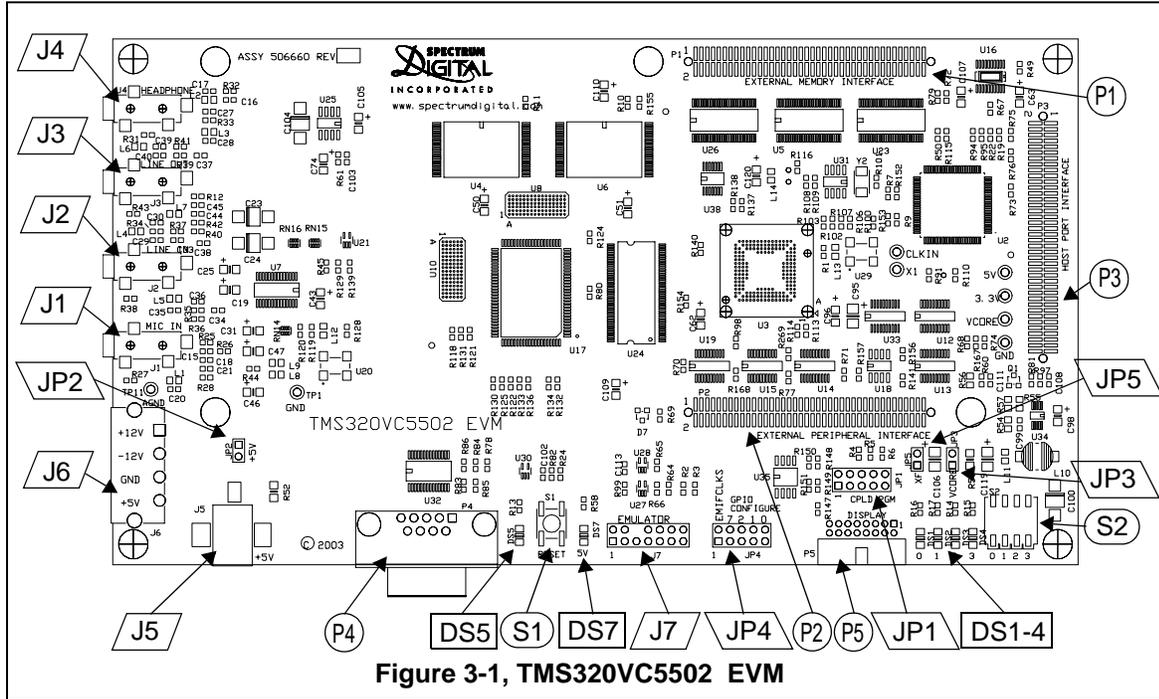

### 3.2 Keypad/display Module Layout

The Keypad/display Module is a 3.1 x 4.4 inch (79 x 112 mm.) multi-layer board which is powered from the EVM. The figure below shows the layout of the Keypad/display Module.

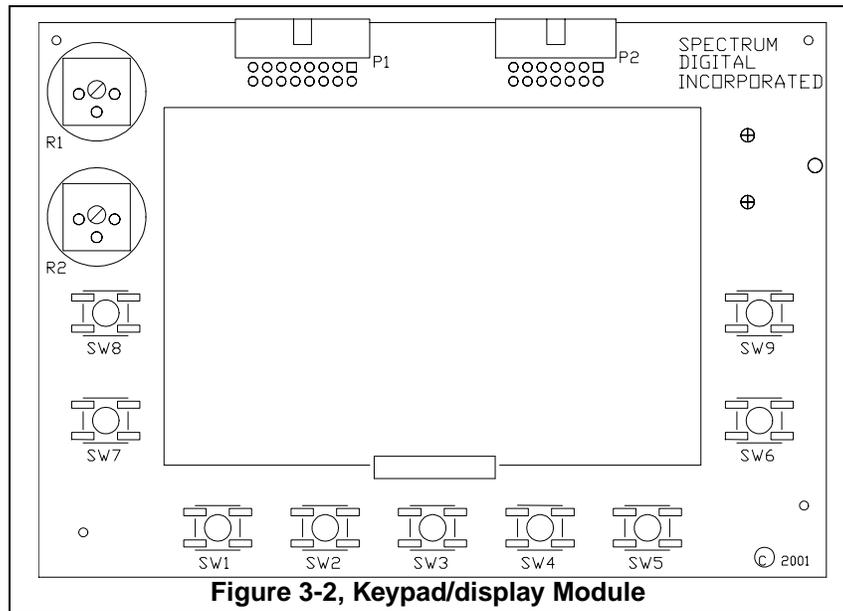

### 3.2 Connector Index

The TMS320VC5502 EVM has many connectors which provide the user access to the various signals on the EVM.

**Table 1: TMS320VC5502 EVM Connectors**

Connector	# Pins	Function
P1	80	Memory
P2	80	Peripheral
P3	80	HPI
P4	9	RS-232 Port
P5	16	Display - Keypad
J1	2	Microphone
J2	2	Line In
J3	2	Line Out
J4	2	Speaker
J5	2	+5 Volt
J6 *	4	Alternate Power Connector
J7	14	External JTAG

**Note:** “\*” Not populated

### 3.3 Expansion Connectors

The TMS320VC5502 EVM supports three expansion connectors that follow the Texas Instruments interconnection guidelines. The expansion connector pinouts are described in the following three sections.

The three expansion connectors are all 80 pin 0.050 x 0.050 inches low profile connectors from Samtec or AMP. The Samtec SFM Series (surface mount) connectors are designed for high speed interconnections because they have low propagation delay, capacitance, and cross talk. The connectors present a small foot print on the EVM. Each connector includes multiple ground, +5V, and +3.3V power signals so that the daughter card can obtain power directly from the EVM. The peripheral expansion connector additionally provides both +12V and -12V to the daughter card, if the alternate power supply connector is used to power the board. The recommended mating connector, whose part number is TFM-140-32-S-D-LC, is a surface mount connector that provides a 0.465” mated height.

**Note:** I is on an Input pin  
 O is on an Output pin  
 Z is on a High Impedance pin

## 3.3.1 P1, Memory Expansion Connector

Table 2: P1, Memory Expansion Connector

Pin #	Signal Name	I/O/Z	Pin #	Signal Name	I/O/Z
1	+5 Volts	O	2	+5 volts	O
3	A21	O	4	A20	O
5	A19	O	6	A18	O
7	A17	O	8	A16	O
9	A15	O	10	A14	O
11	GND	O	12	GND	O
13	A13	O	14	A12	O
15	A11	O	16	A10	O
17	A9	O	18	A8	O
19	A7	O	20	A6	O
21	+5 Volts	O	22	+5 Volts	O
23	A5	O	24	A4	O
25	A3	O	26	A2	O
27	BE3n	O	28	BE2n	O
29	BE1n	O	30	BE0n	O
31	GND	O	32	GND	O
33	D31	I/O/Z	34	D30	I/O/Z
35	D29	I/O/Z	36	D28	I/O/Z
37	D27	I/O/Z	38	D26	I/O/Z
39	D25	I/O/Z	40	D24	I/O/Z
41	+3.3 Volts	O	42	+3.3 Volts	O
43	D23	I/O/Z	44	D22	I/O/Z
45	D21	I/O/Z	46	D20	I/O/Z
47	D19	I/O/Z	48	D18	I/O/Z
49	D17	I/O/Z	50	D16	I/O/Z
51	GND	O	52	GND	O
53	D15	I/O/Z	54	D14	I/O/Z
55	D13	I/O/Z	56	D12	I/O/Z
57	D11	I/O/Z	58	D10	I/O/Z
59	D9	I/O/Z	60	D8	I/O/Z
61	GND	O	62	GND	O
63	D7	I/O/Z	64	D6	I/O/Z
65	D5	I/O/Z	66	D4	I/O/Z
67	D3	I/O/Z	68	D2	I/O/Z
69	D1	O	70	D0	O
71	GND	O	72	GND	O
73	REn	O	74	WE <sub>n</sub>	O
75	OEn	O	76	RDY <sub>n</sub>	I
77	CE3n	O	78	CE2n	O
79	GND	O	80	GND	O

## 3.3.2 P2, Peripheral Expansion Connector

Table 3: P2, Peripheral Expansion Connector

Pin #	Signal Name	I/O/Z	Pin #	Signal Name	I/O/Z
1	+12 Volts *	O	2	-12 Volts *	O
3	GND	O	4	GND	O
5	+5 Volts	O	6	+5 Volts	O
7	GND	O	8	GND	O
9	+5 Volts	O	10	+5 Volts	O
11	I <sup>2</sup> C SCL	O/Z	12	I <sup>2</sup> C SDA	I/O/Z
13	RESERVED		14	RESERVED	
15	RESERVED		16	RESERVED	
17	RESERVED		18	RESERVED	
19	+3.3 Volts	O	20	+3.3 Volts	O
21	CLKX0	I/O/Z	22	RESERVED	
23	FSX0	I/O/Z	24	DX0	O/Z
25	GND	O	26	GND	O
27	CLKR0	I/O/Z	28	RESERVED	
29	FSR0	I/O/Z	30	DR0	I
31	GND	O	32	GND	O
33	CLKX1	I/O/Z	34	RESERVED	I
35	FSX1	I/O/Z	36	DX1	O/Z
37	GND	O	38	GND	O
39	CLKR1	I/O/Z	40	RESERVED	
41	FSR1	I/O/Z	42	DR1	Z
43	GND	O	44	GND	O
45	TOUT0	Z	46	TIN0	I
47	INT0n	I	48	INT2n	I
49	TOUT1	O	50	TIN1	I
51	GND	O	52	GND	O
53	INT1n	I	54	IACKn	I
55	RESERVED		56	RESERVED	O
57	RESERVED		58	RESERVED	I
59	RESETn	O	60	RESERVED	
61	GND	O	62	GND	O
63	DC_CNTL1	O	64	DC_CNTL0	O
65	DC_STAT1	I	66	DC_STAT0	I
67	INT3n	I	68	RESERVED	
69	RESERVED		70	RESERVED	
71	RESERVED		72	RESERVED	
73	RESERVED		74	RESERVED	
75	DETECTn	I	76	GND	O
77	GND	O	78	CLKOUT	O
79	GND	O	80	GND	O

## 3.3.3 P3, HPI Expansion Connector

Table 4: P3, HPI Expansion Connector


Pin #	Signal Name	I/O/Z	Pin #	Signal Name	I/O/Z
1	+5 Volts	O	2	+5 Volts	O
3	CLKX2	I/O/Z	4	CLKR2	I/O/Z
5	FSX2	I/O/Z	6	FSR2	I/O/Z
7	DX2	O/Z	8	DR2	I
9	IO4	I/O	10	RESERVED	I
11	GND	O	12	GND	O
13	HRW	I	14	HCNTL0	I
15	HPINEA	I	16	HCS	I
17	IO6	I/O	18	IO7	I/O
19	HDS2	I	20	HDS1	I
21	+5 Volts	O	22	+5 Volts	O
23	HRDY	O/Z	24	HINT	O/Z
25	IO0	I	26	IO1	I
27	Reserved	I	28	Reserved	I
29	HCI	I	30	HCO	I
31	GND	O	32	GND	O
33	Reserved	I	34	Reserved	I
35	Reserved	I	36	Reserved	I
37	Reserved	I	38	Reserved	I
39	Reserved	I	40	Reserved	I
41	+5 Volts	O	42	+5 Volts	O
43	Reserved	I	44	Reserved	I
45	Reserved	I	46	Reserved	I
47	Reserved	I	48	Reserved	I
49	HCNTL1	I	50	Reserved	I
51	GND	O	52	GND	O
53	Reserved	I/O/Z	54	Reserved	I/O/Z
55	Reserved	I/O/Z	56	Reserved	I/O/Z
57	Reserved	I/O/Z	58	Reserved	I/O/Z
59	Reserved	I/O/Z	60	Reserved	I/O/Z
61	GND	O	62	GND	O
63	HD7	I/O/Z	64	HD6	I/O/Z
65	HD5	I/O/Z	66	HD4	I/O/Z
67	HD3	I/O/Z	68	HD2	I/O/Z
69	HD1	I/O/Z	70	HD0	I/O/Z
71	GND	O	72	GND	O
73	HOLDA	O/Z	74	HOLD	I
75	NMIn	I	76	IO2	I/O
77	XF	O	78	HPI_RST	I
79	GND	O	80	GND	O

### 3.4 Audio Connectors

The VC5502 EVM has 4 audio connectors. They are described in the following sections.


#### 3.4.1 J1, Microphone Connector

The input is a 3.5 mm. stereo jack. Both inputs are connected to the microphone so it is monaural. The signals on the plug are shown in the figure below.

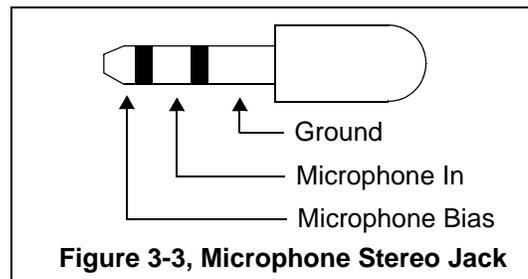


#### 3.4.2 J2, Audio Line In Connector

The audio line in is a stereo input. The input connector is a 3.5 mm stereo jack. The signals on the mating plug are shown in the figure below.

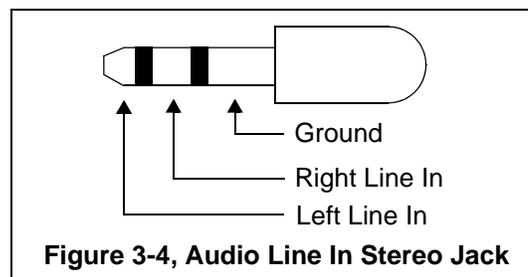


### 3.4.3 J3, Audio Line Out Connector

The audio line out is a stereo output. The output connector is a 3.5 mm stereo jack. The signals on the mating plug are shown in the figure below.

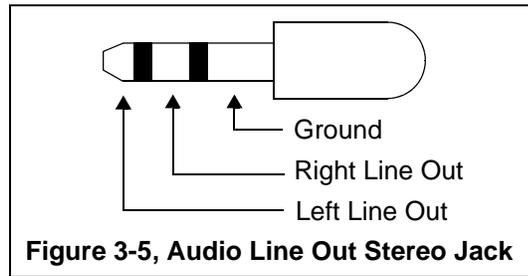

### 3.4.4 J4, Headphone Connector

Connector J4 is a headphone/speaker jack. It can drive standard headphones or a high impedance speaker directly. The standard 3.5 mm jack is shown in the figure below

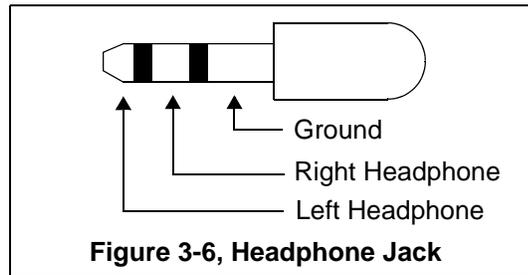


### 3.5 Power Connectors

The VC5502 EVM has 2 power connectors. They are described in the following sections.

#### 3.5.1 J5, +5 Volt Connector

Power (+5 volts) is brought onto the TMS320VC5502 EVM via the J5 connector. The connector has an outside diameter of 5.5 mm. and an inside diameter of 2.5 mm. The A diagram of J5 is shown below.

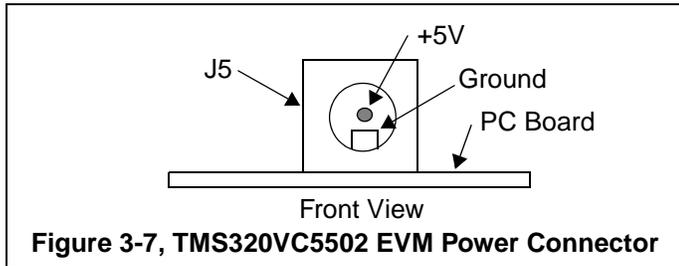

#### 3.5.2 J6, Alternate Power Connector

Connector J6 is an alternate power connector. It will operate with the standard personal computer power supply. To populate this connector use a Molex #53109-0410. The table below shows the voltages on the respective pins.

**Table 5: J6, Optional Power Connector**

Pin #	Voltage Level
1	+12 Volts
2	-12 Volts
3	Ground
4	+5 Volts

**WARNING !**  
Do not plug into J5 and J6 at the same time.

### 3.6 Miscellaneous Connectors

The VC5502 EVM has 3 additional connectors to aid the user in developing with this product. They are described in the following sections.

#### 3.6.1 P4, RS-232 Connector

Connector P4 is a female RS-232 providing an interface to the UART. The signals on this connector are shown in the below.

**Table 6: P4, RS-232 Connector**

Pin #	Signal Name	Direction
1	Reserved	
2	Transmit Data	Output
3	Receive Data	Input
4	Reserved	
5	Ground	Output
6	Reserved	
7	CTS	Input
8	RTS	Output
9	Reserved	

#### 3.6.2 J7, External JTAG Connector

The TMS320VC5502 EVM is supplied with a 14 pin header interface, J7. This is the standard interface used by JTAG emulators to interface to Texas Instruments DSPs. The pinout for the connector is shown figure 3-6 below.

TMS	1	2	TRST-	Header Dimensions Pin-to-Pin spacing, 0.100 in. (X,Y) Pin width, 0.025-in. square post Pin length, 0.235-in. nominal
TDI	3	4	GND	
PD (+3.3V)	5	6	<b>no pin (key)</b>	
TDO	7	8	GND	
TCK-RET	9	10	GND	
TCK	11	12	GND	
EMU0	13	14	EMU1	

**Figure 3-8, JTAG INTERFACE**

### 3.6.3 JP1, PLD Programming Connector

This connector interfaces to the Altera CPLD, U2. It is used in the in the factory for the programming of the CPLD. This connector is not intended to be used outside the factory.

### 3.7 System LEDs

The TMS320VC5502 EVM has two system light emitting diodes (LEDs). These LEDs indicate various conditions on the EVM. These function of each LED is shown in the table below.

**Table 7: System LEDs**

Reference Designator	Color	Function	On Signal State
DS6	Green	+5 Volt present	1
DS5	Orange	RESET Active	1

### 3.8 Reset Circuitry

There are three resets on the TMS320VC5502 EVM. The first reset is the power on reset. This circuit waits until power is within the specified range before releasing the power on reset pin to the TMS320VC5502.

External sources which control the reset are push button S1, and HPI Reset from the expansion connector.

# Appendix A

## Schematics

---

---

---

This appendix contains the schematics for the TMS320VC5502 EVM and the keypad/display module.

<b>Topic</b>		<b>Page</b>
A.1	<b>TMS320VC5502 EVM Schematics</b>	<b>A-2</b>
A.2	<b>Keypad/display Module Schematics</b>	<b>A-23</b>

REVISIONS			
REV	DESCRIPTION	DATE	APPROVED

BOOTM2 GPIO2	BOOTM1 GPIO1	BOOTM0 GPIO0	
000	NO BOOT 16 BIT MODE		WHICH CHIP SELECT 0XFFFF00
001	SERIAL EEPROM SPI 24 BIT ADDRESS		MCBSPO
010	SERIAL 16 BIT MODE		MCBSPO
011	PARALLEL EMIF 16 BIT MODE		0X200000
100	NO BOOT 32 BIT MODE		0XFFFF00
101	HPI BOOT MODE		
110	I2C BOOT MODE		
111	UART BOOT MODE		

CE0      SDRAM

CE1      FLASH AND CPLD  
          REGISTERS

CE2      EXPANSION

CE3      SBRAM OR EXPANSION


REVISION STATUS OF SHEETS										
REV	A									
SH	21									
REV	A	A	A	A	A	A	A	A	A	
SH	11	12	13	14	15	16	17	18	19	20
REV	A	A	A	A	A	A	A	A	A	A
SH	1	2	3	4	5	6	7	8	9	10


DWN	DATE	
CHK	DATE	
ENGR	DATE	
ENGR-MGR	DATE	
QA	DATE	
MFG	DATE	
RLSE	DATE	


SPECTRUM DIGITAL	
Title: TMS320VC5502 EVALUATION MODULE	
Size: B	Document Number: 506662
Date: Monday, May 19, 2003	Rev: A
Sheet 1 of 21	




SPECTRUMDIGITAL			
File	TMS320VC5502 EVALUATION MODULE		Rev. A
Doc. C	Document Number	50662	
Size	0	0	
Date	Monday, May 19, 2003	Sheet	3 of 21

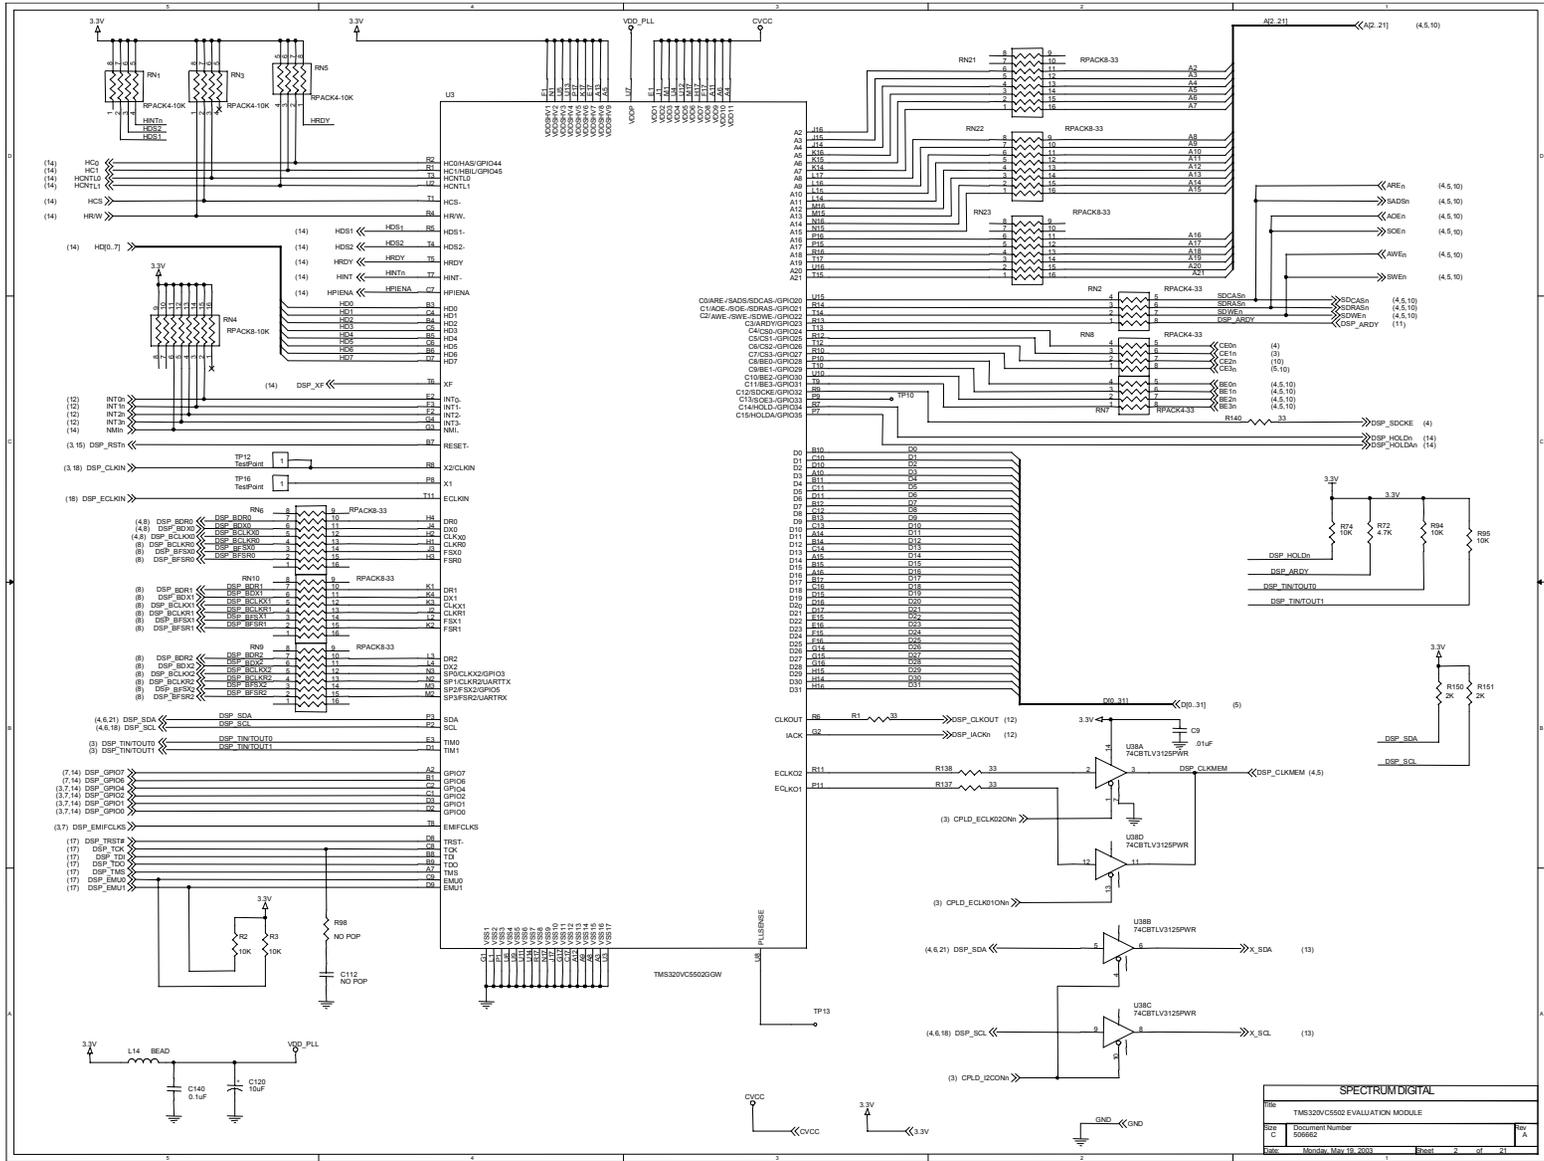

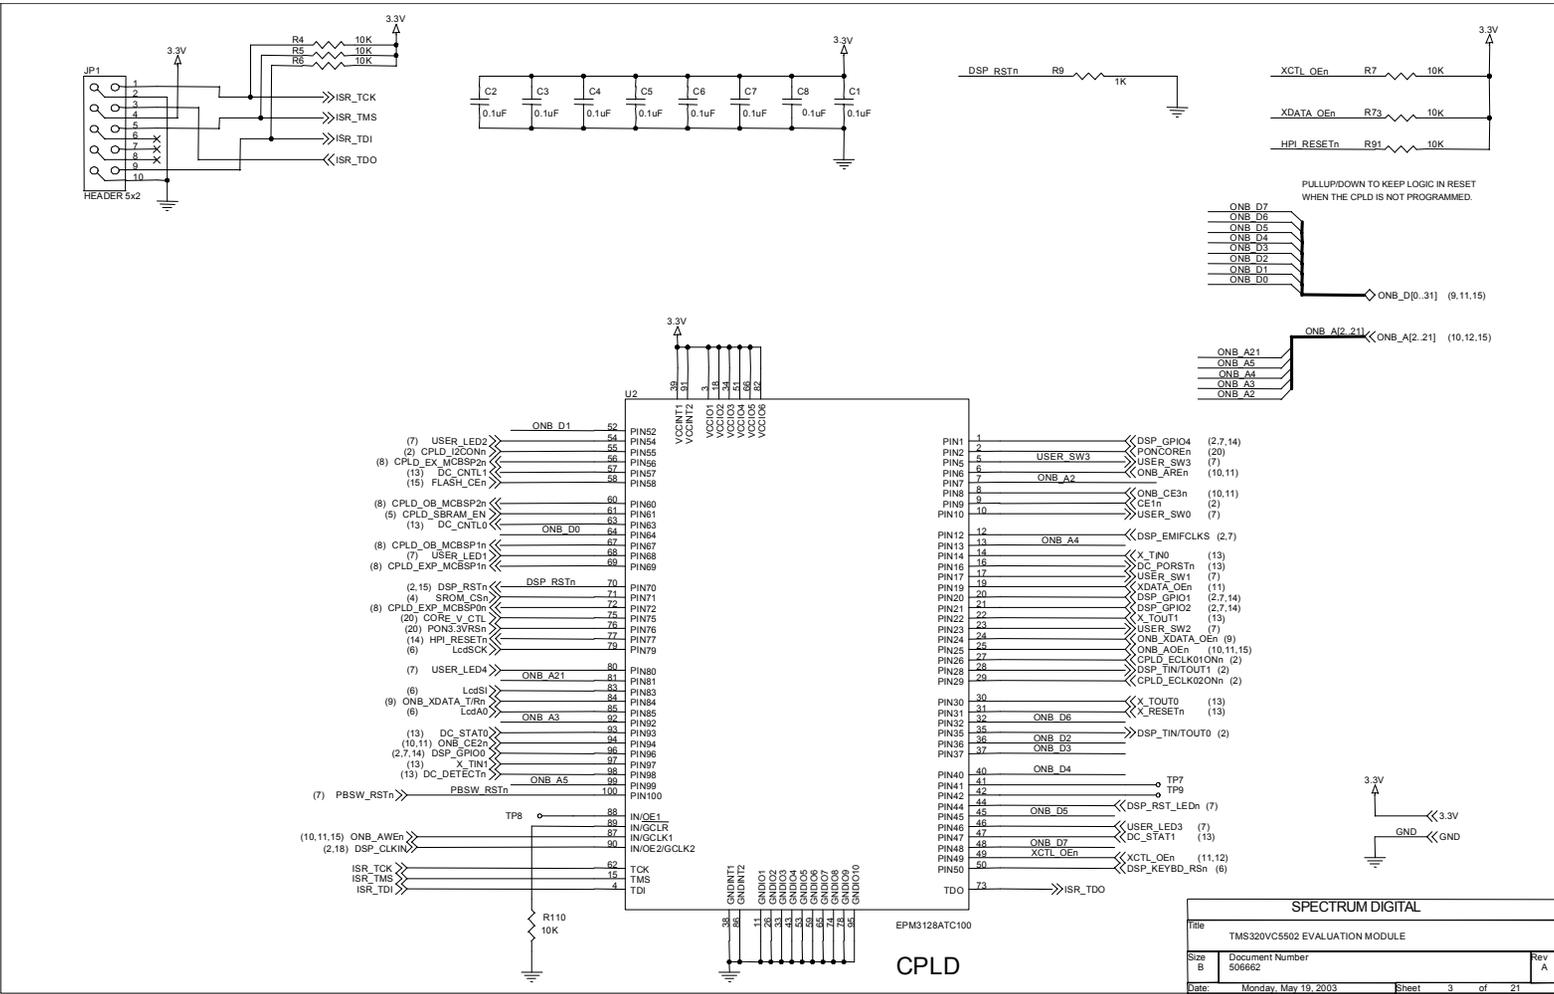
SPECTRUM DIGITAL		
Title	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date:	Monday, May 19, 2003	Sheet 3 of 21

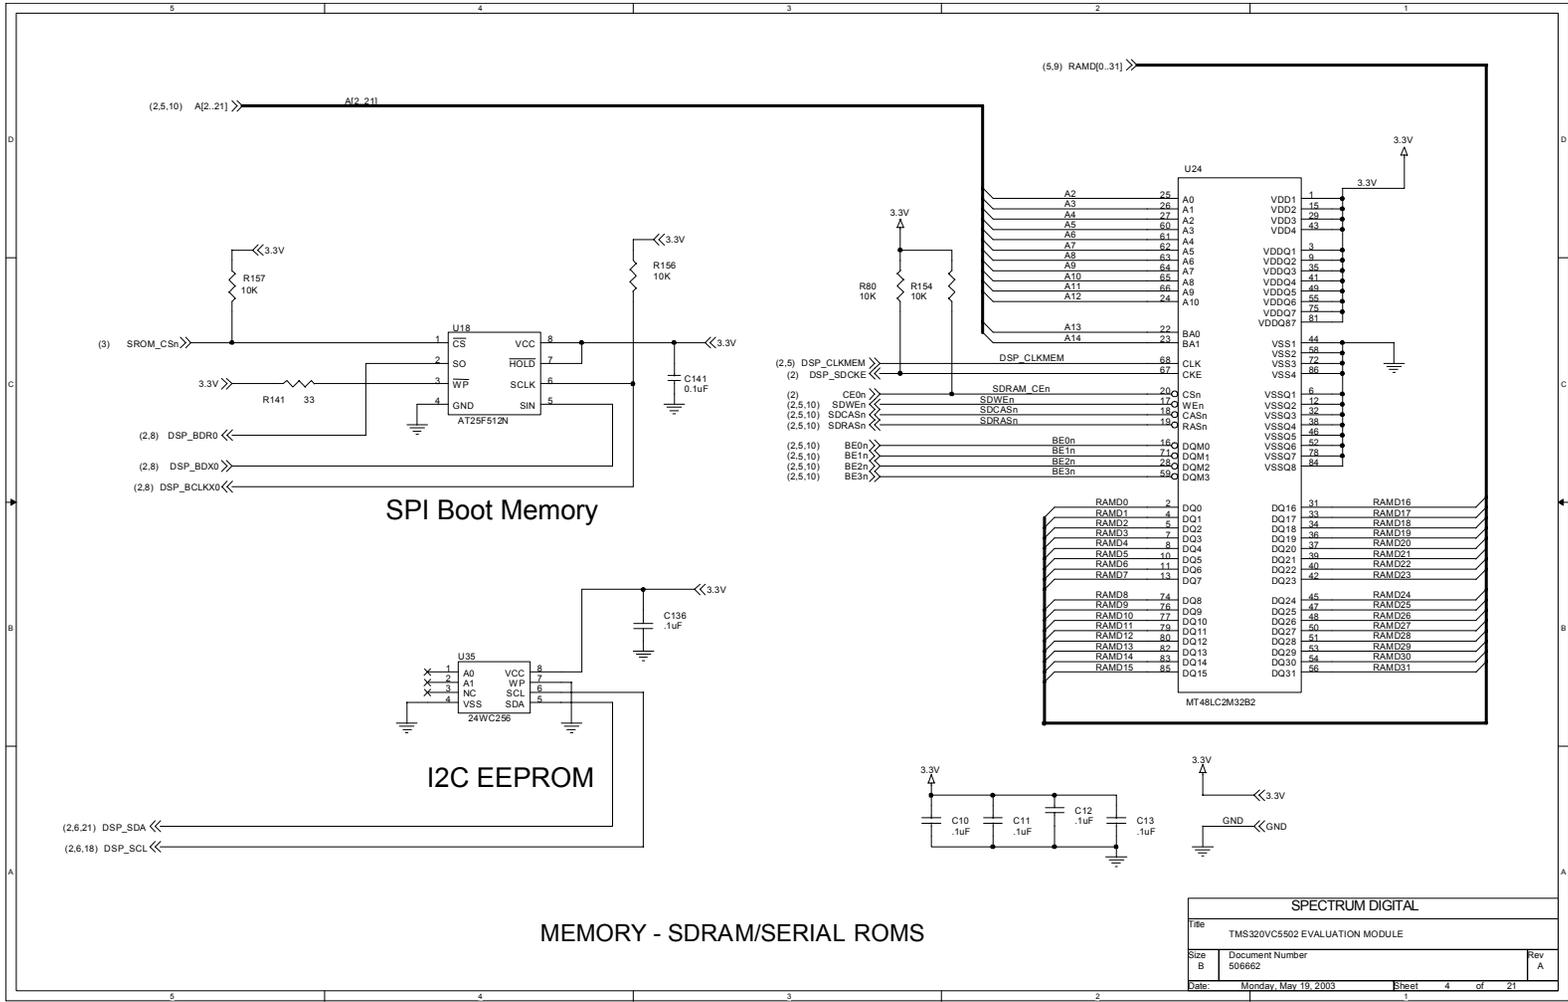


SPECTRUM DIGITAL		
Title	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date	Monday, May 19, 2003	Sheet 4 of 21

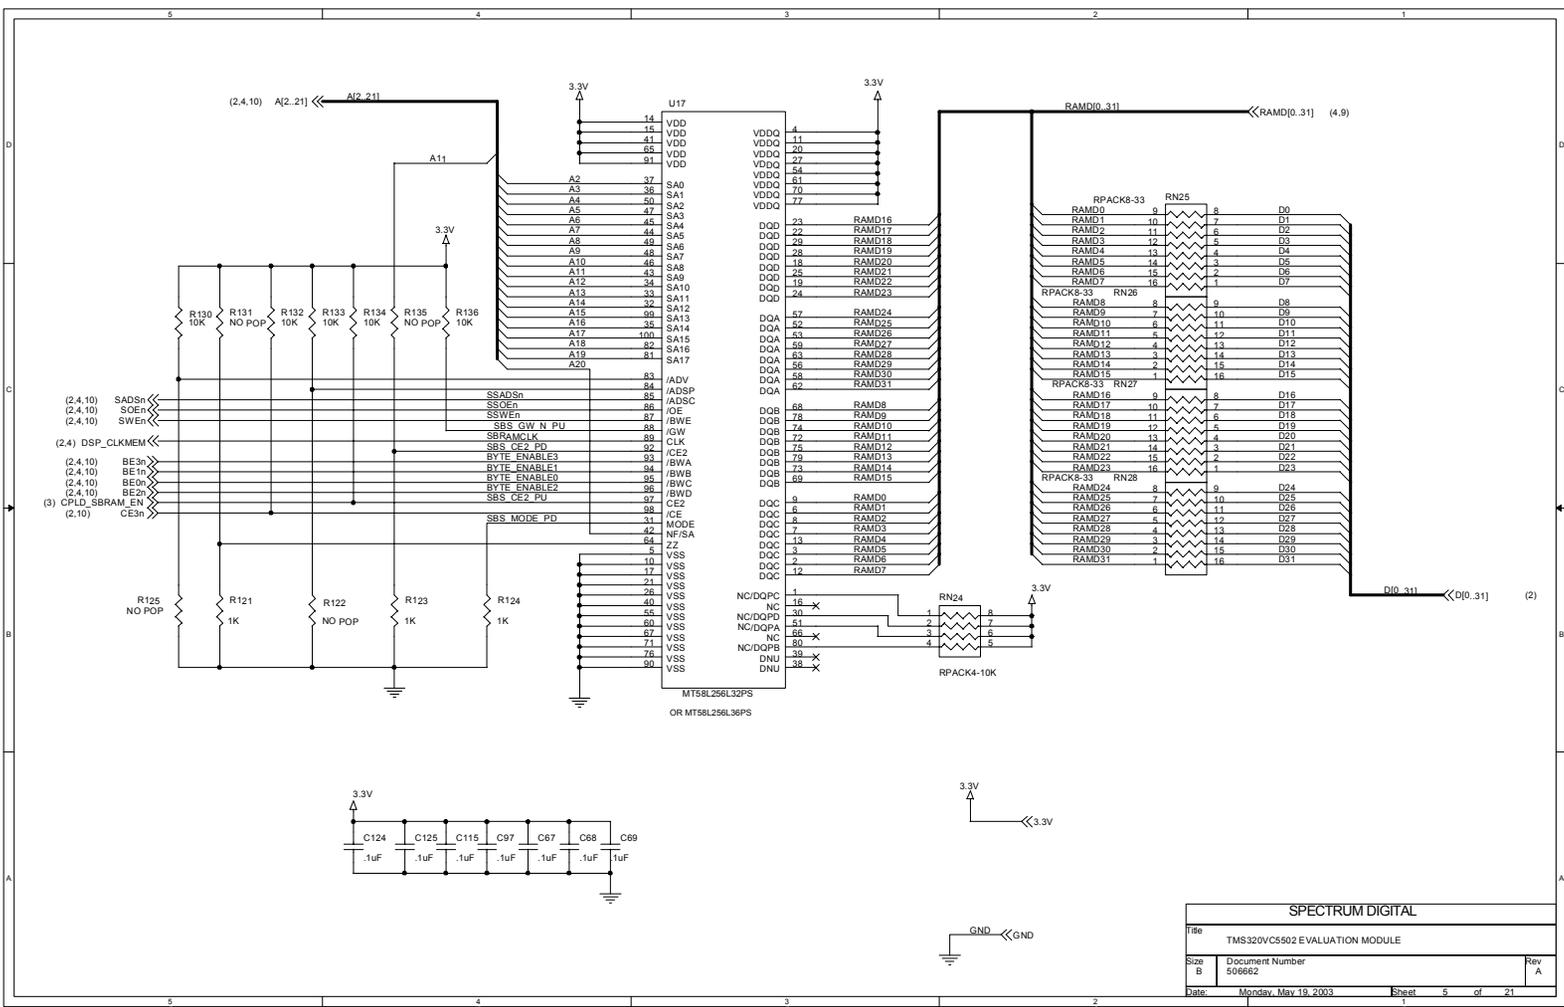


SPECTRUM DIGITAL		
Title TMS320VC5502 EVALUATION MODULE		
Size B	Document Number 506662	Rev A
Date: Monday, May 19, 2003	Sheet 5	of 21

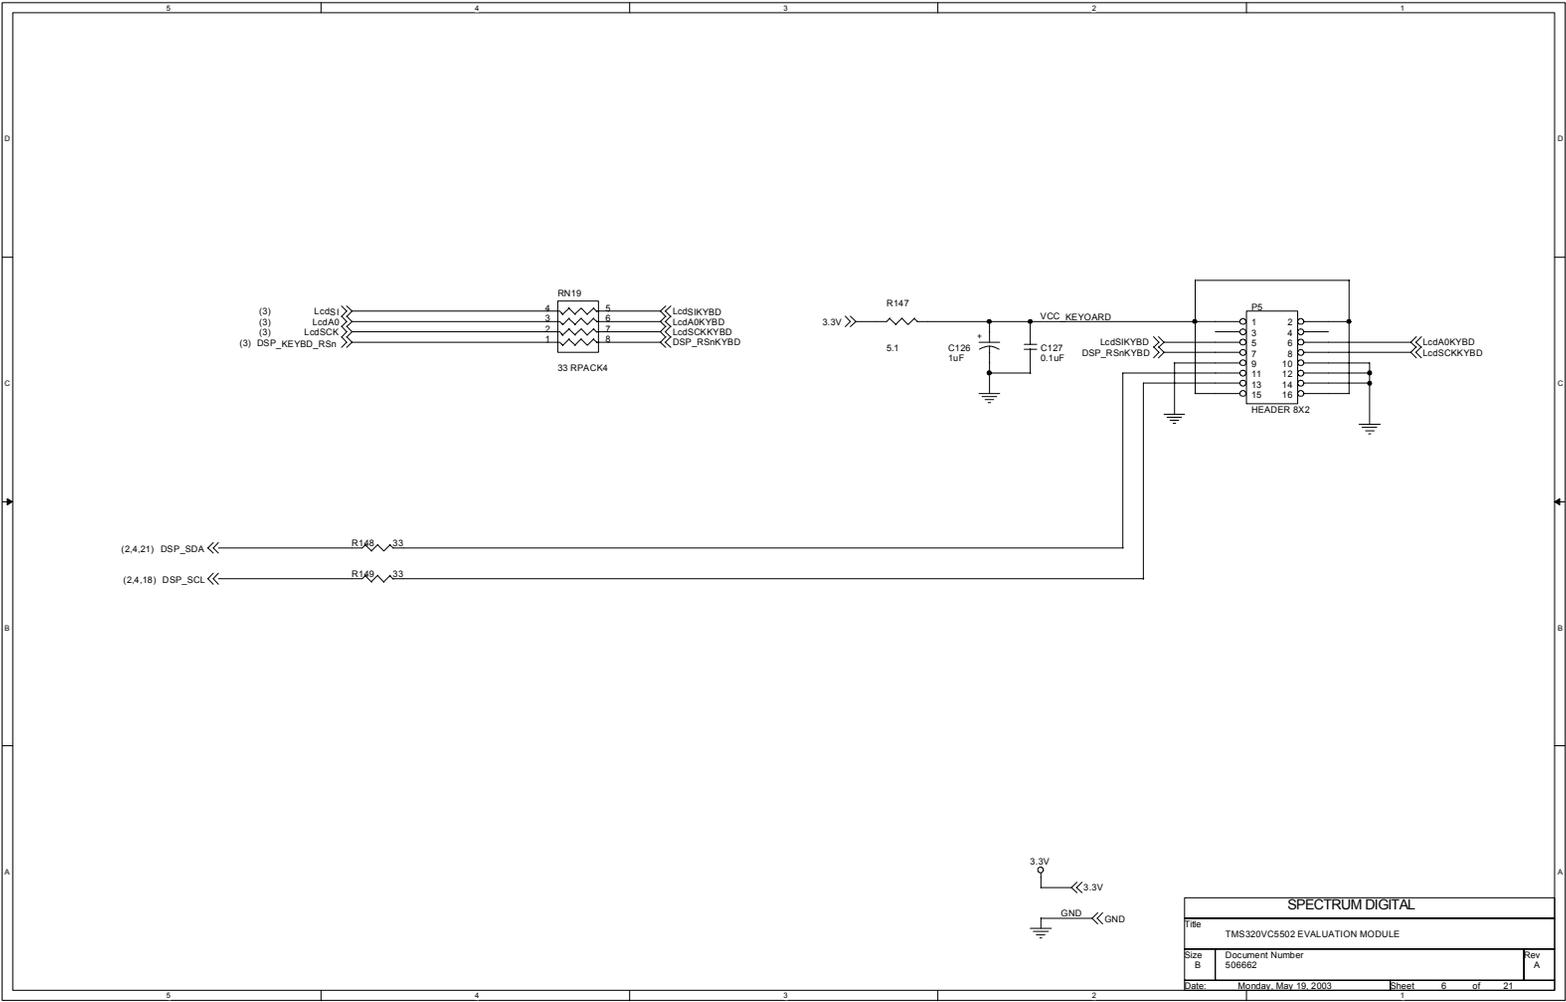


<b>SPECTRUM DIGITAL</b>		
Title TMS320VC5502 EVALUATION MODULE		
Size B	Document Number 506662	Rev A
Date: Monday, May 19, 2003	Sheet 6 of 21	

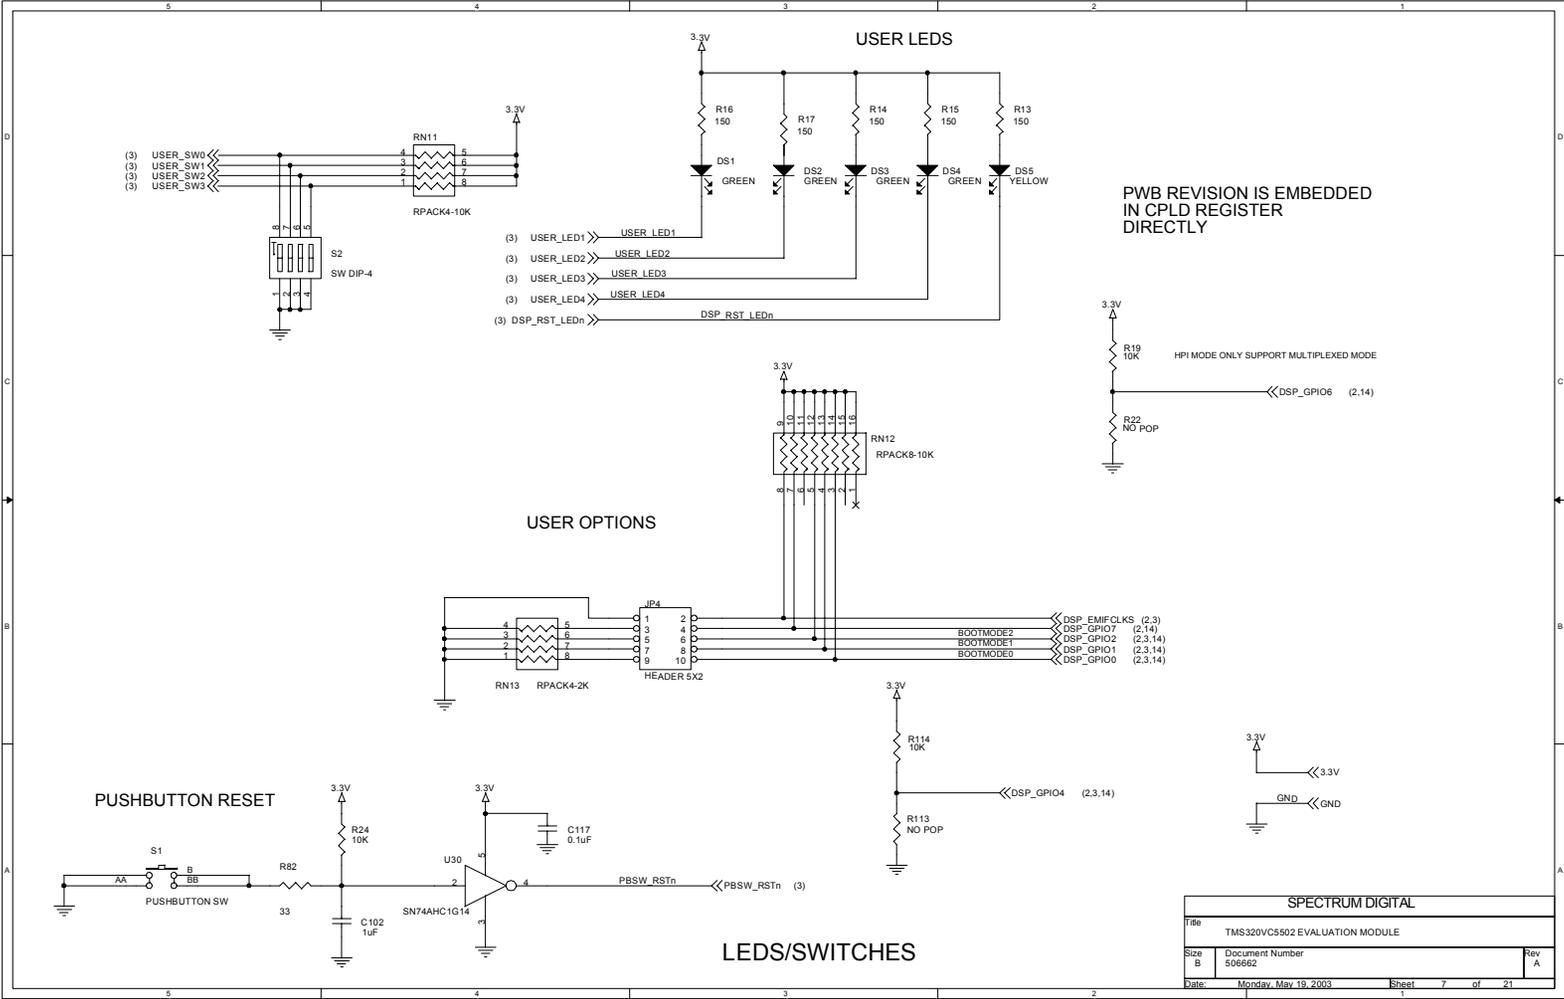


SPECTRUM DIGITAL		
Title	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date	Monday, May 19, 2003	Sheet 7 of 21

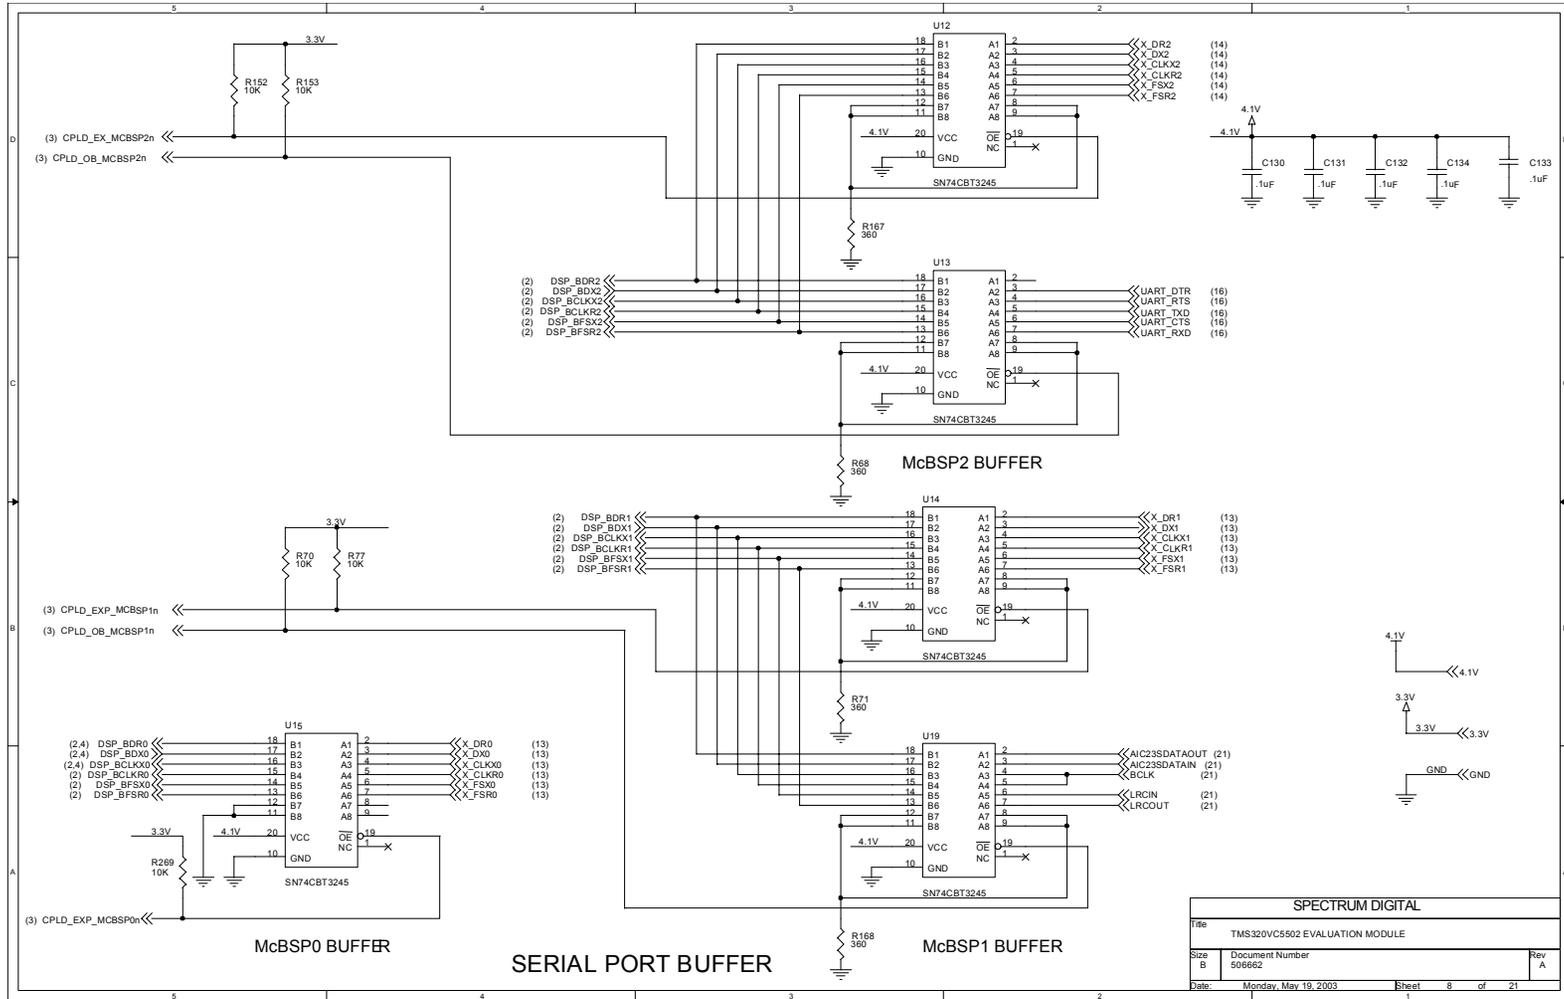


SPECTRUM DIGITAL		
File	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date	Monday, May 19, 2003	Sheet 8 of 21

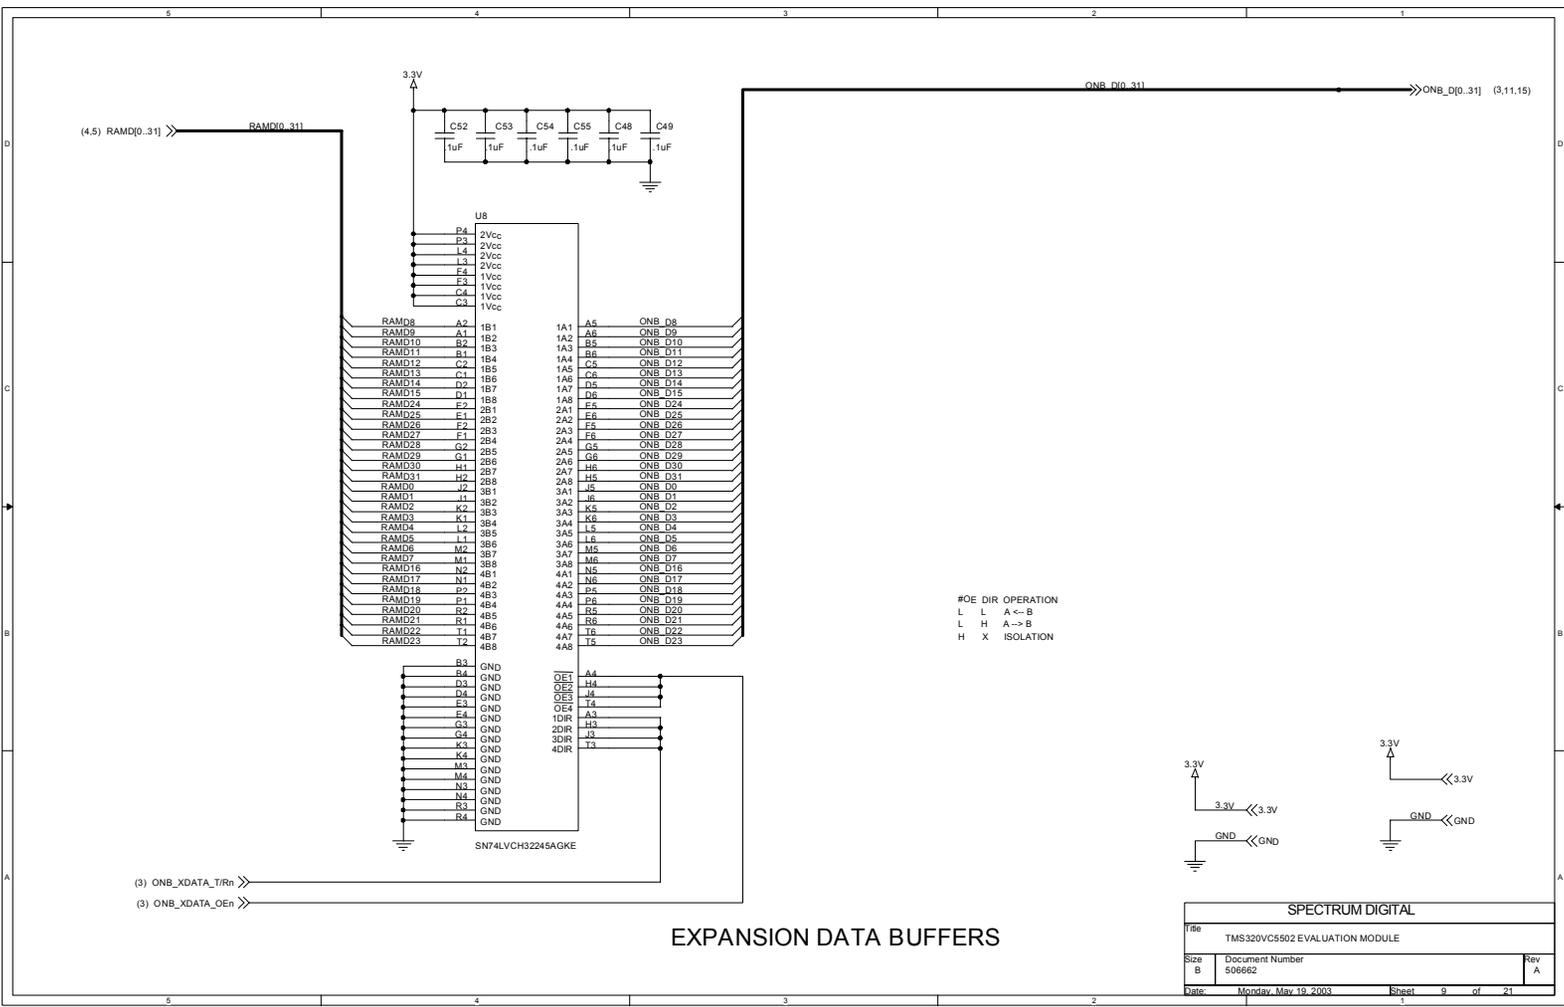

EXPANSION DATA BUFFERS

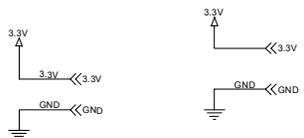


SPECTRUM DIGITAL		
File	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date	Monday, May 19, 2003	Sheet 9 of 21

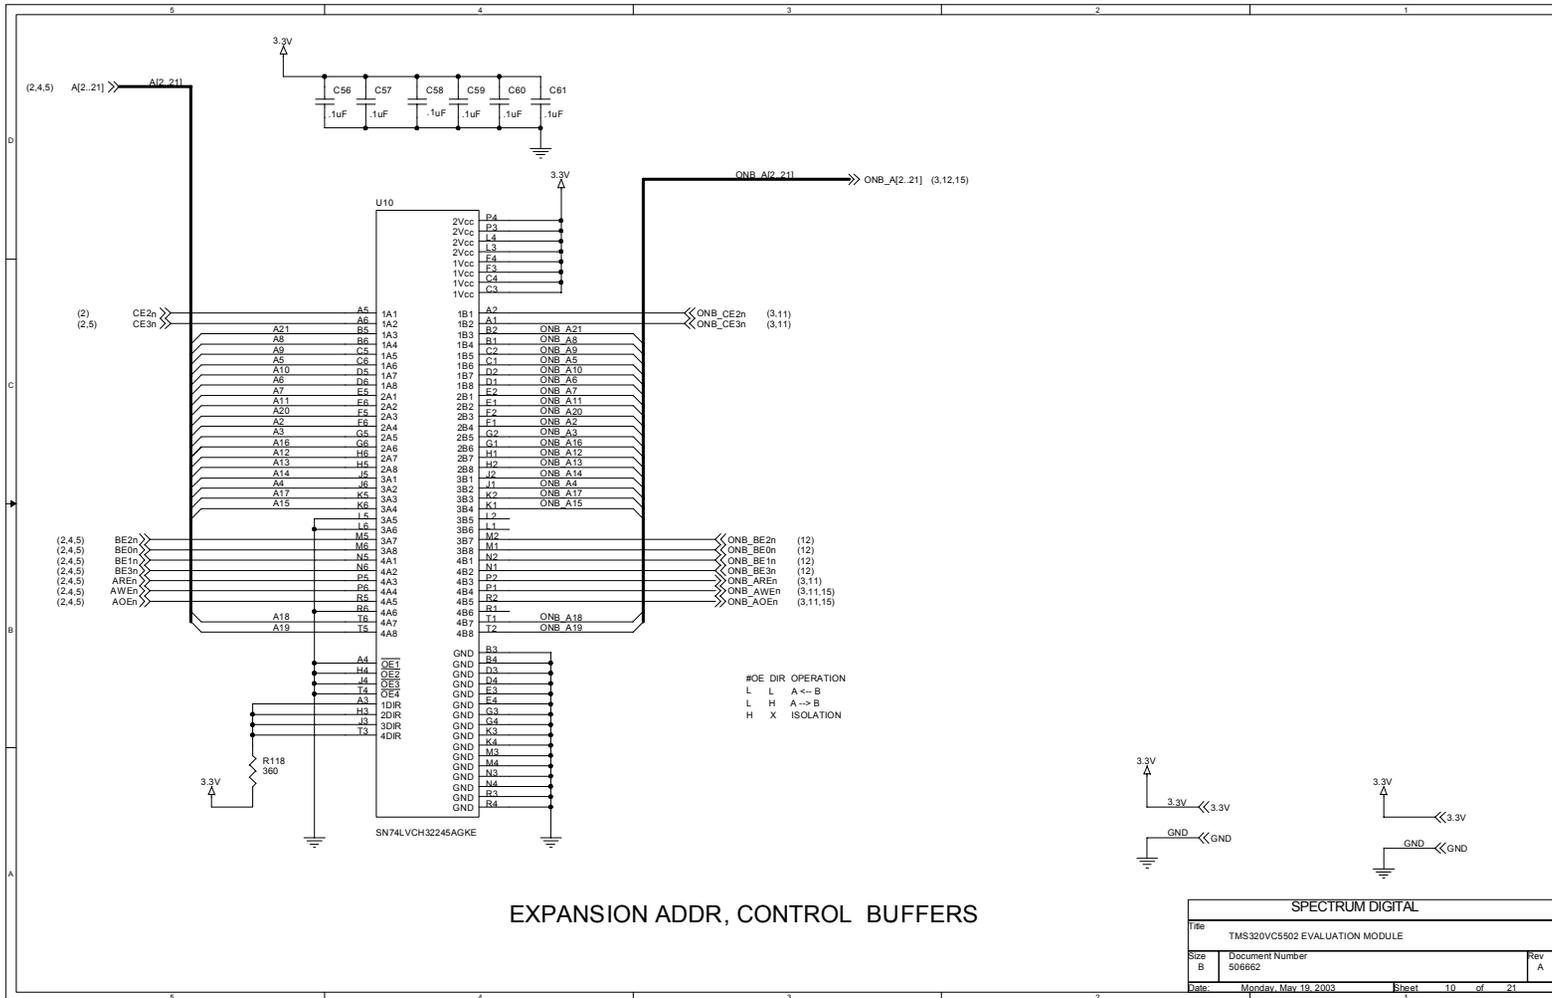


Spectrum Digital, Inc


SPECTRUM DIGITAL		
Title	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date	Monday, May 19, 2003	Sheet 10 of 21

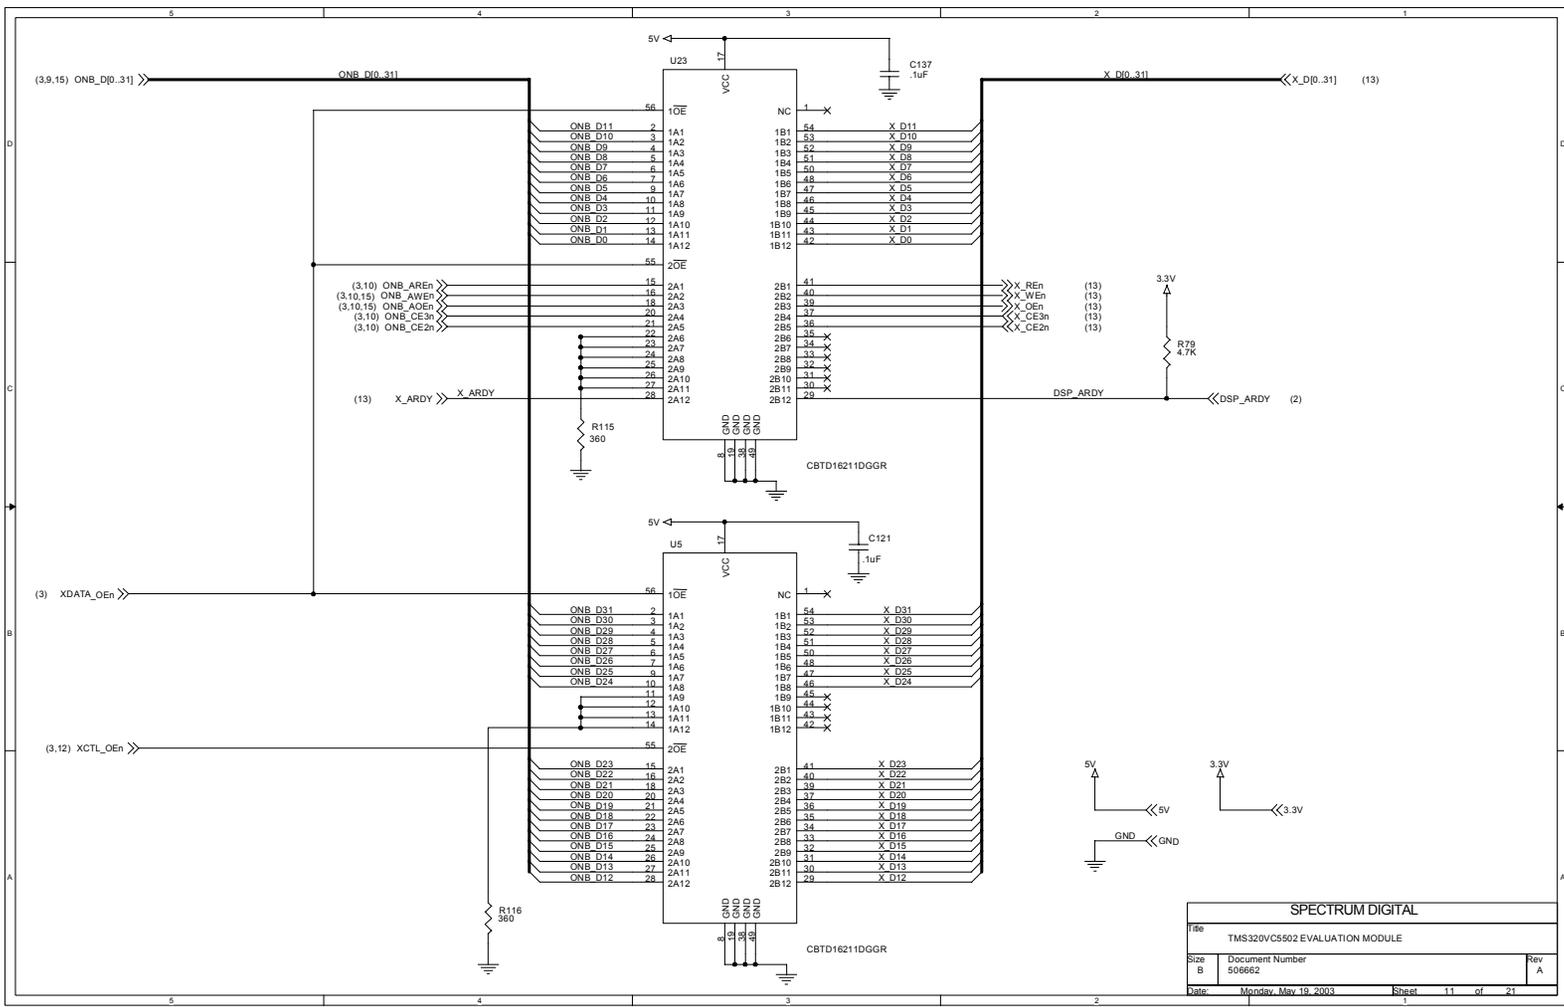


<b>SPECTRUM DIGITAL</b>		
File	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date	Monday, May 19, 2003	Sheet 11 of 21

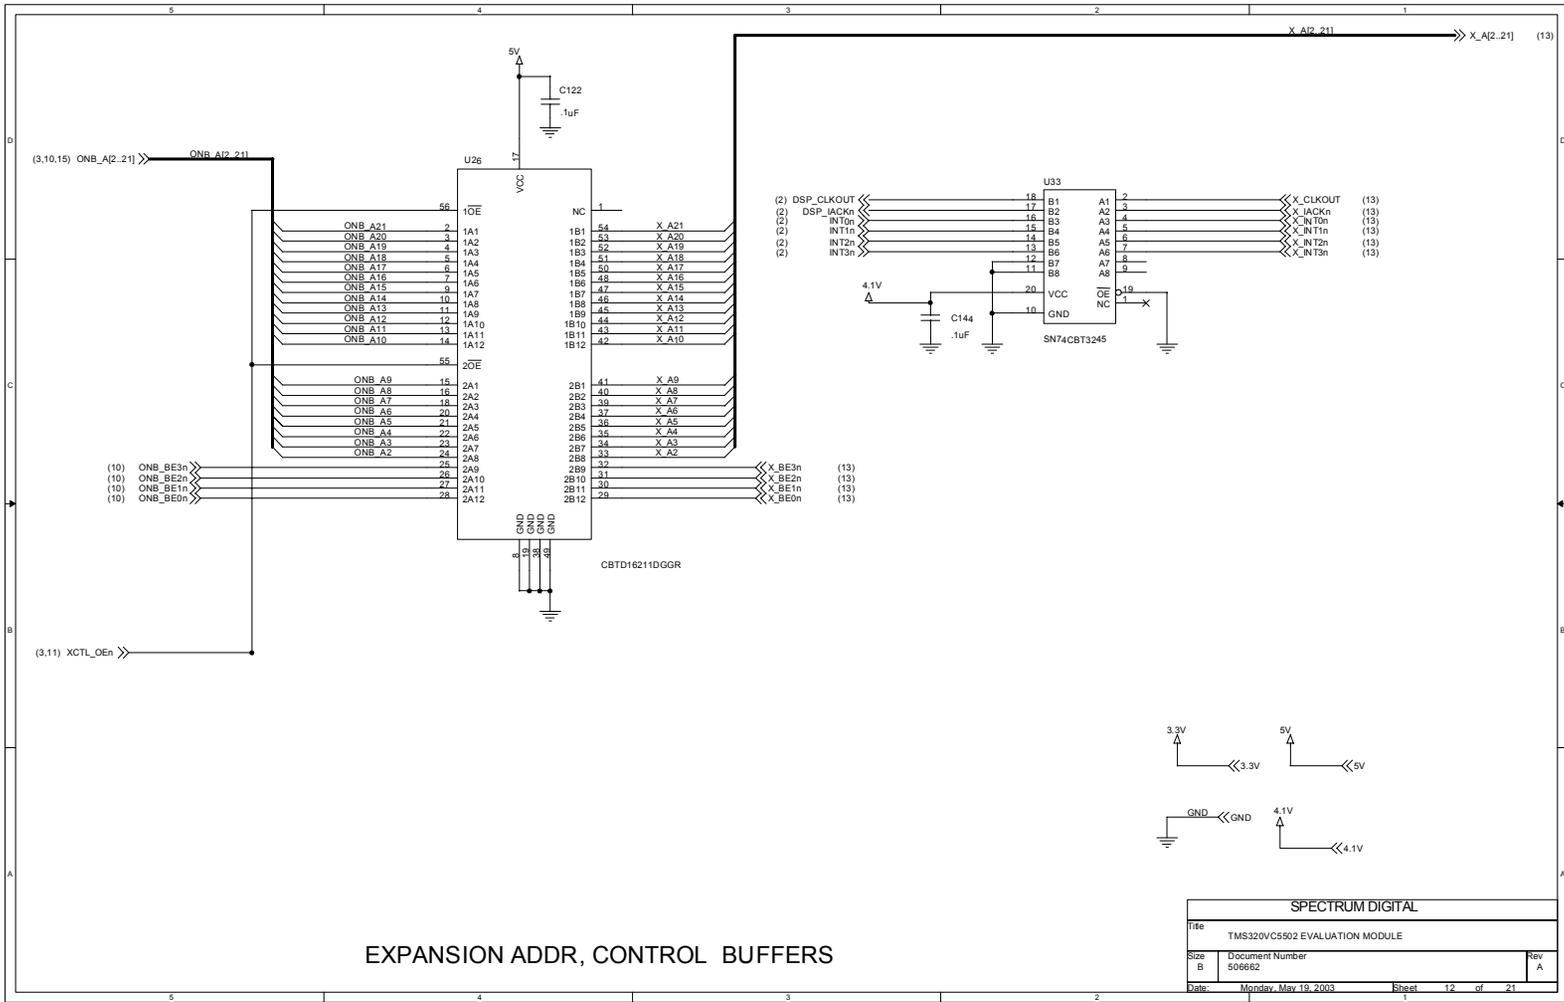


SPECTRUM DIGITAL		
Title	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date	Monday, May 19, 2003	Sheet 12 of 21

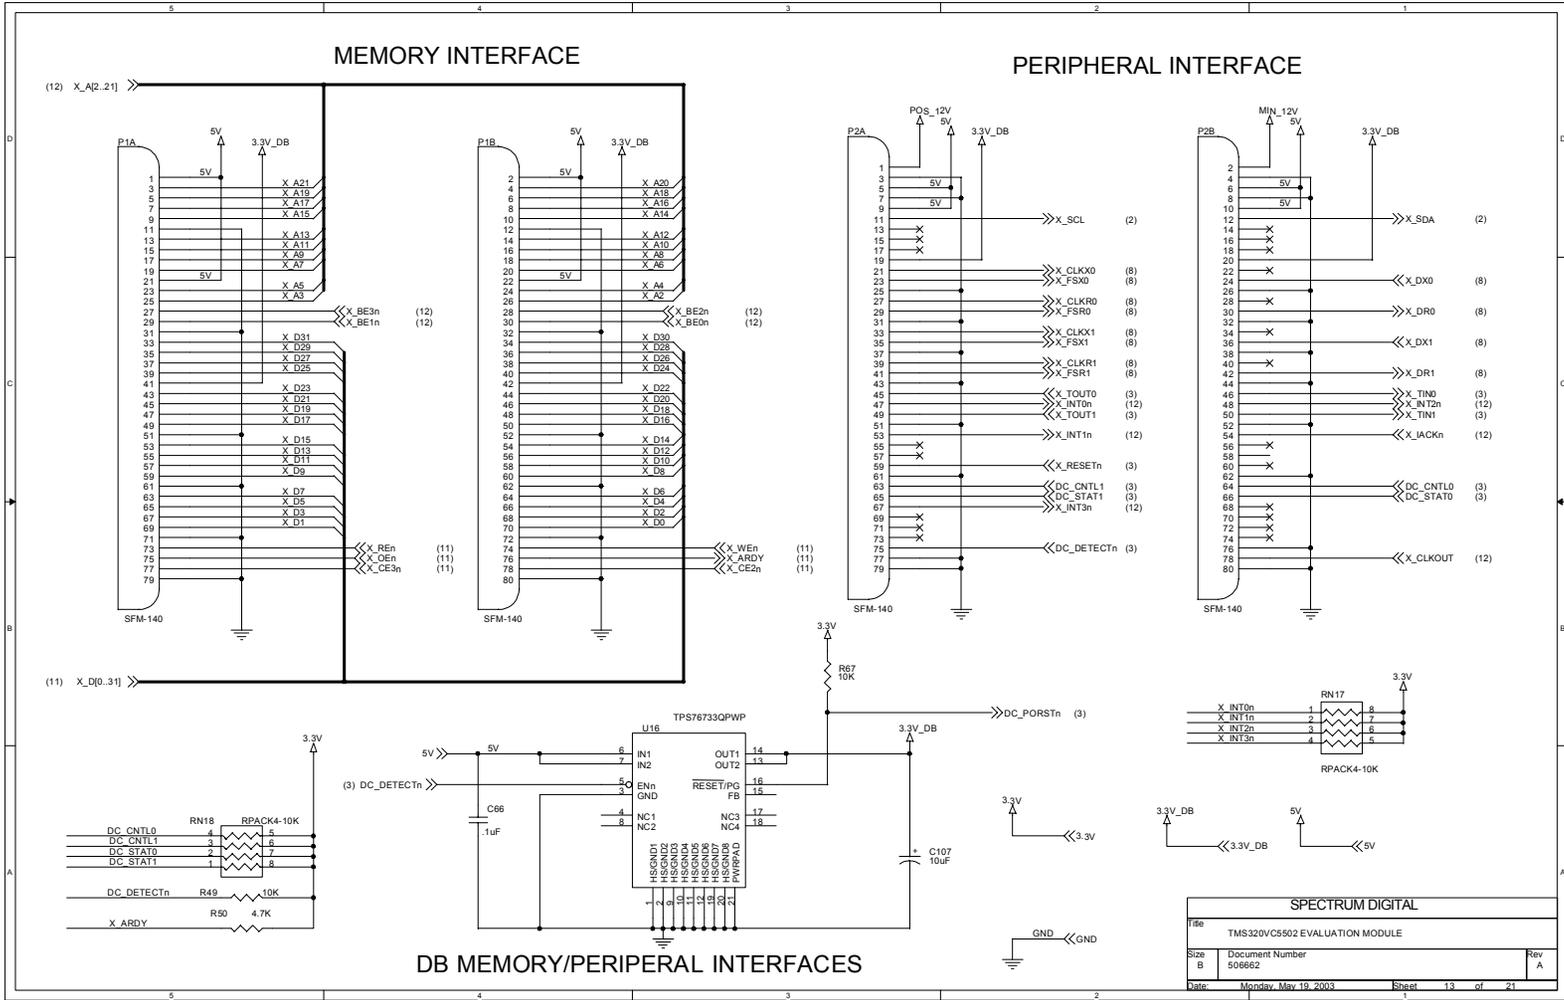


SPECTRUM DIGITAL		
File	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date	Monday, May 19, 2003	Sheet 13 of 21

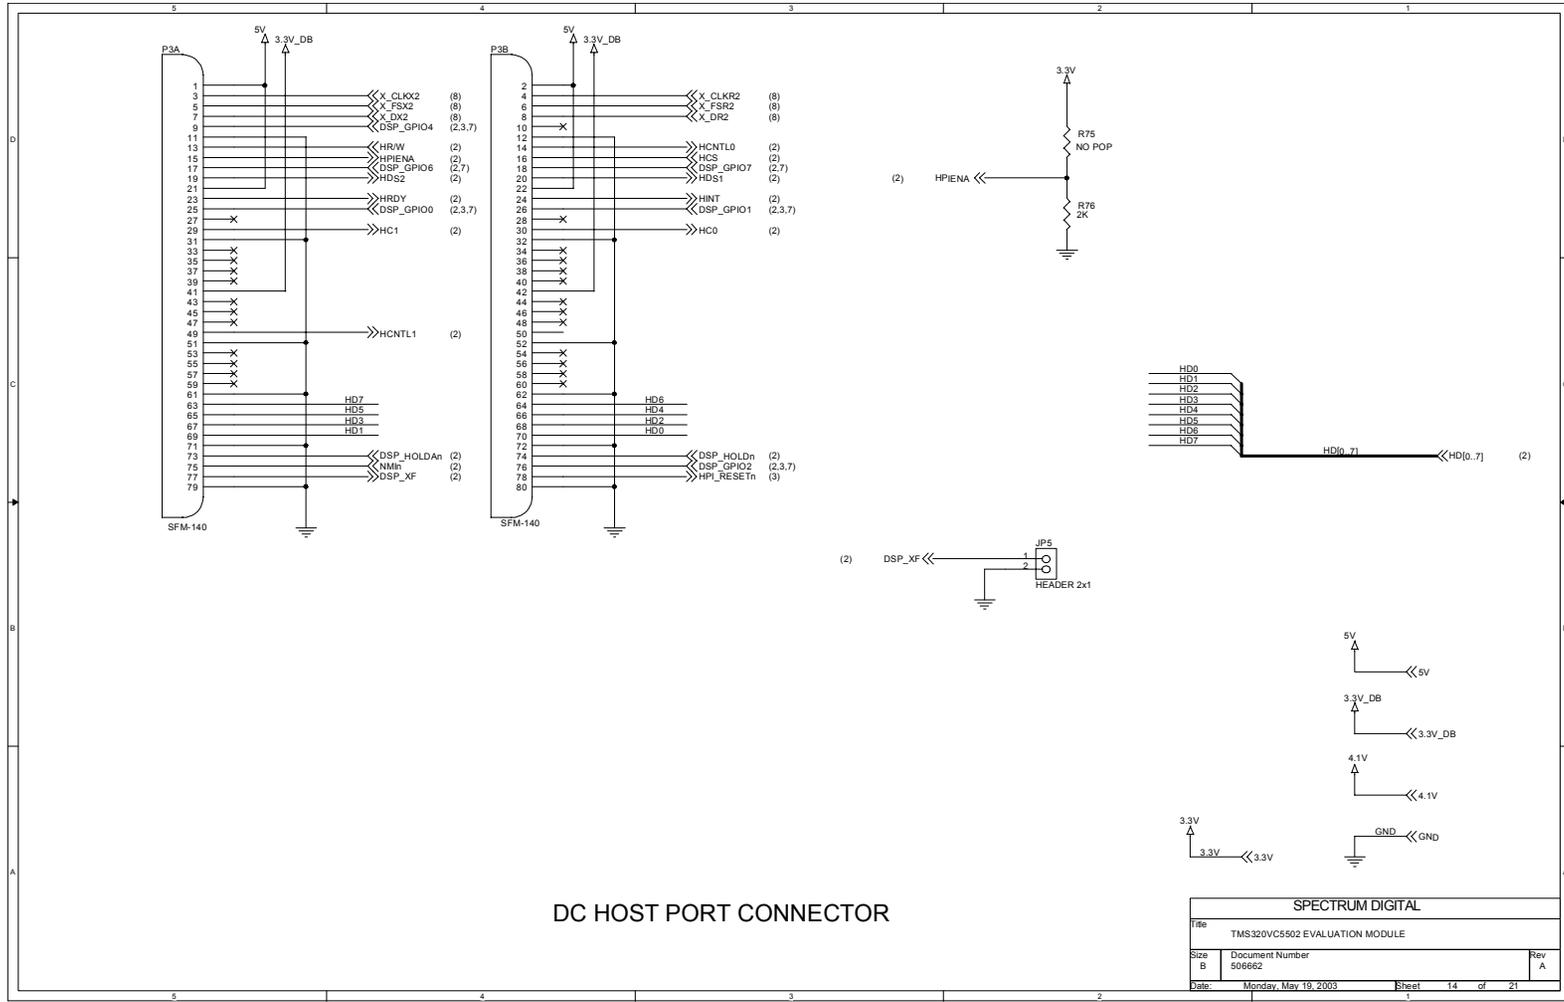

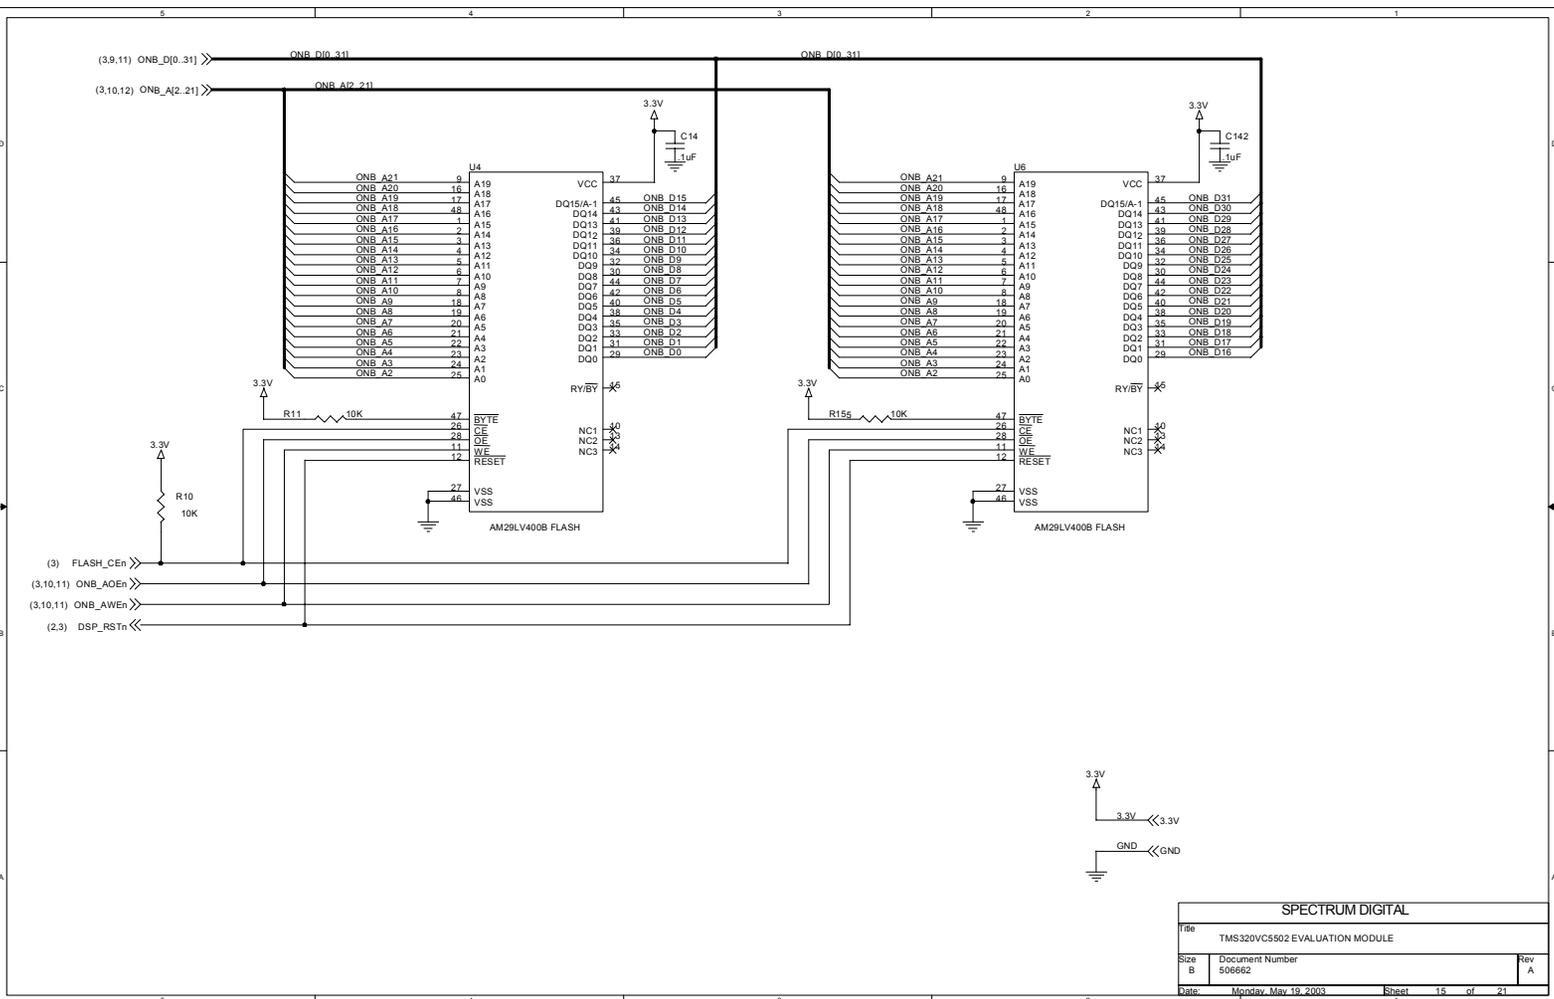



SPECTRUM DIGITAL		
File	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date:	Monday, May 19, 2003	Sheet 15 of 21

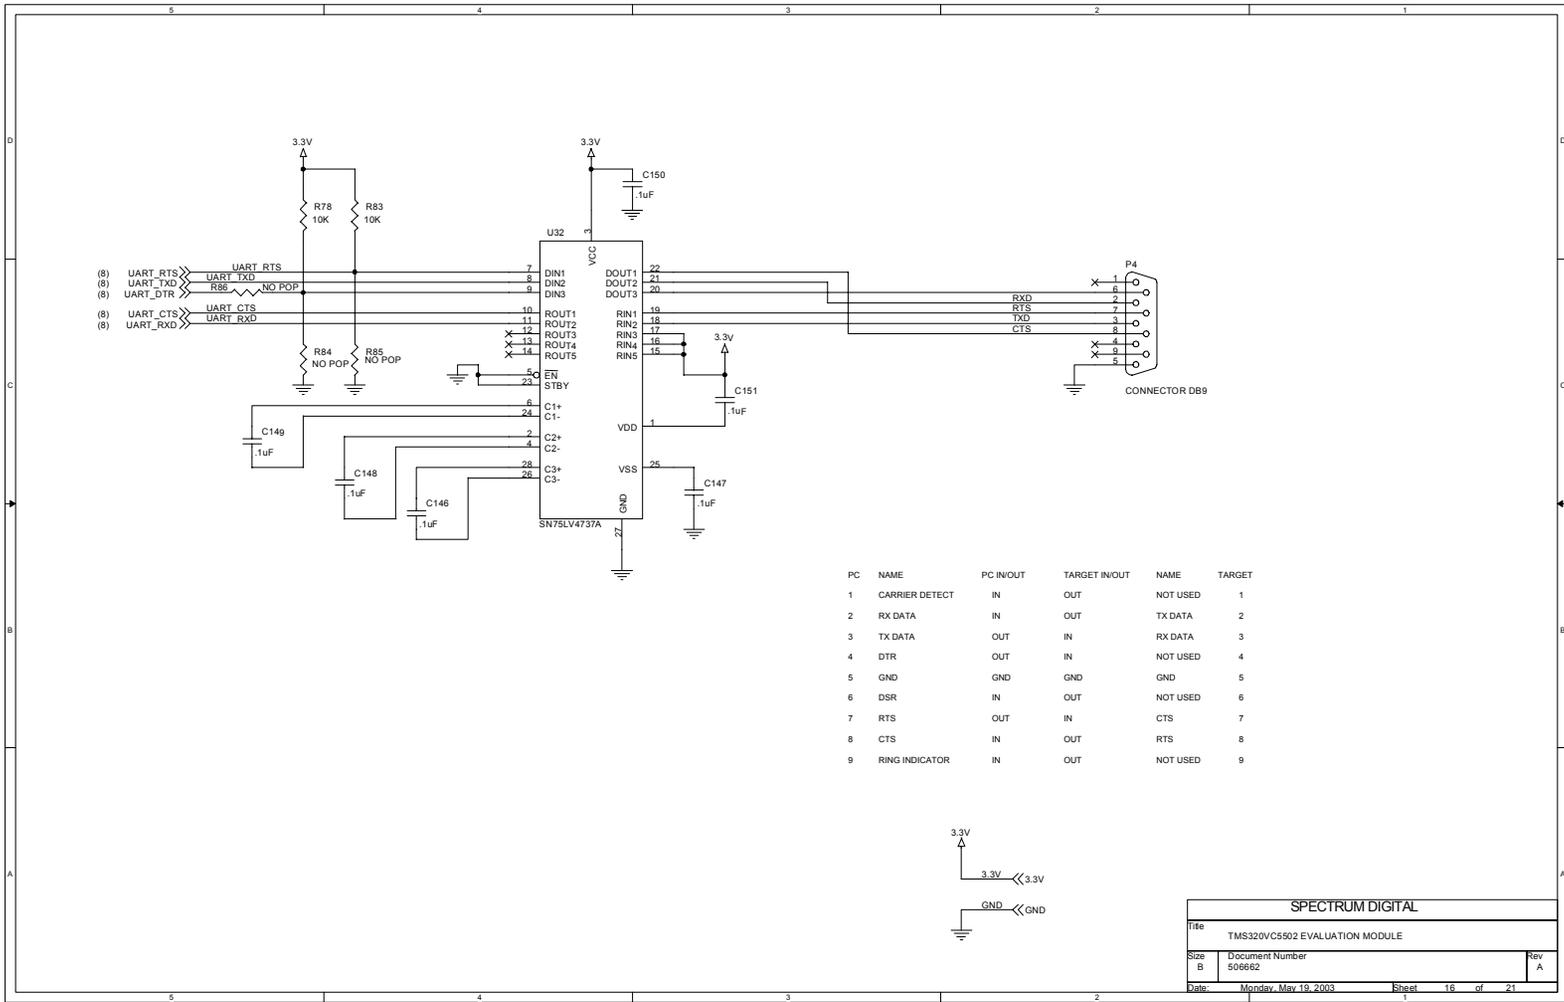


Spectrum Digital, Inc


SPECTRUM DIGITAL		
Title TMS320VC5502 EVALUATION MODULE		
Size B	Document Number 506662	Rev A
Date Monday, May 19, 2003	Sheet 16	of 21

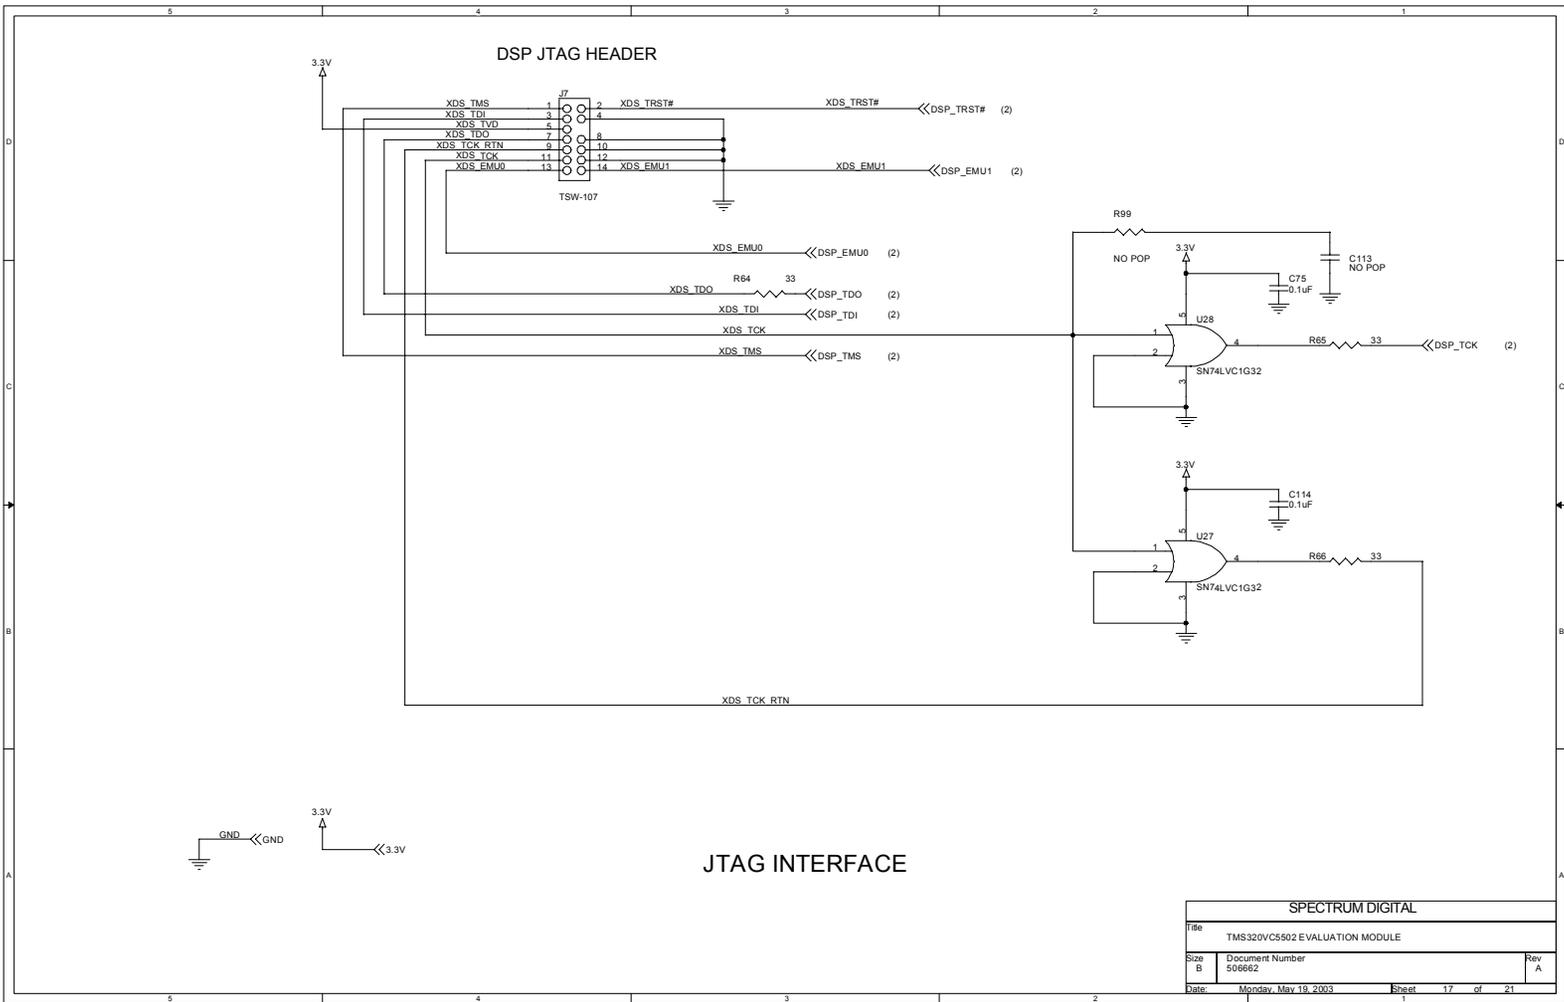


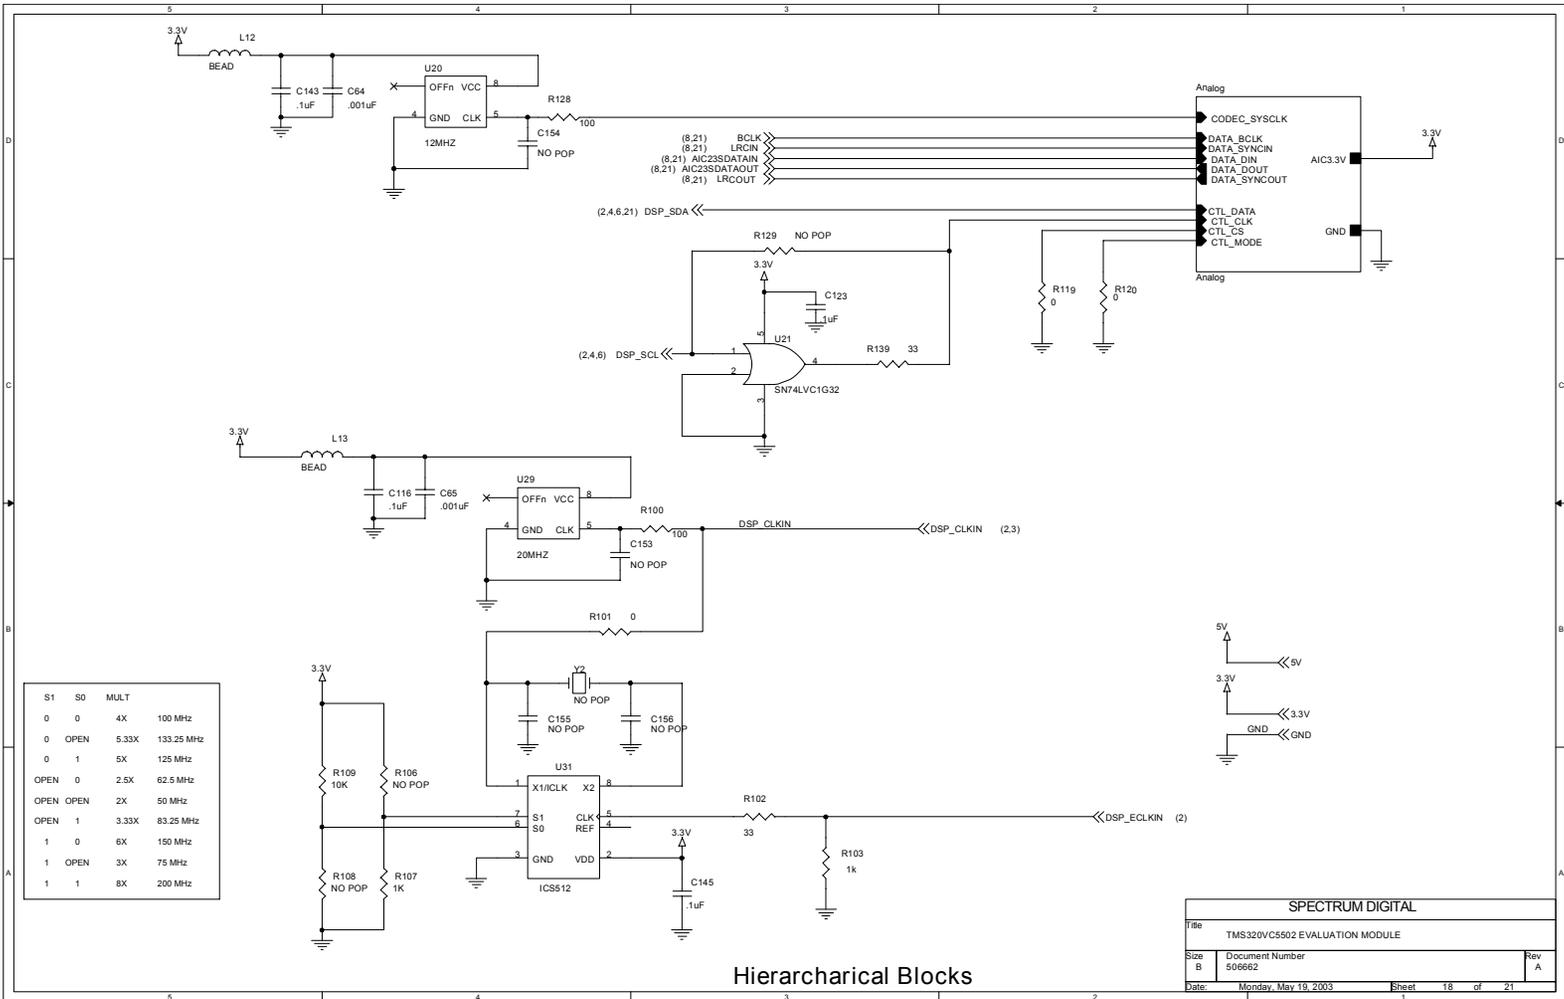

SPECTRUM DIGITAL		
Title	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date:	Monday, May 19 2003	Sheet 18 of 21

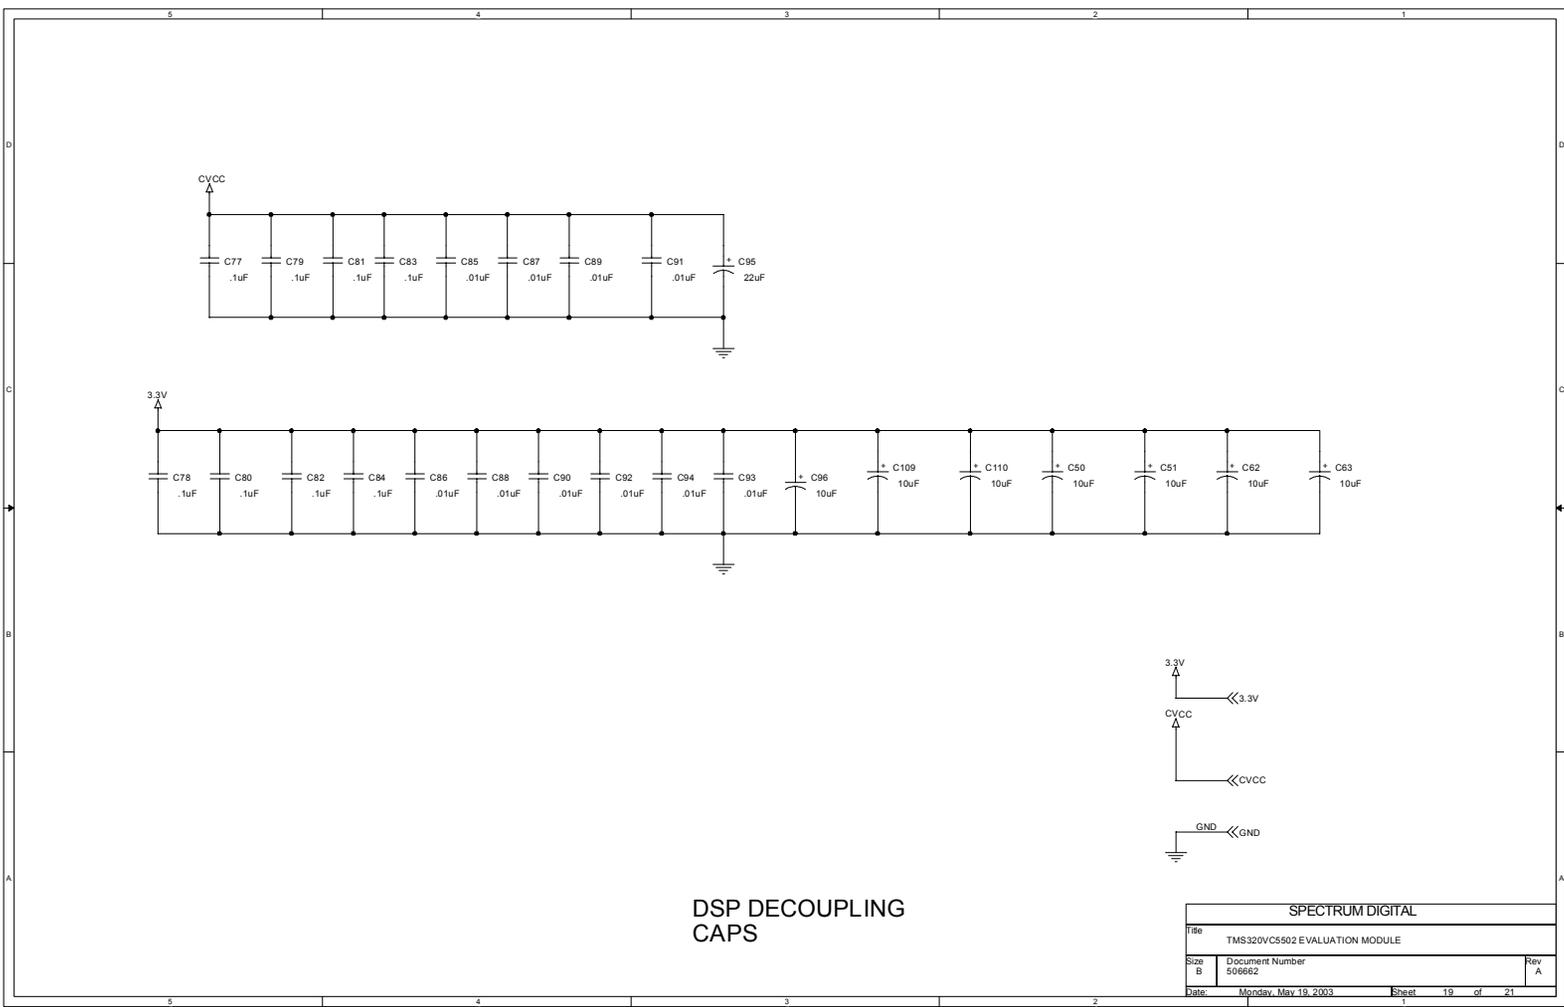


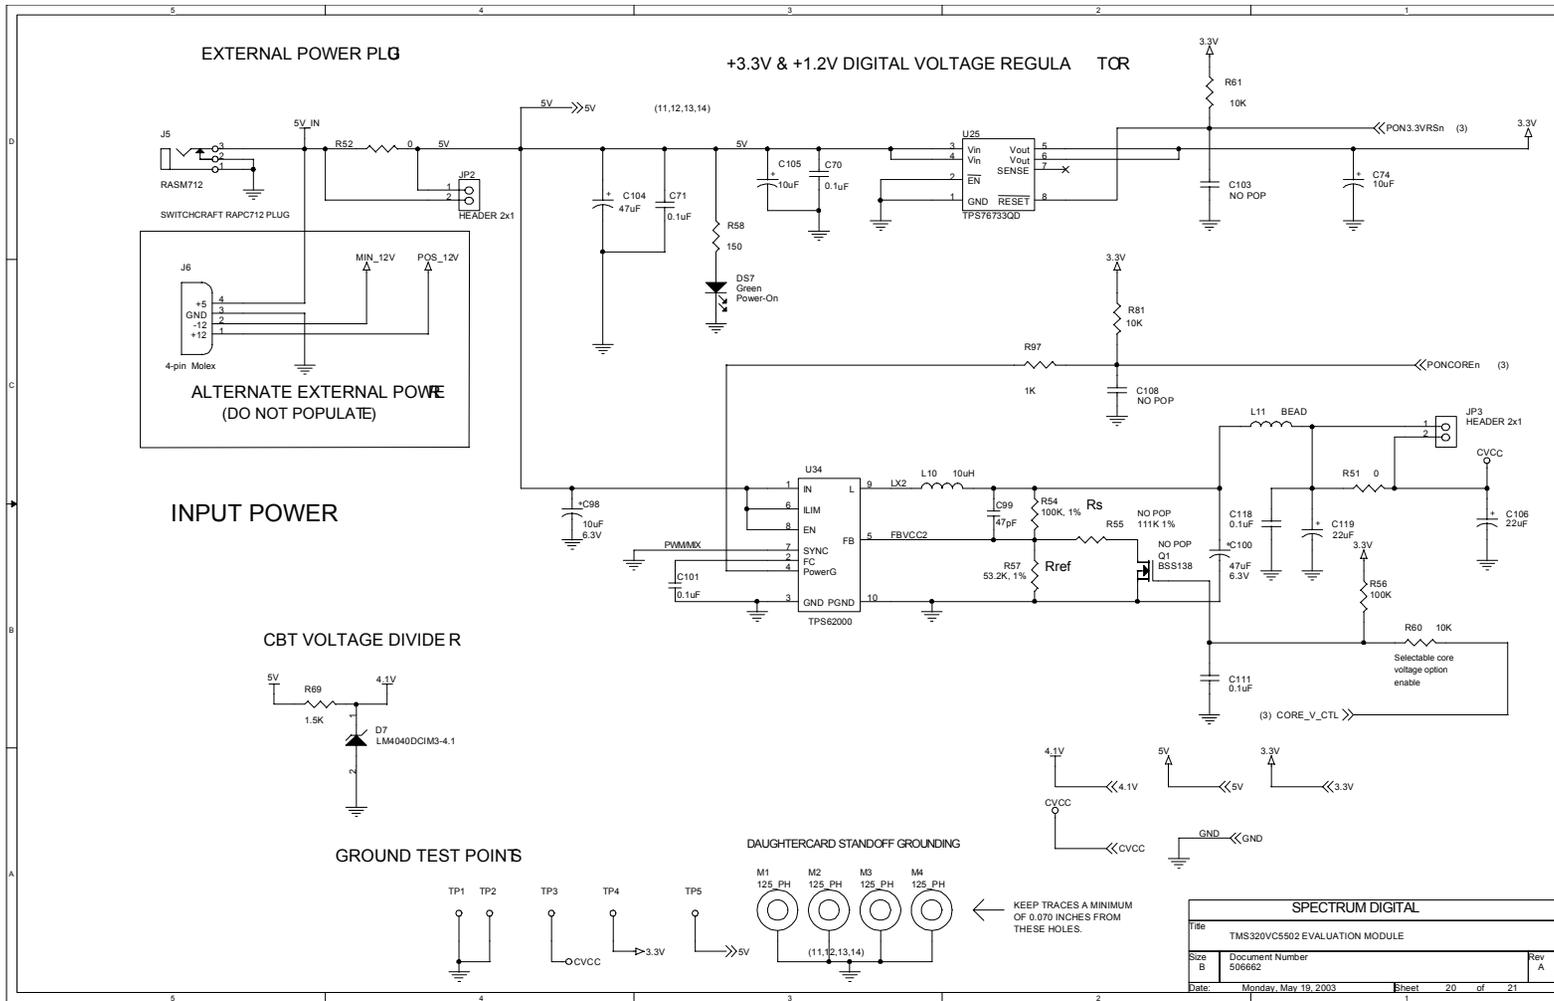

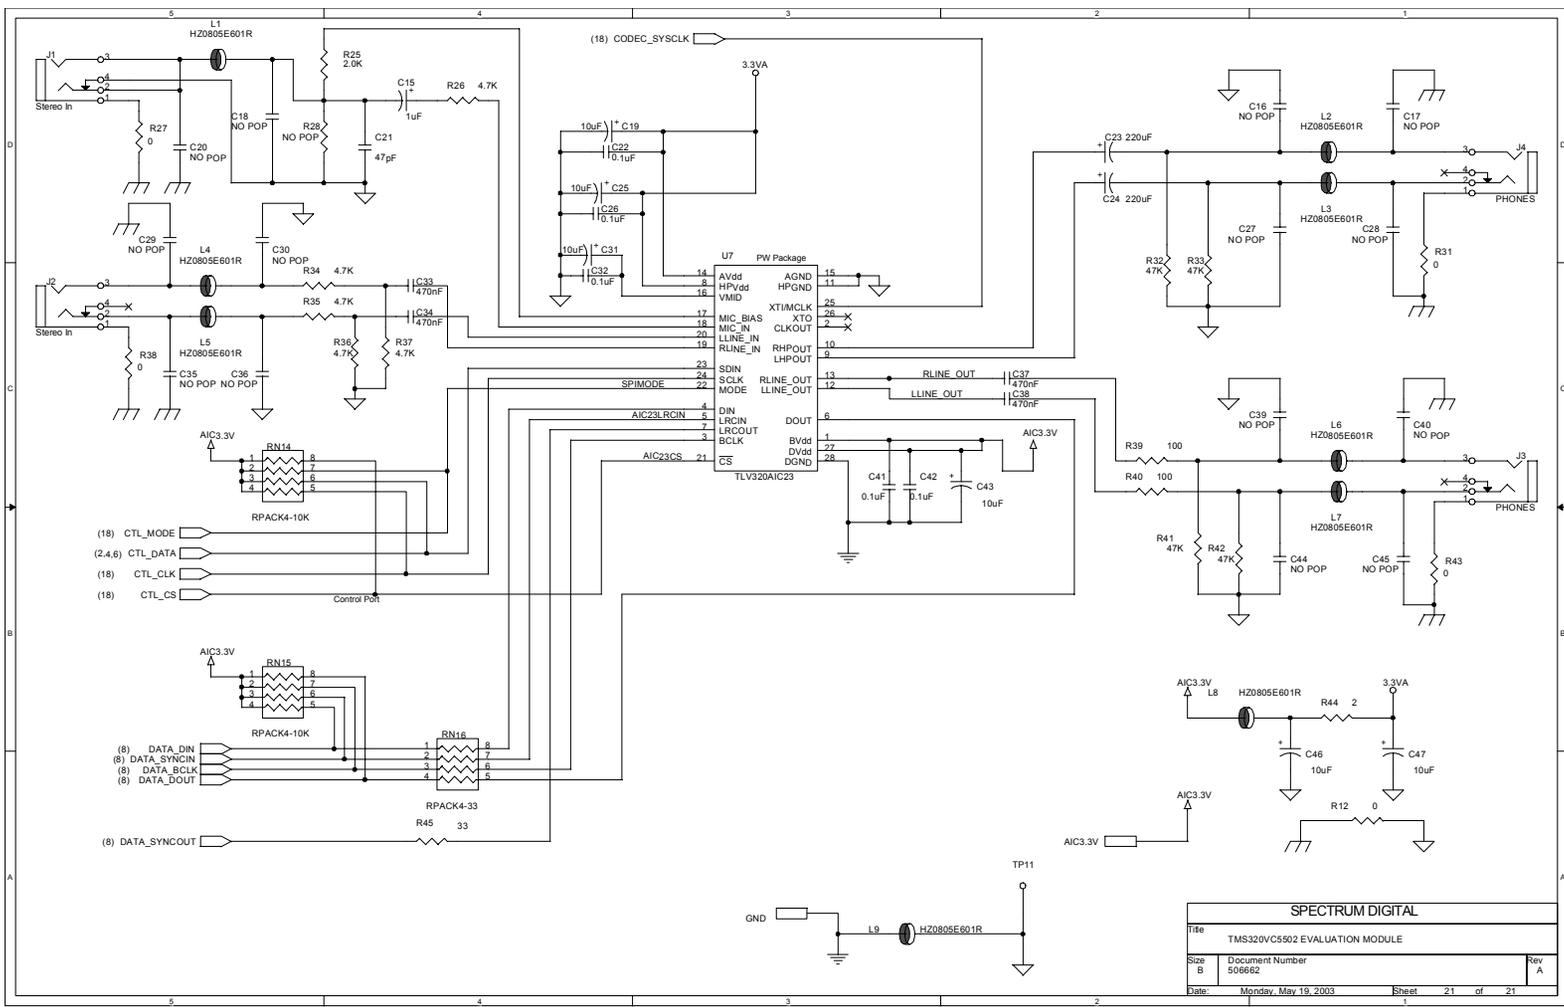



SPECTRUM DIGITAL		
Title	TMS320VC5502 EVALUATION MODULE	
Size	Document Number	Rev
B	506662	A
Date	Monday, May 19, 2003	Sheet 21 of 21



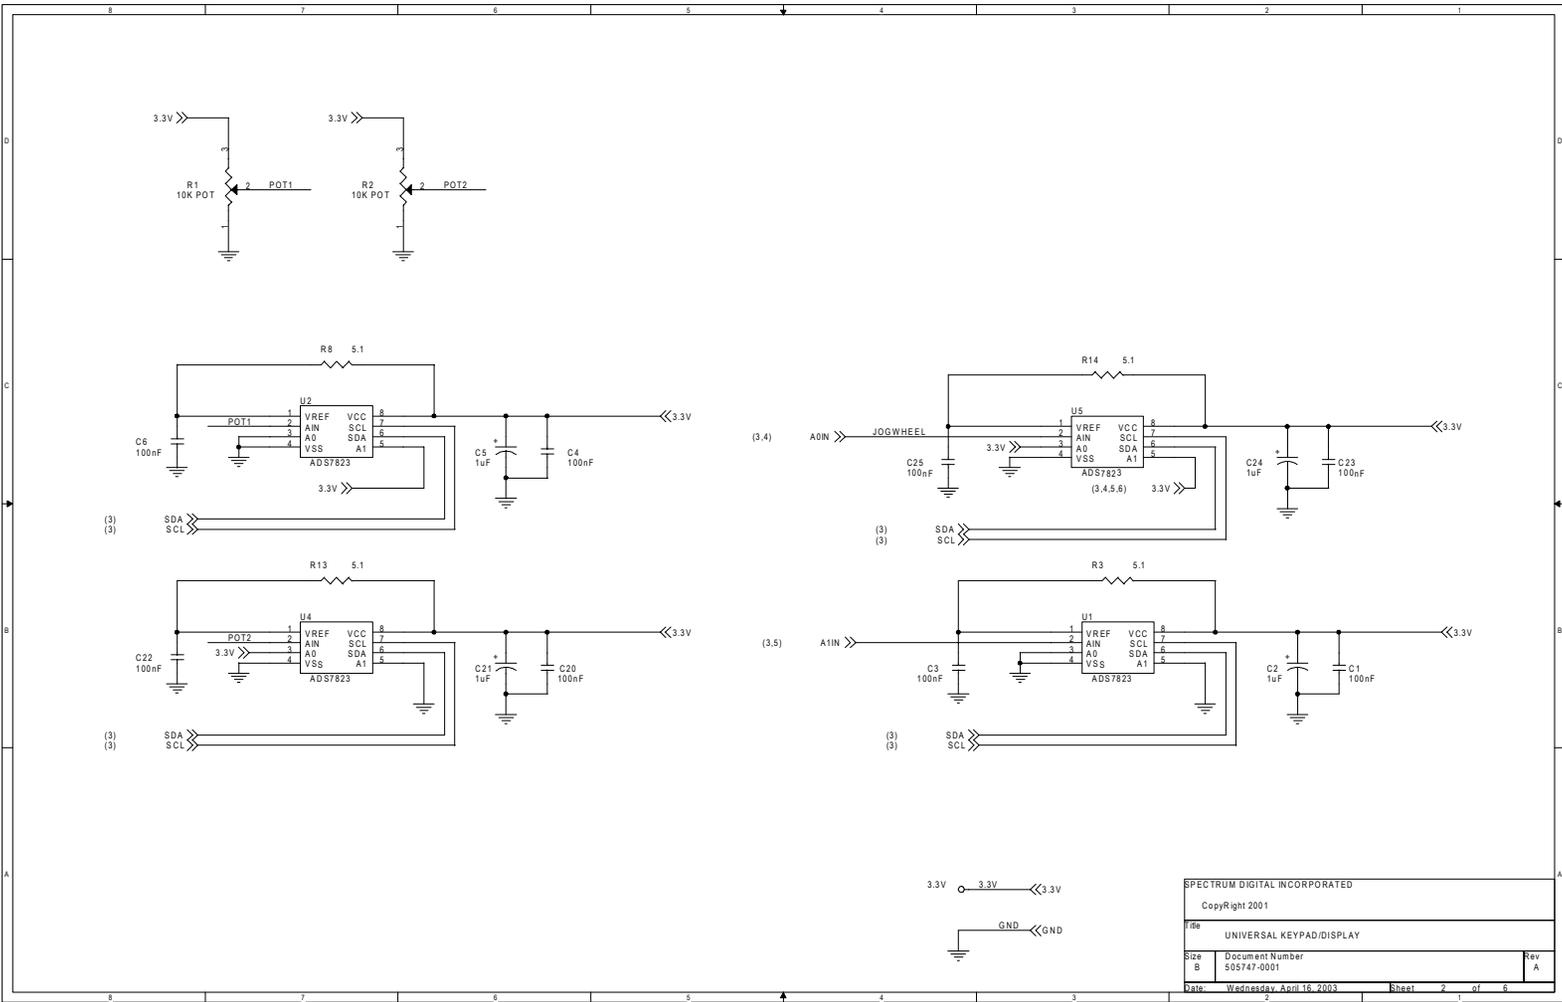




SPECTRUM DIGITAL INCORPORATED	
Copyright 2001	
File UNIVERSAL KEYPAD/DISPLAY	
Size B	Document Number 505747-0001
Date Wednesday, April 16, 2003	Sheet 2 of 6
	Rev A

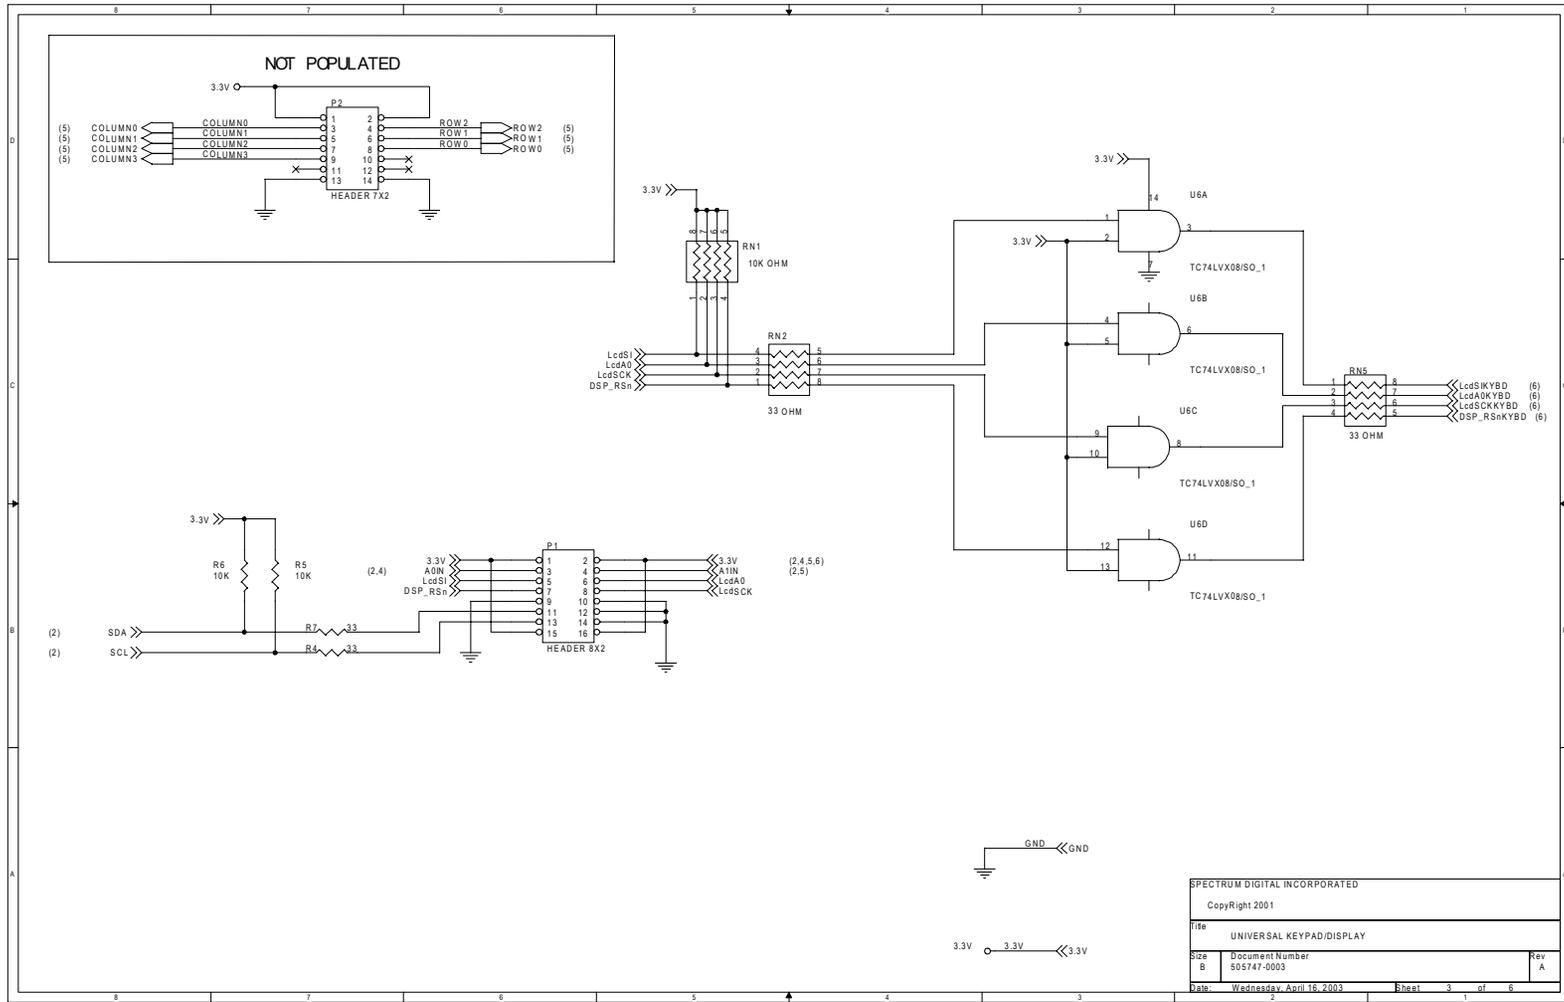

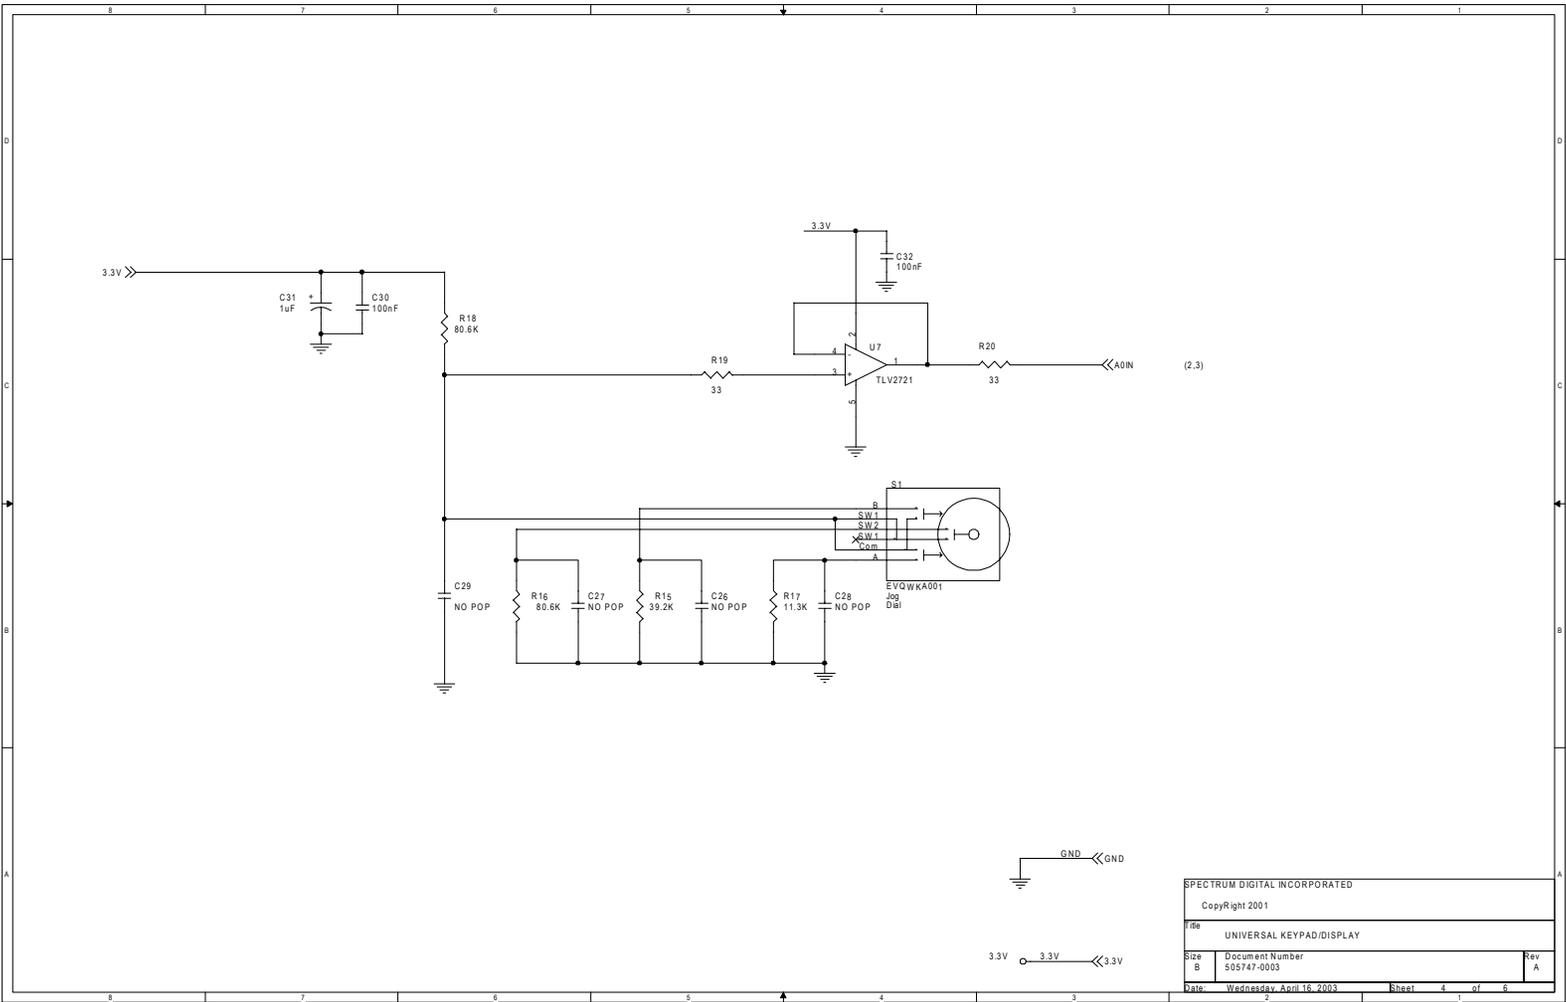

SPECTRUM DIGITAL INCORPORATED	
CopyRight 2001	
File UNIVERSAL KEYPAD/DISPLAY	
Size B	Document Number 505747-0003
Date Wednesday, April 16, 2003	Sheet 4 of 6
	Rev A

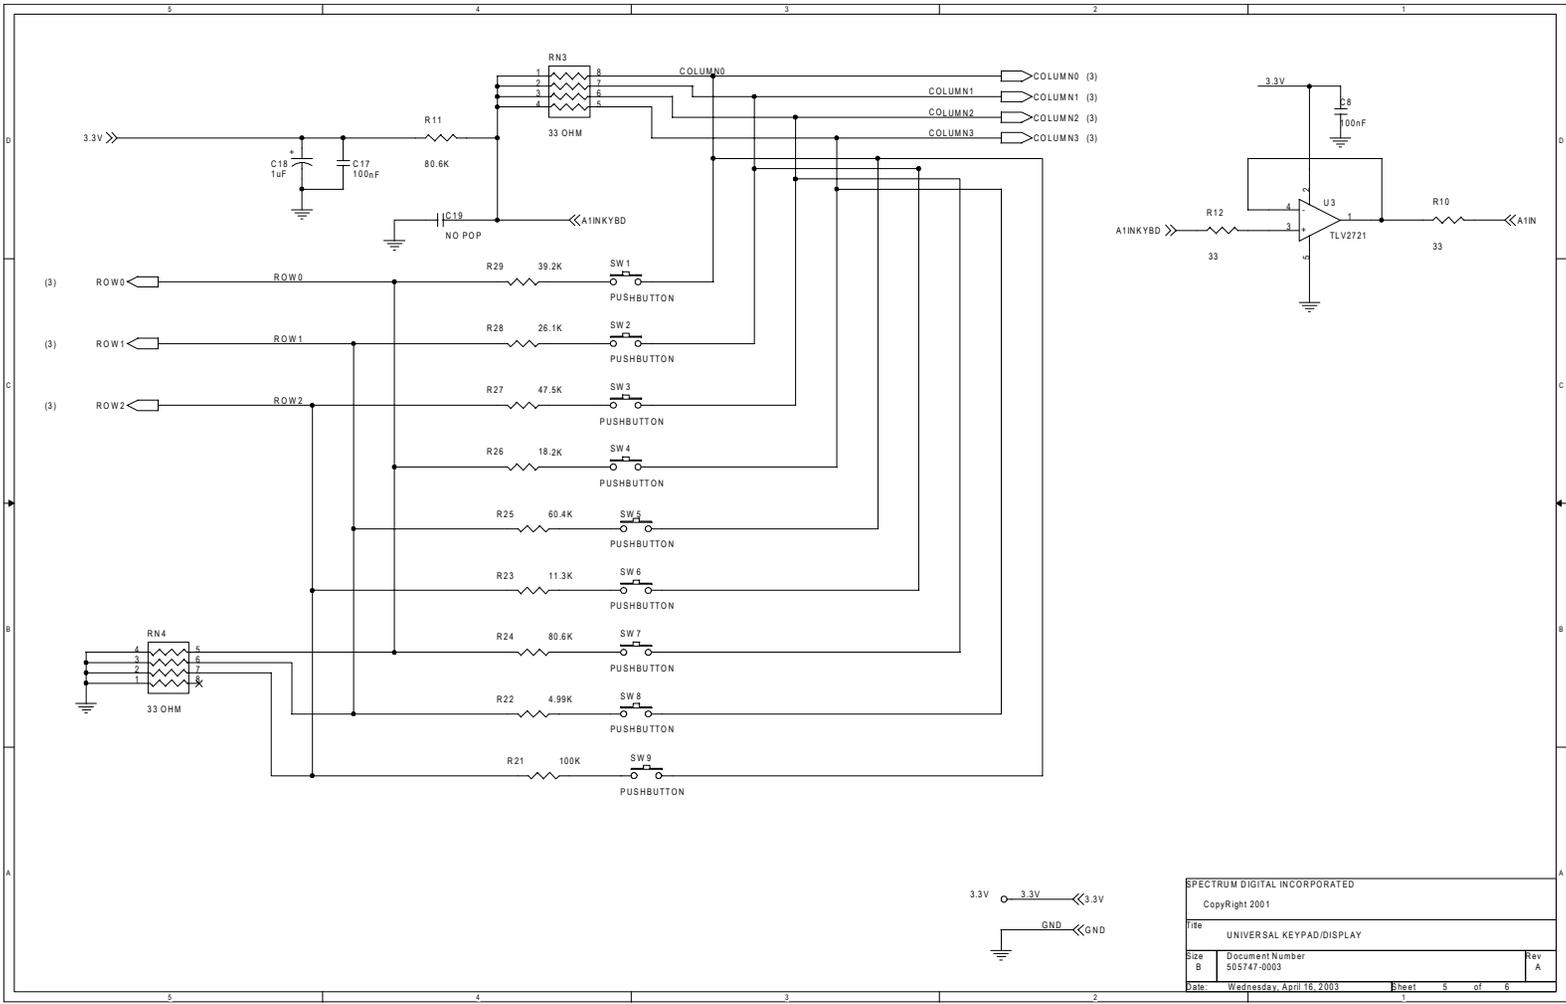

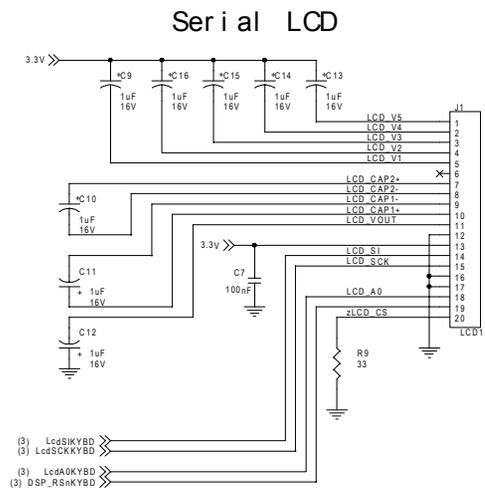

SPECTRUM DIGITAL INCORPORATED		
Copyright 2001		
Title UNIVERSAL KEYPAD/DISPLAY		
Size B	Document Number 605747-0003	Rev A
Date: Wednesday, April 16, 2003	Sheet 6	of 6

# Appendix B

## Mechanical Information


---


---

---

This appendix contains the mechanical information about the TMS320VC5502 EVM and Keypad/display Module produced by Spectrum Digital.

<b>Topic</b>	<b>Page</b>
B.1 TMS320VC5502 EVM Mechanical Information	B-2
B.2 Keypad/display Module Mechanical Information	B-3

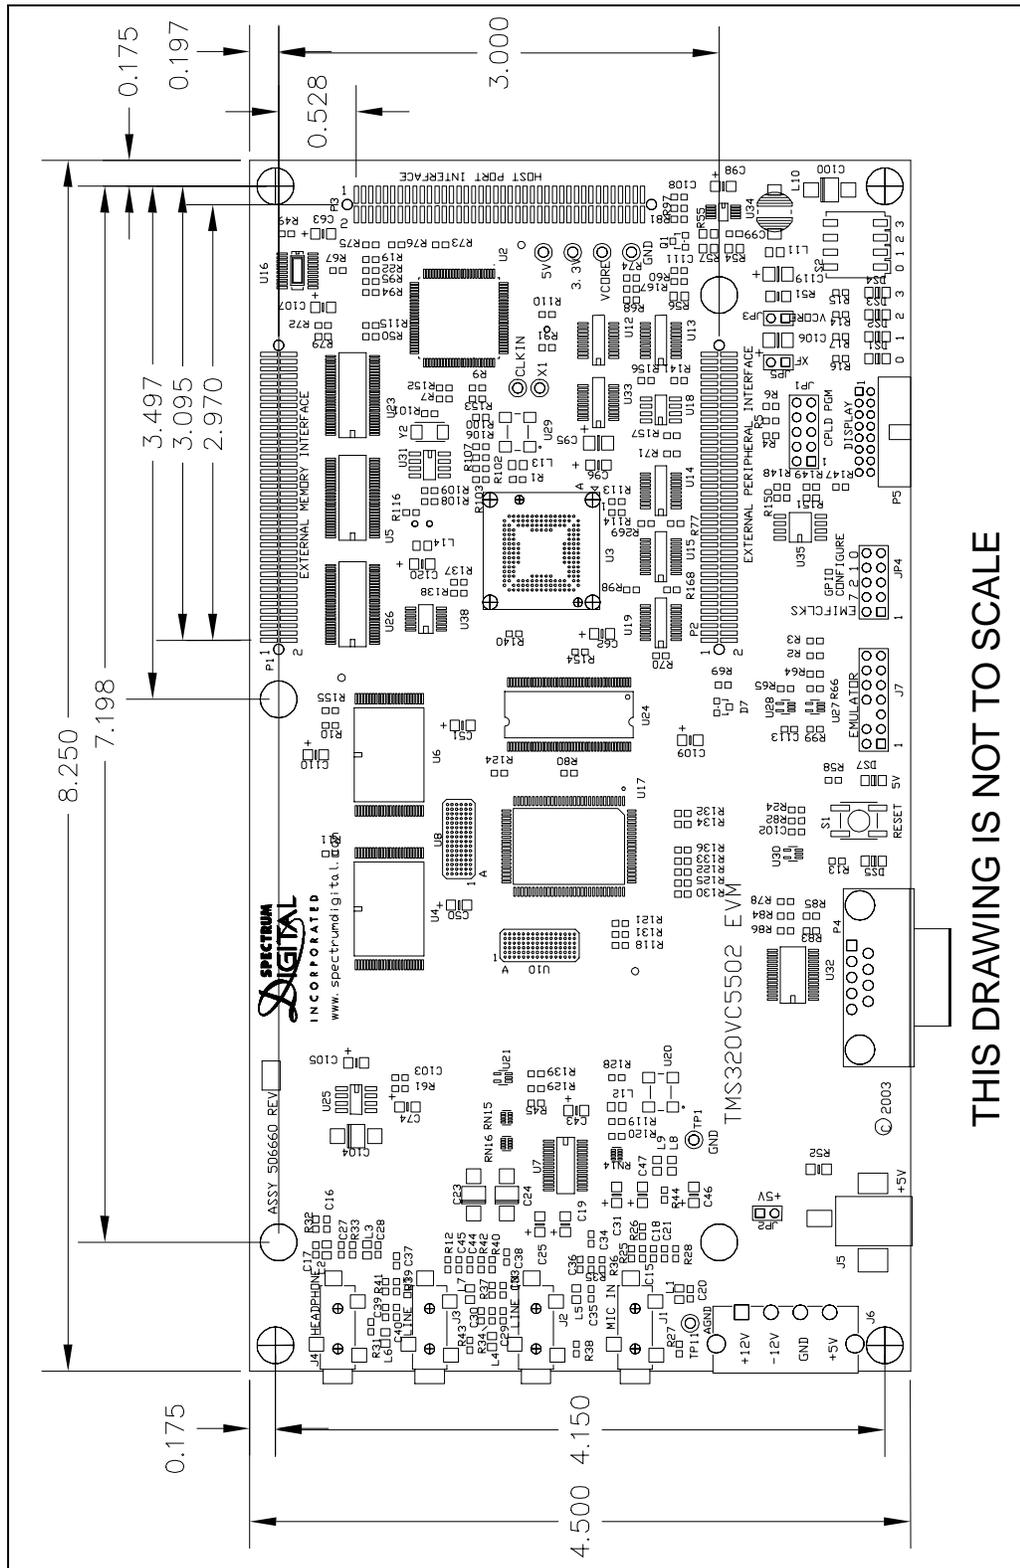


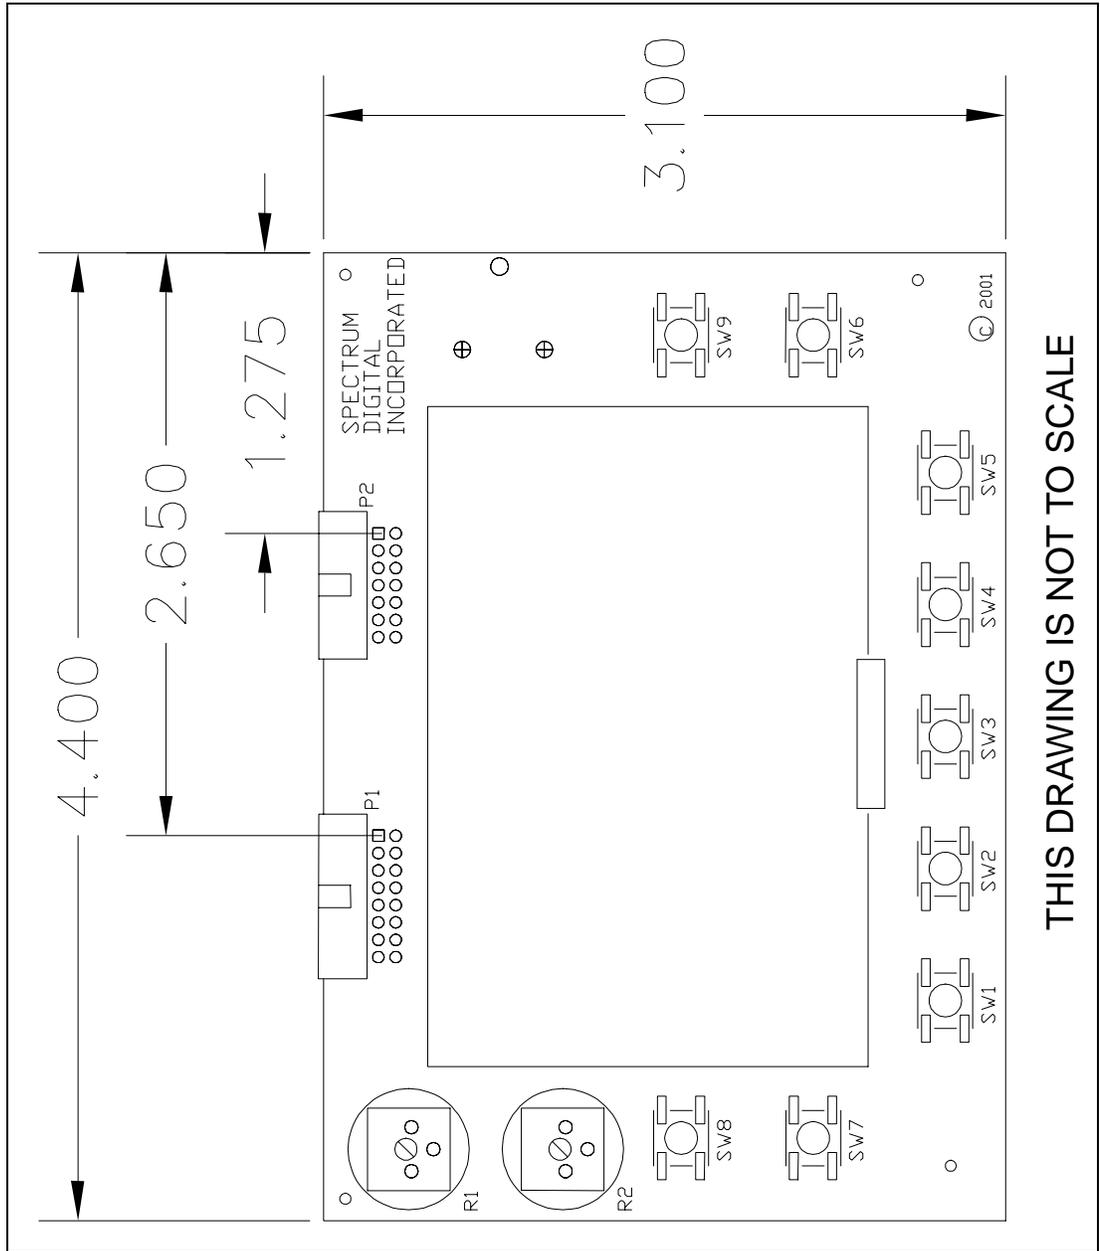

THIS DRAWING IS NOT TO SCALE





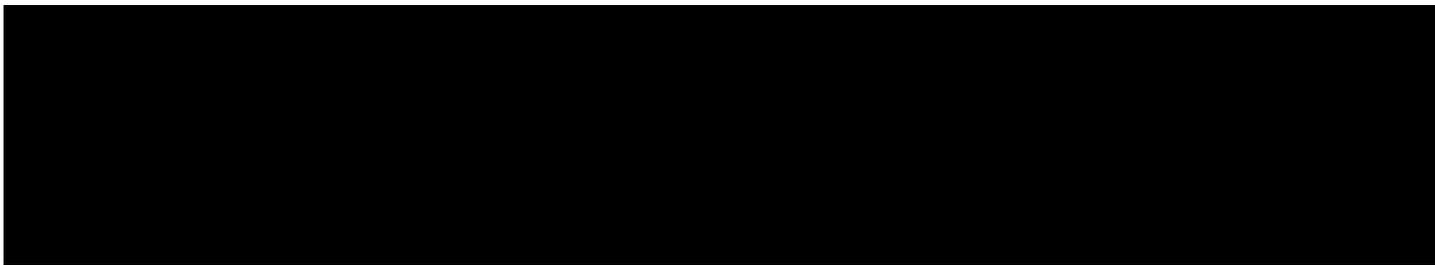

**SPECTRUM**  
*DIGITAL*  
INCORPORATED

---

Printed in U.S.A., May 2003  
506665-0001 Rev. A