

GARMIN[®]

fēnix[®] 3



Owner's Manual

Table of Contents

Introduction	1
Keys	1
Charging the Device	1
Pairing Your Smartphone with Your Device	1
Support and Updates	1
Setting Up Garmin Express	1
Activities	1
Starting an Activity	2
Stopping an Activity	2
Skiing	2
Going Cross-Country Skiing	2
Going Downhill Skiing or Snowboarding	2
Viewing Your Ski Runs	2
Hiking	2
Going for a Hike	2
Running	2
Going for a Run	2
Running with the Metronome	2
Biking	3
Going for a Ride	3
Swimming	3
Going for a Pool Swim	3
Swim Terminology	3
Stroke Types	3
Resting During Pool Swimming	3
Training with the Drill Log	3
Going for an Open Water Swim	3
Multisport	4
Starting a Triathlon or Multisport Activity	4
Creating a Multisport Activity	4
Indoor Activities	4
Navigation	4
Saving Your Location	4
Navigating to a Destination	4
Navigating with Sight 'N Go	4
Compass	4
Map	4
Panning and Zooming the Map	4
Navigating To Your Starting Point	5
Altimeter and Barometer	5
Training	5
Setting Up Your User Profile	5
Fitness Goals	5
About Heart Rate Zones	5
Setting Your Heart Rate Zones	5
Heart Rate Zone Calculations	5
About Lifetime Athletes	5
Activity Tracking	5
Turning On Activity Tracking	5
Using the Move Alert	6
Auto Goal	6
Sleep Tracking	6
Using Sleep Mode	6
Workouts	6
Following a Workout From the Web	6
Starting a Workout	6
About the Training Calendar	6
Using Garmin Connect Training Plans	6
Interval Workouts	6
Creating an Interval Workout	6
Starting an Interval Workout	6
Stopping an Interval Workout	7
Using Virtual Partner®	7

Setting a Training Target	7
Cancelling a Training Target	7
Racing a Previous Activity	7
Personal Records	7
Viewing Your Personal Records	7
Restoring a Personal Record	7
Clearing a Personal Record	7
Clearing All Personal Records	7
Running Dynamics	7
Training with Running Dynamics	8
Color Gauges and Running Dynamics Data	8
Tips for Missing Running Dynamics Data	8
About VO2 Max. Estimates	8
Getting Your VO2 Max. Estimate for Running	8
Getting Your VO2 Max. Estimate for Cycling	9
VO2 Max. Standard Ratings	9
Viewing Your Predicted Race Times	9
Recovery Advisor	9
Turning On the Recovery Advisor	9
Viewing Your Recovery Time	9
About Training Effect	9
History	10
Using History	10
Multisport History	10
Viewing Your Time in Each Heart Rate Zone	10
Viewing Step Totals	10
Viewing Data Totals	10
Deleting History	10
Clock	10
Setting the Alarm	10
Starting the Countdown Timer	10
Using the Stopwatch	10
Connected Features	10
Enabling Bluetooth Notifications	11
Viewing Notifications	11
Managing Notifications	11
Turning Off Bluetooth Technology	11
Garmin Connect	11
Using Garmin Connect Mobile	11
Using Garmin Connect on Your Computer	11
Wi-Fi® Connected Features	11
Setting Up Wi-Fi Connectivity	11
Connect IQ Features	11
Downloading Connect IQ Features	12
Downloading Connect IQ Features Using Your Computer	12
Widgets	12
Viewing Widgets	12
VIRB™ Remote	12
Controlling a VIRB Action Camera	12
Customizing Your Device	12
Activity App Settings	12
Customizing the Data Screens	12
Adding a Map to an Activity	13
Alerts	13
Setting an Alert	13
Enabling Auto Pause®	13
Auto Lap®	13
Marking Laps by Distance	13
3D Speed and Distance	14
Using Auto Scroll	14
UltraTrac	14
Power Save Timeout Settings	14
Watch Face Settings	14
Customizing the Watch Face	14

Customizing the Widget Loop	14
Sensors Settings	14
Compass Settings	14
Setting the North Reference	14
Calibrating the Compass	14
Altimeter Settings	14
Calibrating the Barometric Altimeter	14
Barometer Settings	14
System Settings	14
Time Settings	15
Backlight Settings	15
Changing the Units of Measure	15
Navigation Settings	15
Customizing Map Features	15
ANT+ Sensors	15
Pairing ANT+ Sensors	15
Putting On the Heart Rate Monitor	15
Tips for Erratic Heart Rate Data	16
Foot Pod	16
Foot Pod Calibration	16
Calibrating Your Foot Pod Manually	16
Using an Optional Bike Cadence Sensor	16
Device Information	16
Viewing Device Information	16
Device Care	16
Cleaning the Device	16
Metal Watch Band Adjustment	16
Specifications	16
Battery Information	17
Caring for the Heart Rate Monitor	17
HRM-Run Specifications	17
User Replaceable Batteries	17
Replacing the Heart Rate Monitor Battery	17
Data Management	17
Disconnecting the USB Cable	17
Deleting Files	17
Troubleshooting	17
My daily step count does not appear	17
The temperature reading is not accurate	17
Resetting Your Device	17
Restoring All Default Settings	18
Maximizing the Battery Life	18
Getting More Information	18
Appendix	18
Data Fields	18
Software License Agreement	20
Symbol Definitions	20
Index	21

Introduction

⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Always consult your physician before you begin or modify any exercise program.

Keys



① LIGHT ⏻	Select to turn the backlight on and off. Hold to turn the device on and off.
② START STOP	Select to start or stop an activity. Select to choose an option in a menu.
③ BACK LAP	Select to return to the previous page. Select to record a lap or a rest during an activity.
④ DOWN ⏴	Select to scroll through widgets, menus, and messages. Hold to view the clock from any page.
⑤ UP ⏵	Select to scroll through widgets, menus, and messages. Select to dismiss a short message or notification. Hold to view the main menu.


Charging the Device

NOTICE

To prevent corrosion, thoroughly clean and dry the contacts and the surrounding area before charging or connecting to a computer. Refer to the cleaning instructions in the appendix.

The device is powered by a built-in lithium-ion battery that you can charge using a standard wall outlet or a USB port on your computer.

- 1 Plug the USB end of the cable into the AC adapter or a computer USB port.
- 2 Plug the AC adapter into a standard wall outlet.
- 3 Pinch the sides of the charging cradle ① to open the arms on the cradle.

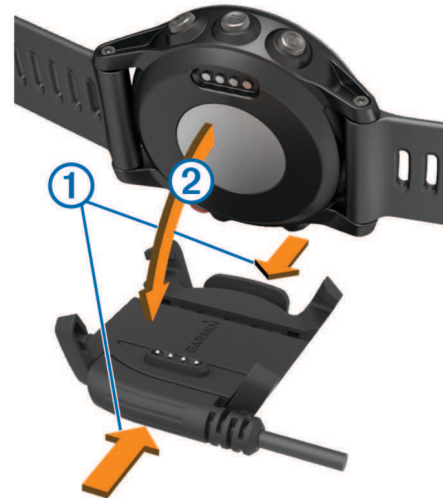

- 4 With the contacts aligned, place the device into the cradle ② and release the arms to hold the device in place.
When you connect the device to a power source, the device turns on, and the battery charge level appears on the screen.
- 5 Charge the device completely.

Pairing Your Smartphone with Your Device

You should connect your fēnix 3 device to a smartphone to access the full features of the device.

- 1 Go to www.garmin.com/apps, and download the Garmin Connect™ Mobile app to your smartphone.
- 2 Bring your smartphone within 10 m (33 ft.) of your device.
- 3 On the fēnix 3 device, hold **UP**.
- 4 Select **Settings > Bluetooth > Pair Mobile Device**.
- 5 On your smartphone, open the Garmin Connect Mobile app.
- 6 Select an option to add your device to your Garmin Connect account:
 - If this is the first device you have paired a device with the Garmin Connect Mobile app, follow the on-screen instructions.
 - If you have already paired another device with the Garmin Connect Mobile app, select **☰ > Devices > +**, and follow the on-screen instructions.

Support and Updates

Garmin Express™ provides easy access to these services for Garmin® devices. Some services may not be available for your device.

- Product registration
- Product manuals
- Software updates
- Map, chart, or course updates
- Vehicles, voices, and other extras

Setting Up Garmin Express

- 1 Connect the device to your computer using a USB cable.
- 2 Go to www.garmin.com/express.
- 3 Follow the on-screen instructions.

Activities

Your device can be used for indoor, outdoor, athletic, and fitness activities. When you start an activity, the device displays and records sensor data. You can save activities and share them with the Garmin Connect community.

You can also add Connect IQ™ activity apps to your device using the Garmin Connect Mobile app ([Connect IQ Features](#)).

Starting an Activity

When you start an activity, GPS turns on automatically (if required). When you stop the activity, the device returns to watch mode.

- 1 From the clock, select **START**.
- 2 Select an activity.
- 3 If necessary, follow the on-screen instructions to enter additional information.
- 4 If necessary, wait while the device connects to your ANT+® sensors.
- 5 If the activity requires GPS, go outside, and wait while the device locates satellites.
- 6 Select **START** to start the timer.

NOTE: The device does not record your activity data until you start the timer.

Stopping an Activity

NOTE: Some options are not available for some activities.

- 1 Select **STOP**.
- 2 Select an option:
 - To follow your track back to the starting point of your activity, select **TracBack**.
 - To resume your activity, select **Resume**.
 - To save the activity and return to watch mode, select **Save**.
 - To discard the activity and return to watch mode, select **Discard**.
 - To suspend your activity and resume it at a later time, select **Resume Later**.

Skiing

Going Cross-Country Skiing

Before you go skiing, you should charge the device ([Charging the Device](#)).

- 1 From the clock, select **START**.
- 2 Select **XC Ski**.
- 3 Wait while the device locates satellites.
- 4 Select **START** to start the timer.
History is recorded only while the timer is running.
- 5 Start your activity.
- 6 Select **LAP** to record laps (optional).
- 7 Select **UP** or **DOWN** to view additional data pages (optional).
- 8 After you complete your activity, select **STOP > Save**.

Going Downhill Skiing or Snowboarding

Before you go skiing or snowboarding, you should charge the device ([Charging the Device](#)).

- 1 From the clock, select **START**.
- 2 Select **Ski**.
- 3 Go outside, and wait while the device locates satellites.
- 4 Select **START** to start the timer.
History is recorded only while the timer is running.
- 5 Start your activity.
The auto run feature is turned on by default. This feature automatically records new ski runs based on your movement. The timer pauses when you stop moving downhill and when you are on a chairlift. The timer remains paused during the chairlift ride.

- 6 If necessary, start moving downhill to restart the timer.
- 7 Select **UP** or **DOWN** to view additional data pages (optional).
- 8 After you complete your activity, select **STOP > Save**.

Viewing Your Ski Runs

Your device records the details of each skiing or snowboarding run. You can view run details from the paused screen or while the timer is running.

- 1 Start a skiing or snowboarding activity.
- 2 Hold **UP**.
- 3 Select **View Runs**.
- 4 Select **UP** and **DOWN** to view details of your last run, your current run, and your total runs.
The run screens include time, distance traveled, maximum speed, average speed, and total descent.

Hiking

Going for a Hike

Before you go for a hike, you should charge the device ([Charging the Device](#)).

- 1 From the clock, select **START**.
- 2 Select **Hike**.
- 3 Go outside, and wait while the device locates satellites.
- 4 Select **START** to start the timer.
History is recorded only while the timer is running.
- 5 Start your activity.
The device records a track while you hike.
- 6 Select **START > Resume** to resume tracking.
- 7 When you want to take a break or pause the device from tracking, select **STOP > Resume Later**.
The device saves the status of your hike and enters low power mode.
- 8 Select **UP** or **DOWN** to view additional data pages (optional).
- 9 After you complete your activity, select **STOP > Save**.

Running

Going for a Run

Before you go for a run, you should charge the device ([Charging the Device](#)). Before you can use an ANT+ sensor for your run, you must pair the sensor with your device ([Pairing ANT+ Sensors](#)).

- 1 Put on your ANT+ sensors, such as a foot pod or heart rate monitor (optional).
- 2 From the clock, select **START**.
- 3 Select **Run**.
- 4 When using optional ANT+ sensors, wait while the device connects to the sensors.
- 5 Go outside, and wait while the device locates satellites.
- 6 Select **START** to start the timer.
History is recorded only while the timer is running.
- 7 Start your activity.
- 8 Select **LAP** to record laps (optional).
- 9 Select **UP** or **DOWN** to view additional data pages (optional).
- 10 After you complete your activity, select **STOP > Save**.

Running with the Metronome

The metronome feature plays tones at a steady rhythm to help you improve your performance by training at a faster, slower, or more consistent cadence.

- 1 Hold **UP**.

- 2 Select **Settings > Apps**.
- 3 Select an activity.
NOTE: This feature is not available for all activities.
- 4 Select an option:
 - Select **Beats / Minute** to enter a value based on the cadence you want to maintain.
 - Select **Alert Frequency** to customize the frequency of the beats.
 - Select **Sounds** to customize the metronome sound.
- 5 If necessary, select **Preview** to listen to the metronome feature before you run.
- 6 Go for a run ([Going for a Run](#)).
The metronome starts automatically.
- 7 During your run, select **UP** to view the metronome screen.
- 8 If necessary, hold **UP** to change the metronome settings.

Biking

Going for a Ride

Before you go for a ride, you should charge the device ([Charging the Device](#)). Before you can use an ANT+ sensor for your ride, you must pair the sensor with your device ([Pairing ANT+ Sensors](#)).

- 1 Pair your ANT+ sensors, such as a heart rate monitor, speed sensor, or cadence sensor (optional).
- 2 From the clock, select **START**.
- 3 Select **Bike**.
- 4 When using optional ANT+ sensors, wait while the device connects to the sensors.
- 5 Go outside, and wait while the device locates satellites.
- 6 Select **START** to start the timer.
History is recorded only while the timer is running.
- 7 Start your activity.
- 8 Select **UP** or **DOWN** to view additional data pages (optional).
- 9 After you complete your activity, select **STOP > Save**.

Swimming

NOTICE

The device is intended for surface swimming. Scuba diving with the device may damage the product and will void the warranty.

NOTE: The device cannot record heart rate data while swimming.

Going for a Pool Swim

Before you go for a swim, you should charge the device ([Charging the Device](#)).

- 1 From the clock, select **START**.
- 2 Select **Pool Swim**.
- 3 Select your pool size, or enter a custom size.
- 4 Select **START** to start the timer.
History is recorded only while the timer is running.
- 5 Start your activity.
The device automatically records swim intervals and lengths.
- 6 Select **UP** or **DOWN** to view additional data pages (optional).
- 7 When resting, select **LAP** to pause the timer.
- 8 Select **LAP** to restart the timer.
- 9 After you complete your activity, select **STOP > Save**.

Swim Terminology

Length: One trip down the pool.

Interval: One or more consecutive lengths. A new interval starts after a rest.

Stroke: A stroke is counted every time your arm wearing the device completes a full cycle.

Swolf: Your swolf score is the sum of the time for one pool length and the number of strokes for that length. For example, 30 seconds plus 15 strokes equals a swolf score of 45. For open water swimming, swolf is calculated over 25 meters. Swolf is a measurement of swimming efficiency and, like golf, a lower score is better.

Stroke Types

Stroke type identification is available only for pool swimming. Your stroke type is identified at the end of a length. Stroke types appear when you are viewing interval history. You can also select stroke type as a custom data field ([Customizing the Data Screens](#)).

Free	Freestyle
Back	Backstroke
Breast	Breaststroke
Fly	Butterfly
Mixed	More than one stroke type in an interval
Drill	Used with drill logging (Training with the Drill Log)

Resting During Pool Swimming

The default rest screen displays two rest timers. It also displays time and distance for the last completed interval.

NOTE: Swim data is not recorded during a rest.

- 1 During your swim activity, select **LAP** to start a rest.
The display reverses to white text on a black background, and the rest screen appears.
- 2 During a rest, select **DOWN** to view other data screens (optional).
- 3 Select **LAP**, and continue swimming.
- 4 Repeat for additional rest intervals.

Training with the Drill Log

The drill log feature is available only for pool swimming. You can use the drill log feature to manually record kick sets, one-arm swimming, or any type of swimming that is not one of the four major strokes. The drill time is recorded, and you must enter the distance.

TIP: You can customize the data screens and data fields for your pool swim activity ([Customizing the Data Screens](#)).

- 1 From the clock, select **START**.
- 2 Select **Pool Swim**.
- 3 During your pool swim activity, select **DOWN** to view the drill log screen.
- 4 Select **LAP** to start the drill timer.
- 5 After completing a drill interval, select **LAP**.
The drill timer stops, but the activity timer continues to record the entire swim session.
- 6 Select a distance for the completed drill.
Distance increments are based on the pool size selected for the activity profile.
- 7 Select an option:
 - To start another drill interval, select **LAP**.
 - To start a swim interval, select **DOWN** to return to the swim training screens.
- 8 After you complete your activity, select **STOP > Save**.

Going for an Open Water Swim

Before you go for a swim, you should charge the device ([Charging the Device](#)).

- 1 From the clock, select **START**.

Navigation

- 2 Select **Open Water**.
- 3 Go outside, and wait while the device locates satellites.
- 4 Select **START** to start the timer.
History is recorded only while the timer is running.
- 5 Start your activity.
- 6 Select **LAP** to record an interval (optional).
- 7 Select **UP** or **DOWN** to view additional data pages (optional).
- 8 After you complete your activity, select **STOP** > **Save**.

Multisport

Triathletes, duathletes, and other multisport competitors can take advantage of the multisport activity. During a multisport activity, you can transition between activities and continue to view your total time and distance. For example, you can switch from biking to running and view your total time and distance for biking and running throughout the multisport activity.

You can customize a multisport activity, or you can use the default multisport activity set up for a standard triathlon.

Starting a Triathlon or Multisport Activity

Before you start an activity, you should charge the device ([Charging the Device](#)). Before you can use an ANT+ sensor, you must pair the sensor with your device ([Pairing ANT+ Sensors](#)).

- 1 Pair your ANT+ sensors, such as a foot pod or heart rate monitor (optional).
- 2 From the clock, select **START**.
- 3 Select **Triathlon** or a custom multisport activity.
- 4 Go outside, and wait while the device locates satellites.
- 5 Select **START** to start the timer.
History is recorded only while the timer is running.
- 6 Start your first activity.
- 7 Select **LAP** to transition to the next activity.
If transitions are turned on, the transition time is recorded separately from the activity times.
- 8 If necessary, select **LAP** to start the next activity.
- 9 Select **UP** or **DOWN** to view additional data pages (optional).
- 10 After you complete your activity, select **STOP** > **Save**.

Creating a Multisport Activity

- 1 Hold **UP**.
- 2 Select **Settings** > **Apps** > **Add New** > **Multisport**.
- 3 Select an option:
 - Select an activity type.
 - Select **Custom**, and enter a name.
- 4 Select an activity.
- 5 If necessary, repeat step 4 until the multisport activity is complete.
- 6 Select **Done**.
- 7 Select **Yes** to turn transitions on or **No** to turn transitions off.
When transitions are turned on, the transition time is recorded separately from the activity times.

Indoor Activities

The fēnix 3 device can be used for training indoors, such as running on an indoor track or using a stationary bike.

GPS is turned off for indoor activities. When running with GPS turned off, speed, distance, and cadence are calculated using the accelerometer in the device. The accelerometer is self-calibrating. The accuracy of the speed, distance, and cadence data improves after a few outdoor runs using GPS.

Saving Your Location

You can save your current location to navigate back to it later.

- 1 Hold **UP**.
- 2 Select **Save Location**.
- 3 Follow the on-screen instructions.

Navigating to a Destination

You can use your device to navigate to a destination or follow a course. When you start navigating, you can choose the activity to be used while traveling to your destination, such as hiking, running, or biking. If you are already recording an activity when you start navigation, the device continues to record the current activity while navigating.

- 1 Hold **UP**.
- 2 Select **Navigation**.
- 3 Select a category.
- 4 Follow the on-screen instructions to select a destination, and select **Go To**.
- 5 Select an activity.
Navigation information appears.
- 6 Select **UP** or **DOWN** to view additional data pages (optional).

Navigating with Sight 'N Go

You can point the device at an object in the distance, such as a water tower, lock in the direction, and then navigate to the object.

- 1 Hold **UP**.
- 2 Select **Navigation** > **Sight 'N Go**.
- 3 Point the top mark on the bezel at an object and select **START**.
- 4 Select a category.
- 5 Select **START** to begin navigation.
Navigation information appears.
- 6 Select **UP** or **DOWN** to view additional data pages (optional).

Compass

The device has a 3-axis compass with automatic calibration. The compass features and appearance change depending on your activity, whether GPS is enabled, and whether you are navigating to a destination. You can manually change the compass settings ([Compass Settings](#)).

Map

▲ represents your location on the map. Location names and symbols appear on the map. When you are navigating to a destination, your route is marked with a line on the map.

- Map navigation ([Panning and Zooming the Map](#))
- Map settings ([Customizing Map Features](#))


Panning and Zooming the Map

- 1 While navigating, select **UP** to view the map.
- 2 Hold **UP**.
- 3 Select **Pan/Zoom**.
- 4 Select an option:
 - To toggle between panning up and down, panning left and right, or zooming, select **START**.
 - To pan or zoom the map, select **UP** and **DOWN**.
 - To quit, select **BACK**.

Navigating To Your Starting Point

You can navigate back to the starting point of your track or activity along the path you traveled. This feature is available only for activities that use GPS.

During an activity, select **STOP > TracBack**.

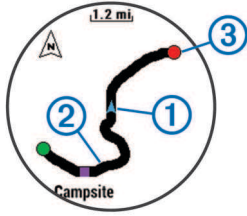

Your current location ①, track to follow ②, and end point ③ appear on the map.

Altimeter and Barometer

The device contains an internal altimeter and barometer. The device collects altimeter and barometer data continuously, even in low-power mode. The altimeter displays your approximate elevation based on pressure changes. The barometer displays environmental pressure data based on the fixed elevation where the altimeter was most recently calibrated ([Altimeter Settings](#)).

Training

Setting Up Your User Profile

You can update your gender, birth year, height, weight, heart rate zone, and power zone settings. The device uses this information to calculate accurate training data.

- 1 Hold **UP**.
- 2 Select **My Stats > User Profile**.
- 3 Select an option.

Fitness Goals

Knowing your heart rate zones can help you measure and improve your fitness by understanding and applying these principles.

- Your heart rate is a good measure of exercise intensity.
- Training in certain heart rate zones can help you improve cardiovascular capacity and strength.
- Knowing your heart rate zones can prevent you from overtraining and can decrease your risk of injury.

If you know your maximum heart rate, you can use the table ([Heart Rate Zone Calculations](#)) to determine the best heart rate zone for your fitness objectives.

If you do not know your maximum heart rate, use one of the calculators available on the Internet. Some gyms and health centers can provide a test that measures maximum heart rate. The default maximum heart rate is 220 minus your age.

About Heart Rate Zones

Many athletes use heart rate zones to measure and increase their cardiovascular strength and improve their level of fitness. A heart rate zone is a set range of heartbeats per minute. The five commonly accepted heart rate zones are numbered from 1 to 5 according to increasing intensity. Generally, heart rate zones are calculated based on percentages of your maximum heart rate.

Setting Your Heart Rate Zones

The device uses your user profile information from the initial setup to determine your default heart rate zones. The device has separate heart rate zones for running and cycling. For the most accurate calorie data during your activity, set your maximum heart rate. You can also set each heart rate zone and enter your resting heart rate manually. You can manually adjust

your zones on the device or using your Garmin Connect account.

- 1 Hold **UP**.
- 2 Select **My Stats > User Profile > Heart Rate Zones**.
- 3 Select **Default** to view the default values (optional).
The default values can be applied to running and cycling.
- 4 Select **Running** or **Cycling**.
- 5 Select **Preference > Set Custom > Based On**.
- 6 Select an option:
 - Select **BPM** to view and edit the zones in beats per minute.
 - Select **%Max. HR** to view and edit the zones as a percentage of your maximum heart rate.
 - Select **%HRR** to view and edit the zones as a percentage of your heart rate reserve (maximum heart rate minus resting heart rate).
- 7 Select **Max. HR**, and enter your maximum heart rate.
- 8 Select a zone, and enter a value for each zone.
- 9 Select **Resting HR**, and enter your resting heart rate.

Heart Rate Zone Calculations

Zone	% of Maximum Heart Rate	Perceived Exertion	Benefits
1	50–60%	Relaxed, easy pace, rhythmic breathing	Beginning-level aerobic training, reduces stress
2	60–70%	Comfortable pace, slightly deeper breathing, conversation possible	Basic cardiovascular training, good recovery pace
3	70–80%	Moderate pace, more difficult to hold conversation	Improved aerobic capacity, optimal cardiovascular training
4	80–90%	Fast pace and a bit uncomfortable, breathing forceful	Improved anaerobic capacity and threshold, improved speed
5	90–100%	Sprinting pace, unsustainable for long period of time, labored breathing	Anaerobic and muscular endurance, increased power

About Lifetime Athletes

A lifetime athlete is an individual who has trained intensely for many years (with the exception of minor injuries) and has a resting heart rate of 60 beats per minute (bpm) or less.

Activity Tracking

Turning On Activity Tracking

The activity tracking feature records your daily step count, step goal, distance traveled, and calories burned for each recorded day. Your calories burned includes your base metabolism plus activity calories.

Activity tracking can be enabled during the initial device setup, or at any time.

NOTE: Turning on activity tracking can decrease the battery life between charges.

- 1 Hold **UP**.
- 2 Select **Settings > Activity Tracking > Status > On**.

Your step count does not appear until the device locates satellites and sets the time automatically. The device may need a clear view of the sky to locate satellite signals.

The number of steps taken during the day appears on the activity tracking widget. The step count is updated periodically.


Using the Move Alert

Before you can use the move alert, you must turn on activity tracking.

Sitting for prolonged periods of time can trigger undesirable metabolic state changes. The move alert reminds you to keep moving. After one hour of inactivity, Move! and the red bar appear. The device also beeps or vibrates if audible tones are turned on ([System Settings](#)).

Go for a short walk (at least a couple of minutes) to reset the move alert.

Auto Goal

Your device creates a daily step goal automatically, based on your previous activity levels. As you move during the day, the device shows your progress toward your daily goal .



If you choose not to use the auto goal feature, you can set a personalized step goal on your Garmin Connect account.

Sleep Tracking

During sleep mode, the device monitors your rest. Sleep statistics include total hours of sleep, periods of movement, and periods of restful sleep.

Using Sleep Mode

Before you can use sleep tracking, you must be wearing the device.

- 1 From the watch face, select **UP** or **DOWN** to view the activity tracking widget.
- 2 Select **START > Yes**.
- 3 When you wake, select **STOP > Yes** to exit sleep mode.

NOTE: If you forget to put the device into sleep mode, you can enter your sleep and wake times manually into your Garmin Connect account to view your sleep statistics.

Workouts

You can create custom workouts that include goals for each workout step and for varied distances, times, and calories. You can create workouts using Garmin Connect or select a training plan that has built-in workouts from Garmin Connect, and transfer them to your device.

You can schedule workouts using Garmin Connect. You can plan workouts in advance and store them on your device.

Following a Workout From the Web

Before you can download a workout from Garmin Connect, you must have a Garmin Connect account ([Garmin Connect](#)).

- 1 Connect the device to your computer.
- 2 Go to www.garminconnect.com.
- 3 Create and save a new workout.
- 4 Select **Send to Device**, and follow the on-screen instructions.
- 5 Disconnect the device.

Starting a Workout

Before you can start a workout, you must download a workout from your Garmin Connect account.

- 1 Hold **UP**.
- 2 Select **Training > My Workouts**.

- 3 Select a workout.
- 4 Select **Do Workout**.
- 5 If necessary, select an activity type.
- 6 Select **START** to start the timer.

After you begin a workout, the device displays each step of the workout, the target (optional), and the current workout data.


About the Training Calendar

The training calendar on your device is an extension of the training calendar or schedule you set up in Garmin Connect. After you have added a few workouts to the Garmin Connect calendar, you can send them to your device. All scheduled workouts sent to the device appear in the training calendar list by date. When you select a day in the training calendar, you can view or do the workout. The scheduled workout stays on your device whether you complete it or skip it. When you send scheduled workouts from Garmin Connect, they overwrite the existing training calendar.

Using Garmin Connect Training Plans

Before you can download and use a training plan from Garmin Connect, you must have a Garmin Connect account ([Garmin Connect](#)).



You can browse Garmin Connect to find a training plan, schedule workouts and courses, and download the plan to your device.

- 1 Connect the device to your computer.
- 2 Go to www.garminconnect.com.
- 3 Select and schedule a training plan.
- 4 Review the training plan in your calendar.
- 5 Select , and follow the on-screen instructions.

Interval Workouts

You can create interval workouts based on distance or time. The device saves your custom interval workout until you create another interval workout. You can use open intervals for track workouts and when you are running a known distance. When you select LAP, the device records an interval and moves to a rest interval.

Creating an Interval Workout

- 1 Hold **UP**.
- 2 Select **Training > Intervals > Edit > Interval > Type**.
- 3 Select **Distance, Time, or Open**.
TIP: You can create an open-ended interval by setting the type to Open.
- 4 Select **Duration**, enter a distance or time interval value for the workout, and select .
- 5 Select **Rest > Type**.
- 6 Select **Distance, Time, or Open**.
- 7 If necessary, enter a distance or time value for the rest interval, and select .
- 8 Select one or more options:
 - To set the number of repetitions, select **Repeat**.
 - To add an open-ended warm up to your workout, select **Warm Up > On**.
 - To add an open-ended cool down to your workout, select **Cool Down > On**.

Starting an Interval Workout

- 1 Hold **UP**.
- 2 Select **Training > Intervals > Do Workout**.
- 3 Select an activity.
- 4 Select **START** to start the timer.

- 5 When your interval workout has a warm up, select **LAP** to begin the first interval.
- 6 Follow the on-screen instructions.

After you complete all of the intervals, a message appears.

Stopping an Interval Workout

- At any time, select **LAP** to end an interval.
- At any time, select **STOP** to stop the timer.
- If you added a cool down to your interval workout, select **LAP** to end the interval workout.

Using Virtual Partner®

Your Virtual Partner is a training tool designed to help you meet your goals.

- 1 Hold **UP**.
- 2 Select **Settings > Apps**.
- 3 Select an activity.
Virtual Partner is not available for all activities.
- 4 Select **Data Screens > Virtual Partner > Status > On**.
- 5 Select **Set Pace** or **Set Speed**.
- 6 Enter a value.
- 7 Begin your activity.
- 8 Select **UP** or **DOWN** to scroll to the Virtual Partner screen and see who is leading.

Setting a Training Target

The training target feature works with the Virtual Partner feature so you can train toward a set distance, distance and time, distance and pace, or distance and speed goal. During your training activity, the device gives you real-time feedback about how close you are to achieving your training target.

- 1 Hold **UP**.
- 2 Select **Training > Set a Target**.
- 3 Select an activity.
- 4 Select an option:
 - Select **Distance Only** to select a preset distance or enter a custom distance.
 - Select **Distance and Time** to select a distance and time target.
 - Select **Distance and Pace** or **Distance and Speed** to select a distance and pace or speed target.

The training target screen appears indicating your estimated finish time. The estimated finish time is based on your current performance and the time remaining.

- 5 Select **START** to start the timer.
- 6 After you complete your activity, select **STOP > Save**.

Cancelling a Training Target

- 1 During the activity, hold **UP**.
- 2 Select **Training > Cancel Target > Yes**.

Racing a Previous Activity

You can race a previously recorded or downloaded activity. This feature works with the Virtual Partner feature so you can see how far ahead or behind you are during the activity.

NOTE: This feature is not available for all activities.

- 1 Hold **UP**.
- 2 Select **Training > Race an Activity**.
- 3 Select an option:
 - Select **From History** to select a previously recorded activity from your device.

- Select **Downloaded** to select an activity you downloaded from your Garmin Connect account.
- 4 Select the activity.
The Virtual Partner screen appears indicating your estimated finish time.
 - 5 Select **START** to start the timer.
 - 6 After you complete your activity, select **STOP > Save**.

Personal Records

When you complete an activity, the device displays any new personal records you achieved during that activity. Personal records include your fastest time over several typical race distances and longest run or ride. For cycling, personal records also include most ascent and best power (power meter required).

Viewing Your Personal Records

- 1 Hold **UP**.
- 2 Select **My Stats > Records**.
- 3 Select a sport.
- 4 Select a record.
- 5 Select **View Record**.

Restoring a Personal Record

You can set each personal record back to the one previously recorded.

- 1 Hold **UP**.
- 2 Select **My Stats > Records**.
- 3 Select a sport.
- 4 Select a record to restore.
- 5 Select **Previous > Yes**.

NOTE: This does not delete any saved activities.

Clearing a Personal Record

- 1 Hold **UP**.
- 2 Select **My Stats > Records**.
- 3 Select a sport.
- 4 Select a record to delete.
- 5 Select **Clear Record > Yes**.

NOTE: This does not delete any saved activities.

Clearing All Personal Records

- 1 Hold **UP**.
- 2 Select **My Stats > Records**.
- 3 Select a sport.
- 4 Select **Clear All Records > Yes**.

The records are deleted for that sport only.

Running Dynamics

You can use your compatible fēnix 3 device paired with the HRM-Run™ accessory to provide real-time feedback about your running form. If your fēnix 3 device was packaged with the HRM-Run accessory, the devices are already paired.

The HRM-Run accessory has an accelerometer in the module that measures torso movement in order to calculate three running metrics: cadence, vertical oscillation, and ground contact time.

NOTE: The HRM-Run accessory is compatible with several ANT+ fitness products and can display heart rate data when paired. The running dynamics features are available only on some Garmin devices.

Cadence: Cadence is the number of steps per minute. It displays total steps (right and left combined).

Vertical oscillation: Vertical oscillation is your bounce while running. It displays the vertical motion of your torso, measured in centimeters for each step.

Ground contact time: Ground contact time is the amount of time in each step that you spend on the ground while running. It is measured in milliseconds.

NOTE: Ground contact time is not available while walking.

Training with Running Dynamics

Before you can view running dynamics, you must put on the HRM-Run accessory and pair it with your device ([Pairing ANT+ Sensors](#)). If your fēnix 3 was packaged with the HRM-Run accessory, the devices are already paired, and the fēnix 3 is set to display running dynamics.

- 1 Select an option:
 - If your HRM-Run accessory and fēnix 3 device are already paired, skip to step 8.
 - If your HRM-Run accessory and fēnix 3 device are not already paired, complete all the steps in this procedure.

2 Hold **UP**.

Color Gauges and Running Dynamics Data


The running dynamics screen displays a color gauge for the primary metric. You can display cadence, vertical oscillation, or ground contact time as the primary metric. The color gauge shows you how your running dynamics data compares to those of other runners. The color zones are based on percentiles.

Garmin has researched many runners of all different levels. The data values in the red or orange zones are typical for less experienced or slower runners. The data values in the green, blue, or purple zones are typical for more experienced or faster runners. Less experienced runners tend to exhibit longer ground contact times, higher vertical oscillation, and lower cadence than more experienced runners. However, taller runners typically have slightly slower cadences and slightly higher vertical oscillation. Go to www.garmin.com for more information on running dynamics. For additional theories and interpretations of running dynamics data, you can search reputable running publications and websites.

Color Zone	Percentile in Zone	Cadence Range	Vertical Oscillation Range	Ground Contact Time Range
Purple	>95	>185 spm	<6.7 cm	<208 ms
Blue	70–95	174–185 spm	6.7–8.3 cm	208–240 ms
Green	30–69	163–173 spm	8.4–10.0 cm	241–272 ms
Orange	5–29	151–162 spm	10.1–11.8 cm	273–305 ms
Red	<5	<151 spm	>11.8 cm	>305 ms

Tips for Missing Running Dynamics Data

If running dynamics data does not appear, you can try these tips.

- Make sure you have the HRM-Run accessory. The HRM-Run accessory has  on the front of the module.
- Pair the HRM-Run accessory with your fēnix 3 again, according to the instructions.
- If the running dynamics data display zeros, make sure the HRM-Run module is worn right-side up.

NOTE: Ground contact time appears only while running. It cannot be calculated while walking.

About VO2 Max. Estimates

VO2 max. is the maximum volume of oxygen (in milliliters) you can consume per minute per kilogram of body weight at your maximum performance. In simple terms, VO2 max. is an indication of athletic performance and should increase as your level of fitness improves. VO2 max. estimates are provided and supported by Firstbeat® Technologies Ltd. The fēnix 3 device has separate VO2 max. estimates for running and cycling. You can use your Garmin device paired with a compatible heart rate monitor and power meter to display your cycling VO2 max. estimate. You can use your Garmin device paired with a compatible heart rate monitor to display your running VO2 max. estimate.

3 Select **Settings > Apps**.

4 Select an activity.

5 Select **Data Screens > Run Dynamics > Status > Enabled**.

NOTE: The running dynamics screen is not available for all activities.


6 Select **Primary Metric**.

7 Select **Cadence, GCT, or Vertical Osc.**


The primary metric appears as the top field on the data screen with a corresponding position on the color gauge.

8 Go for a run ([Going for a Run](#)).

9 Select **UP** or **DOWN** to view the running dynamics screen to view your metrics.

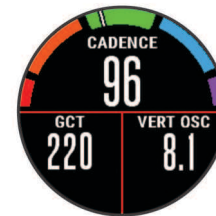

Your VO2 max. estimate appears as a number and position on the color gauge.

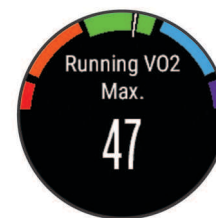

Purple	Superior
Blue	Excellent
Green	Good
Orange	Fair
Red	Poor

VO2 max. data and analysis is provided with permission from The Cooper Institute®. For more information, see the appendix ([VO2 Max. Standard Ratings](#)), and go to www.CooperInstitute.org.

Getting Your VO2 Max. Estimate for Running

Before you can view your VO2 max. estimate, you must put on the heart rate monitor and pair it with your device ([Pairing ANT+ Sensors](#)). If your fēnix 3 device was packaged with a heart rate monitor, the devices are already paired. For the most accurate estimate, complete the user profile setup ([Setting Up Your User](#)

Profile), and set your maximum heart rate ([Setting Your Heart Rate Zones](#)).

NOTE: The estimate may seem inaccurate at first. The device requires a few runs to learn about your running performance.

- 1 Run for at least 10 minutes outdoors.
- 2 After your run, select **Save**.
- 3 Hold **UP**.
- 4 Select **My Stats > VO2 Max. > Running**.

Getting Your VO2 Max. Estimate for Cycling

Before you can view your VO2 max. estimate, you must put on the heart rate monitor, install the power meter, and pair them

VO2 Max. Standard Ratings

These tables include standardized classifications for VO2 max. estimates by age and gender.

Males	Percentile	20–29	30–39	40–49	50–59	60–69	70–79
Superior	95	55.4	54	52.5	48.9	45.7	42.1
Excellent	80	51.1	48.3	46.4	43.4	39.5	36.7
Good	60	45.4	44	42.4	39.2	35.5	32.3
Fair	40	41.7	40.5	38.5	35.6	32.3	29.4
Poor	0–40	<41.7	<40.5	<38.5	<35.6	<32.3	<29.4

Females	Percentile	20–29	30–39	40–49	50–59	60–69	70–79
Superior	95	49.6	47.4	45.3	41.1	37.8	36.7
Excellent	80	43.9	42.4	39.7	36.7	33	30.9
Good	60	39.5	37.8	36.3	33	30	28.1
Fair	40	36.1	34.4	33	30.1	27.5	25.9
Poor	0–40	<36.1	<34.4	<33	<30.1	<27.5	<25.9

Data reprinted with permission from The Cooper Institute. For more information, go to www.CooperInstitute.org.

Viewing Your Predicted Race Times

Before you can view your projected race times (running only), you must put on a heart rate monitor and pair it with your device. For the most accurate estimate, complete the user profile setup ([Setting Up Your User Profile](#)), and set your maximum heart rate ([Setting Your Heart Rate Zones](#)).

Your device uses the VO2 max. estimate ([About VO2 Max. Estimates](#)) and published data sources to provide a target race time based on your current state of fitness. This projection also presumes you have completed the proper training for the race.

NOTE: The projections may seem inaccurate at first. The device requires a few runs to learn about your running performance.

- 1 Put on your heart rate monitor, and go for a run.
- 2 Hold **UP**.
- 3 Select **My Stats > Race Predictor**.

Your projected race times appear for 5K, 10K, half marathon, and marathon distances.

Recovery Advisor

You can use your Garmin device paired with the heart rate monitor to display how much time remains before you are fully recovered and ready for the next hard workout. The recovery advisor feature includes recovery time and recovery check. Recovery advisor technology is provided and supported by Firstbeat Technologies Ltd.

Recovery check: The recovery check provides a real-time indication of your state of recovery within the first several minutes of an activity.

Recovery time: The recovery time appears immediately following an activity. The time counts down until it is optimal for you to attempt another hard workout.

Turning On the Recovery Advisor

Before you can use the recovery advisor feature, you must put on the heart rate monitor and pair it with your device ([Pairing](#)

with your fēnix 3 device ([Pairing ANT+ Sensors](#)). If your fēnix 3 device was packaged with a heart rate monitor, the devices are already paired. For the most accurate estimate, complete the user profile setup ([Setting Up Your User Profile](#)) and set your maximum heart rate ([Setting Your Heart Rate Zones](#)).

NOTE: The estimate may seem inaccurate at first. The device requires a few rides to learn about your cycling performance.

- 1 Ride at a steady, high intensity for at least 20 minutes outdoors.
- 2 After your ride, select **Save**.
- 3 Hold **UP**.
- 4 Select **My Stats > VO2 Max. > Cycling**.

[ANT+ Sensors](#)). If your fēnix 3 was packaged with a heart rate monitor, the devices are already paired. For the most accurate estimate, you must complete the user profile setup ([Setting Up Your User Profile](#)), and set your maximum heart rate ([Setting Your Heart Rate Zones](#)).

- 1 Hold **UP**.
- 2 Select **My Stats > Recovery Advisor > Status > On**.
- 3 Go for a run.

Within the first several minutes of your run, a recovery check appears, showing your real-time state of recovery.

- 4 After your run, select **Save**.

The recovery time appears. The maximum time is 4 days, and the minimum time is 6 hours.

Viewing Your Recovery Time

Before you can view your recovery time, you must enable the recovery advisor.

- 1 Hold **UP**.
- 2 Select **My Stats > Recovery Advisor**.

The recovery time appears. The maximum time is 4 days, and the minimum time is 6 hours.

About Training Effect

Training Effect measures the impact of an activity on your aerobic fitness. Training Effect accumulates during the activity. As the activity progresses, the training effect value increases, telling you how the activity has improved your fitness. Training Effect is determined by your user profile information, heart rate, duration, and intensity of your activity.

It is important to know that your Training Effect numbers (1.0–5.0) may seem abnormally high during your first few runs. It takes several activities for the device to learn your aerobic fitness.

Training Effect	Description
1.0–1.9	Helps recovery (short activities). Improves endurance with longer activities (more than 40 minutes).
2.0–2.9	Maintains your aerobic fitness.
3.0–3.9	Improves your aerobic fitness if repeated as part of your weekly training program.
4.0–4.9	Highly improves your aerobic fitness if repeated 1–2 times per week with adequate recovery time.
5.0	Causes temporary overload with high improvement. Train up to this number with extreme care. Requires additional recovery days.

Training Effect technology is provided and supported by Firstbeat Technologies Ltd. For more information, go to www.firstbeattechnologies.com.

History

History includes time, distance, calories, average pace or speed, lap data, and optional ANT+ sensor information.

NOTE: When the device memory is full, your oldest data is overwritten.

Using History

History contains previous activities you have saved on your device.

- 1 Hold **UP**.
- 2 Select **History > Activities**.
- 3 Select an activity.
- 4 Select an option:
 - To view additional information about the activity, select **Details**.
 - To select a lap and view additional information about each lap, select **Laps**.
 - To view the activity on a map, select **Map**.
 - To navigate in reverse the path you traveled for the activity, select **TracBack** ([Navigating To Your Starting Point](#)).
 - To delete the selected activity, select **Delete**.
 - To navigate the path you traveled for the activity, select **Go**.

Multisport History

Your device stores the overall multisport summary of the activity, including overall distance, time, calories, and optional accessory data. Your device also separates the activity data for each sport segment and transition so you can compare similar training activities and track how quickly you move through the transitions. Transition history includes distance, time, average speed, and calories.

Viewing Your Time in Each Heart Rate Zone

Before you can view heart rate zone data, you must pair your device with a compatible heart rate monitor, complete an activity, and save the activity.

Viewing your time in each heart rate zone can help you adjust your training intensity.

- 1 Hold **UP**.
- 2 Select **History > Activities**.
- 3 Select an activity.
- 4 Select **Time in Zone**.

Viewing Step Totals

Before you can view step totals, you must turn on activity tracking ([Turning On Activity Tracking](#)).

- 1 Hold **UP**.

- 2 Select **History > Steps**.

- 3 Select a day to view the accumulated step count, step goal, distance traveled, and calories burned.

Viewing Data Totals

You can view the accumulated distance and time data saved to your device.

- 1 Hold **UP**.
- 2 Select **History > Totals**.
- 3 If necessary, select an activity.
- 4 Select an option to view weekly or monthly totals.

Deleting History

- 1 Hold **UP**.
- 2 Select **History > Options**.
- 3 Select an option:
 - Select **Delete All Activities** to delete all activities from the history.
 - Select **Reset Totals** to reset all distance and time totals.

NOTE: This does not delete any saved activities.
- 4 Confirm your selection.

Clock

Setting the Alarm

- 1 Hold **UP**.
- 2 Select **Clock > Alarm Clock**.
- 3 Select the toggle switch to turn on the alarm.
- 4 Select **Time**, and enter the alarm time.

Starting the Countdown Timer

- 1 Hold **UP**.
- 2 Select **Clock > Timer**.
- 3 Select **START**, **UP**, and **DOWN** to set the time.
- 4 If necessary, select **Notification**, and select a type of notification.
- 5 Select **Start Timer**.

Using the Stopwatch

- 1 Hold **UP**.
- 2 Select **Clock > Stopwatch**.
- 3 From the clock, select **START**.

Connected Features

Connected features are available for your fēnix 3 device when you connect the device to a wireless network or to a compatible smartphone using Bluetooth® wireless technology. Some features require you to install the Garmin Connect Mobile app on the connected smartphone. Go to www.garmin.com/apps for more information.

Phone notifications: Displays phone notifications and messages on your fēnix 3 device.

LiveTrack: Allows friends and family to follow your races and training activities in real time. You can invite followers using email or social media, allowing them to view your live data on a Garmin Connect tracking page.

Activity uploads to Garmin Connect: Automatically sends your activity to your Garmin Connect account as soon as you finish recording the activity.

Connect IQ: Allows you to extend your device features with new watch faces, widgets, apps, and data fields.

Enabling Bluetooth Notifications

Before you can enable notifications, you must pair the fēnix 3 device with a compatible mobile device ([Pairing Your Smartphone with Your Device](#)).

- 1 Hold **UP**.
- 2 Select **Settings > Bluetooth > Smart Notifications**.
- 3 If **Status** is set to **Off**, select **Status**.
- 4 Select **During Activity**.
- 5 Select a notification preference.
- 6 Select **Watch Mode**.
- 7 Select a notification preference.
- 8 Select **Timeout**.
- 9 Select the amount of time the alert for a new notification appears on the screen.

Viewing Notifications

- 1 From the clock, select **UP** to view the notifications widget.
 - 2 Select **START**, and select a notification.
 - 3 If necessary, select **DOWN** to scroll through the contents of the notification.
 - 4 Select **BACK** to return to the previous screen.
- The notification remains on your fēnix 3 device until you view it or clear it on your mobile device.

Managing Notifications

You can use your compatible mobile device to manage notifications displayed on your fēnix 3 device.

Select an option:

- If you are using an iOS® device, use the notification center settings on your mobile device to select the items to show on the device.
- If you are using an Android™ device, use the app settings in the Garmin Connect Mobile app to select the items to show on the device.

Turning Off Bluetooth Technology

- 1 Hold **UP**.
 - 2 Select **Settings > Bluetooth > Status > Off** to turn off Bluetooth wireless technology on your fēnix 3 device.
- Refer to the owner's manual for your mobile device to turn off Bluetooth wireless technology on your mobile device.


Garmin Connect

You can connect with your friends on Garmin Connect. Garmin Connect gives you the tools to track, analyze, share, and encourage each other. Record the events of your active lifestyle including runs, walks, rides, swims, hikes, triathlons, and more. To sign up for a free account, go to www.garminconnect.com/start.

Store your activities: After you complete and save an activity with your device, you can upload that activity to Garmin Connect and keep it as long as you want.

Analyze your data: You can view more detailed information about your activity, including time, distance, elevation, heart rate, calories burned, cadence, VO2 max., running dynamics, an overhead map view, pace and speed charts, and customizable reports.

NOTE: Some data requires an optional accessory such as a heart rate monitor.

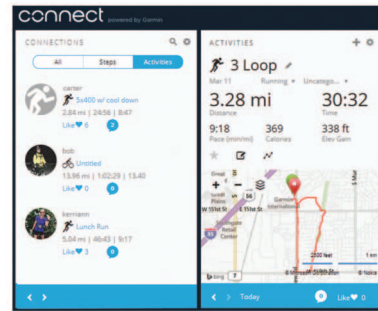

Plan your training: You can choose a fitness goal and load one of the day-by-day training plans.

Share your activities: You can connect with friends to follow each other's activities or post links to your activities on your favorite social networking sites.

Using Garmin Connect Mobile

You can upload all of your activity data to your Garmin Connect account for comprehensive analysis. With your Garmin Connect account, you can view a map of your activity, and share your activities with friends. You can turn on auto upload in the Garmin Connect Mobile app.

- 1 From the Garmin Connect Mobile app, select **☰ > Devices**.
- 2 Select your fēnix 3 device, and select **Device Settings**.
- 3 Select the toggle switch to turn on auto upload.

Using Garmin Connect on Your Computer

If you have not paired your fēnix 3 device with your smartphone, you can upload all of your activity data to your Garmin Connect account using your computer.

- 1 Connect the device to your computer using the USB cable.
- 2 Go to www.garminconnect.com/start.
- 3 Follow the on-screen instructions.

Wi-Fi® Connected Features

The fēnix 3 device has Wi-Fi connected features. The Garmin Connect Mobile app is not required for you to use Wi-Fi connectivity.

Activity uploads to your Garmin Connect account:

Automatically sends your activity to your Garmin Connect account as soon as you finish recording the activity.

Workouts and training plans: Allows you to browse for and select workouts and training plans on the Garmin Connect site. The next time your device has a Wi-Fi connection, the files are wirelessly sent to your device.

Software updates: Your device downloads the latest software update when a Wi-Fi connection is available. The next time you turn on or unlock the device, you can follow the on-screen instructions to install the software update.

Setting Up Wi-Fi Connectivity

- 1 Go to www.garminconnect.com/start, and download the Garmin Express application.
- 2 Follow the on-screen instructions to set up Wi-Fi connectivity with Garmin Express.

Connect IQ Features

You can add Connect IQ features to your watch from Garmin and other providers using the Garmin Connect Mobile app.

Watch Faces: Allow you to customize the appearance of the clock.


Data Fields: Allow you to download new data fields that present sensor, activity, and history data in new ways. You can add Connect IQ data fields to built-in features and pages.

Widgets: Provide information at a glance, including sensor data and notifications.

Apps: Add interactive features to your watch, such as new outdoor and fitness activity types.

Downloading Connect IQ Features

Before you can download Connect IQ features from the Garmin Connect Mobile app, you must pair your fēnix 3 device with your smartphone running the Garmin Connect Mobile app.

- 1 From the Garmin Connect Mobile app, select  > **Connect IQ Store**.
- 2 Select your fēnix 3 device.

Downloading Connect IQ Features Using Your Computer

- 1 Connect the device to your computer using a USB cable.
- 2 Go to www.garminconnect.com.
- 3 From your devices widget, select **Connect IQ Store**.
- 4 Select a Connect IQ feature.
- 5 Select **Send to Device**, and follow the on-screen instructions.

Widgets

Your device comes preloaded with widgets that provide at-a-glance information. Some widgets require a Bluetooth connection to a compatible smartphone.

Notifications: Alerts you to incoming calls and texts according to your smartphone notification settings.

Calendar: Displays upcoming meetings from your smartphone calendar.

Weather: Displays the current temperature and weather forecast.

Activity Tracking: Tracks your daily step count, step goal, distance traveled, calories burned, and sleep statistics.

Sensor Information: Displays information from an internal sensor or a connected ANT+ sensor.

Compass: Displays an electronic compass.

Viewing Widgets

Your device comes preloaded with several widgets, and more are available when you pair your device with a smartphone.

- 1 From any screen, hold **DOWN**.
The clock appears.
- 2 Select **UP** or **DOWN**.
The device cycles through the available widgets.
- 3 If you are recording an activity, select **BACK** to return to the activity data pages.

VIRB™ Remote

The VIRB remote function allows you to control your VIRB action camera from a distance. Go to www.garmin.com/VIRB to purchase a VIRB action camera.

Controlling a VIRB Action Camera

Before you can use the VIRB remote function, you must enable the remote setting on your VIRB camera. See the *VIRB Series Owner's Manual* for more information. You must also set the VIRB widget to be shown in the widget loop ([Customizing the Widget Loop](#)).

- 1 Turn on your VIRB camera.
- 2 On your fēnix 3 device, select **UP** or **DOWN** from the watch face to view the VIRB widget.
- 3 Wait while the device connects to your VIRB camera.
- 4 Select an option:

- To record video, select **START**.
The video counter appears on the fēnix 3 screen.
- To stop recording video, select **STOP**.
- To take a photo, select **DOWN**.

Customizing Your Device

Activity App Settings

These settings allow you to customize each pre-loaded activity app based on your needs. For example, you can customize data pages and enable alerts and training features. Not all settings are available for all activity types.

Hold UP, select **Settings** > **Apps**, and select an activity.

Data Screens: Allows you to show or hide data screens for the selected activity ([Customizing the Data Screens](#)).

Alerts: Sets the training or navigation alerts for the selected activity.

Metronome: Plays tones at a steady rhythm to help you improve your performance by training at a faster, slower, or more consistent cadence ([Running with the Metronome](#)).

Auto Lap: Sets the options for the auto lap feature ([Auto Lap](#)®).

Auto Pause: Sets the device to stop recording data when you stop moving or when you drop below a specified speed ([Enabling Auto Pause](#)®).

Auto Run: Sets the device to detect ski runs automatically using the built-in accelerometer.

3D Speed: Sets the device to calculate your speed using both your elevation change and your horizontal movement over ground ([3D Speed and Distance](#)).

3D Distance: Sets the device to calculate your distance traveled using both your elevation change and your horizontal movement over ground.

Auto Scroll: You can use the auto scroll feature to cycle through all of the activity data screens automatically while the timer is running ([Using Auto Scroll](#)).

GPS: Sets the mode for the GPS antenna ([UltraTrac](#)).

Pool Size: Sets the pool length for pool swimming ([Going for a Pool Swim](#)).

Stroke Detect.: Enables stroke detection for pool swimming.

Power Save: Sets the power-save timeout setting for an activity ([Power Save Timeout Settings](#)).

Background Color: Sets the background color of each activity to black or white.

Accent Color: Sets the accent color of each activity to help identify which activity is active.

Status: Shows or hides the selected activity in the apps list.

Move Up: Adjusts the position of the activity in the apps list.

Move Down: Adjusts the position of the activity in the apps list.

Remove: Deletes the activity.

NOTE: This deletes the activity from the apps list and all user-entered activity settings. You can restore all of the device settings to the factory default values to add a removed activity back to the list ([Restoring All Default Settings](#)).

Edit Name: Allows you to edit the activity name.

Customizing the Data Screens

You can show, hide, and change the layout and content of data screens for each activity.

- 1 Hold **UP**.
- 2 Select **Settings** > **Apps**.
- 3 Select the activity to customize.
- 4 Select **Data Screens**.

- 5 Select a data screen to customize.
- 6 Select an option:
 - Select **Status** to turn the data screen on or off.
 - Select **Layout** to adjust the number of data fields on the data screen.
 - Select a field to change the data that appears in the field.

Adding a Map to an Activity

You can add the map to the data screens loop for an activity.

- 1 Hold **UP**.
- 2 Select **Settings > Apps**.
- 3 Select the activity to customize.
- 4 Select **Data Screens > Map**.
- 5 Select **Status** to turn the map on or off.
- 6 Configure additional map settings (optional) ([Customizing Map Features](#)).

Alerts

You can set alerts for each activity, which can help you to train toward specific goals, to increase your awareness of your environment, and to navigate to your destination. Some alerts are available only for specific activities. There are three types of alerts: event alerts, range alerts, and recurring alerts.

Event alert: An event alert notifies you once. The event is a specific value. For example, you can set the device to alert you when you reach a specified elevation.

Range alert: A range alert notifies you each time the device is above or below a specified range of values. For example, you can set the device to alert you when your heart rate is below 60 beats per minute (bpm) and over 210 bpm.

Recurring alert: A recurring alert notifies you each time the device records a specified value or interval. For example, you can set the device to alert you every 30 minutes.

Alert Name	Alert Type	Description
Cadence	Range	You can set minimum and maximum cadence values.
Calories	Event, recurring	You can set the number of calories.
Custom	Recurring	You can select an existing message or create a custom message and select an alert type.
Distance	Recurring	You can set a distance interval.
Elevation	Range	You can set minimum and maximum elevation values.
Heart Rate	Range	You can set minimum and maximum heart rate values or select zone changes. See About Heart Rate Zones and Heart Rate Zone Calculations .
Pace	Range	You can set minimum and maximum pace values.
Power	Range	You can set the high or low power level.
Run/Walk	Recurring	You can set timed walking breaks at regular intervals.
Speed	Range	You can set minimum and maximum speed values.
Time	Event, recurring	You can set a time interval.

Setting an Alert

- 1 Hold **UP**.
- 2 Select **Settings > Apps**.
- 3 Select an activity.

NOTE: This feature is not available for all activities.
- 4 Select **Alerts**.
- 5 Select an option:

- Select **Add New** to add a new alert for the activity.
 - Select the alert name to edit an existing alert.
- 6 If necessary, select the type of alert.
 - 7 Select a zone, enter the minimum and maximum values, or enter a custom value for the alert.
 - 8 If necessary, turn on the alert.

For event and recurring alerts, a message appears each time you reach the alert value. For range alerts, a message appears each time you exceed or drop below the specified range (minimum and maximum values).

Enabling Auto Pause®

You can use the Auto Pause feature to pause the timer automatically when you stop moving. This feature is helpful if your activity includes stop lights or other places where you must stop.

NOTE: History is not recorded while the timer is stopped or paused.

- 1 Hold **UP**.
- 2 Select **Settings > Apps**.
- 3 Select an activity.

NOTE: This feature is not available for all activities.
- 4 Select **Auto Pause**.
- 5 Select an option:
 - To pause the timer automatically when you stop moving, select **When Stopped**.
 - To pause the timer automatically when your pace or speed drops below a specified level, select **Custom**.

Auto Lap®

Marking Laps by Distance

You can use Auto Lap to mark a lap at a specific distance automatically. This feature is helpful for comparing your performance over different parts of an activity (for example, every 1 mile or 5 kilometers).

- 1 Hold **UP**.
- 2 Select **Settings > Apps**.
- 3 Select an activity.

NOTE: This feature is not available for all activities.
- 4 Select **Auto Lap**.
- 5 Select an option:
 - Select **Auto Lap** to turn Auto Lap on or off.
 - Select **Auto Distance** to adjust the distance between laps.

Each time you complete a lap, a message appears that displays the time for that lap. The device also beeps or vibrates if audible tones are turned on ([System Settings](#)).

If necessary, you can customize the data pages to display additional lap data ([Customizing the Data Screens](#)).

Customizing the Lap Alert Message

You can customize one or two data fields that appear in the lap alert message.

- 1 Hold **UP**.
- 2 Select **Settings > Apps**.
- 3 Select an activity.

NOTE: This feature is not available for all activities.
- 4 Select **Auto Lap > Lap Alert**.
- 5 Select a data field to change it.
- 6 Select **Preview** (optional).

3D Speed and Distance

You can set 3D speed and distance to calculate your speed or distance using both your elevation change and your horizontal movement over ground. You can use it during activities such as skiing, climbing, navigating, hiking, running, or biking.

Using Auto Scroll

You can use the auto scroll feature to cycle through all of the activity data screens automatically while the timer is running.

- 1 Hold **UP**.
- 2 Select **Settings > Apps**.
- 3 Select an activity.
NOTE: This feature is not available for all activities.
- 4 Select **Auto Scroll**.
- 5 Select a display speed.

UltraTrac

The UltraTrac feature is a GPS setting that records track points and sensor data less frequently. Enabling the UltraTrac feature increases battery life but decreases the quality of recorded activities. You should use the UltraTrac feature for activities that demand longer battery life and for which frequent sensor data updates are less important.

Power Save Timeout Settings

The timeout settings affect how long your device stays in training mode, for example, when you are waiting for a race to start. Hold **UP**, select **Settings > Apps**, and select an activity. Select Power Save to adjust the timeout settings for the activity.

Normal: Sets the device to enter low-power watch mode after 5 minutes of inactivity.

Extended: Sets the device to enter low-power watch mode after 25 minutes of inactivity. The extended mode can result in shorter battery life between charges.

Watch Face Settings

You can customize the appearance of the watch face by selecting the layout, colors, and additional data. You can also download custom watch faces from the Connect IQ store.

Customizing the Watch Face

- 1 Hold **UP**.
- 2 Select **Settings > Watch Face**.
- 3 Select a watch-face feature to change.
- 4 Follow the on-screen instructions to change the watch-face feature.

Customizing the Widget Loop

You can add, delete, or move items in the widget loop.

- 1 Hold **UP**.
- 2 Select **Settings > Widgets**.
- 3 Select a widget.
- 4 Select an option:
 - Select **Show** to show or hide the widget from the widget loop.
 - Select **Move Up** or **Move Down** to change the location of the widget in the widget loop.

Sensors Settings

Compass Settings

Hold **UP**, and select **Settings > Sensors > Compass**.

Display: Sets the directional heading on the compass to degrees or milli-radians.

North Ref.: Sets the north reference of the compass ([Setting the North Reference](#)).

Mode: Sets the compass to use electronic-sensor data only (On), a combination of GPS and electronic-sensor data when moving (Auto), or GPS data only (Off).

Calibrate: Allows you to manually calibrate the compass sensor ([Calibrating the Compass](#)).

Setting the North Reference

You can set the directional reference used in calculating heading information.

- 1 Hold **UP**.
- 2 Select **Settings > Sensors > Compass > North Ref.**
- 3 Select an option:
 - To set geographic north as the heading reference, select **True**.
 - To set the magnetic declination for your location automatically, select **Magnetic**.
 - To set grid north (000°) as the heading reference, select **Grid**.

Calibrating the Compass

NOTICE

Calibrate the electronic compass outdoors. To improve heading accuracy, do not stand near objects that influence magnetic fields, such as vehicles, buildings, and overhead power lines.

Your device was already calibrated at the factory, and the device uses automatic calibration by default. If you experience irregular compass behavior, for example, after moving long distances or after extreme temperature changes, you can manually calibrate the compass.

- 1 Hold **UP**.
- 2 Select **Settings > Sensors > Compass > Calibrate**.
- 3 Follow the on-screen instructions.

Altimeter Settings

Hold **UP**, and select **Settings > Sensors > Altimeter**.

Auto Cal.: Allows the altimeter to self-calibrate each time you turn on GPS tracking.

Calibrate: Allows you to manually calibrate the altimeter sensor.

Calibrating the Barometric Altimeter

Your device was already calibrated at the factory, and the device uses automatic calibration at your GPS starting point by default. You can manually calibrate the barometric altimeter if you know the correct elevation or the correct sea level pressure.

- 1 Hold **UP**.
- 2 Select **Settings > Sensors > Altimeter**.
- 3 Select an option:
 - To calibrate automatically from your GPS starting point, select **Auto Cal. > Once**.
 - To calibrate automatically with periodic GPS calibration updates, select **Auto Cal. > Continuous**.
 - To enter the current elevation, select **Calibrate**.

Barometer Settings

Hold **UP**, and select **Settings > Sensors > Barometer**.

Plot: Sets the time scale for the chart in the barometer widget.

Storm Alert: Sets the rate of barometric pressure change that triggers a storm alert.

System Settings

Hold **UP**, and select **Settings > System**.

User Profile: Allows you to access and customize your personal statistics.

Language: Sets the language displayed on the device.

Time: Adjusts the time settings ([Time Settings](#)).

Backlight: Adjusts the backlight settings ([Backlight Settings](#)).

Sounds: Sets the device sounds, such as key tones, alerts, and vibrations.

Units: Sets the units of measure used on the device ([Changing the Units of Measure](#)).

GLONASS: The default satellite system option is GPS. You can enable the GLONASS option for increased performance in challenging environments and faster position acquisition. Using the GPS and GLONASS options can reduce battery life more than using the GPS option only.

Format: Sets general format preferences, such as the pace and speed shown during activities, and the start of the week.

Data Recording: Sets how the device records activity data. The Smart recording option (default) allows for longer activity recordings. The Every Second recording option provides more detailed activity recordings, but may not record entire activities that last for longer periods of time.

USB Mode: Sets the device to use mass storage mode or Garmin mode when connected to a computer.

Restore Defaults: Allows you to reset user data and settings ([Restoring All Default Settings](#)).

Software Update: Uses a Wi-Fi connection to check for software updates to the device.

About: Displays device, software, and license information.

Time Settings

Hold UP, and select **Settings > System > Time**.

Time Format: Sets the device to show time in a 12-hour or 24-hour format.

Set Time: Sets the time zone for the device. The Auto option sets the time zone automatically based on your GPS position.

Time: Allows you to adjust the time if it is set to the Manual option.

Backlight Settings

Hold UP, and select **Settings > System > Backlight**.

Mode: Sets the backlight to turn on manually or for keys and alerts.

Timeout: Sets the length of time before the backlight turns off.

Brightness: Sets the brightness level of the backlight.

Changing the Units of Measure

You can customize units of measure for distance, pace and speed, elevation, weight, height, and temperature.

- 1 Hold UP.
- 2 Select **Settings > System > Units**.
- 3 Select a measurement type.
- 4 Select a unit of measure.

Navigation Settings

You can customize the map features and appearance when navigating to a destination.

Customizing Map Features

- 1 Hold UP, select **Settings > Navigation**.
- 2 Select an option:
 - Select **Map** to turn the map on or off.
 - Select **Guide** to turn a guide page on or off that shows your compass bearing to follow while navigating.
 - Select a screen to add, remove, and customize data screens shown when navigating.

ANT+ Sensors

The device is compatible with these optional, wireless ANT+ accessories.

- Heart rate monitor, such as HRM-Run ([Putting On the Heart Rate Monitor](#))
- Bike speed and cadence sensor ([Using an Optional Bike Cadence Sensor](#))
- Foot pod ([Foot Pod](#))
- Power sensor, such as Vector™
- tempe™ wireless temperature sensor ([tempe](#))

For information about compatibility and purchasing additional sensors, go to <http://buy.garmin.com>.

Pairing ANT+ Sensors

The first time you connect a sensor to your device using ANT+ wireless technology, you must pair the device and sensor. After they are paired, the device connects to the sensor automatically when you start an activity and the sensor is active and within range.

NOTE: If a heart rate monitor was bundled with your device, the included heart rate monitor is already paired with your device.

- 1 If you are pairing a heart rate monitor, put on the heart rate monitor ([Putting On the Heart Rate Monitor](#)).

The heart rate monitor does not send or receive data until you put it on.
- 2 Bring the device within 3 m (10 ft.) of the sensor.

NOTE: Stay 10 m (33 ft.) away from other ANT+ sensors while pairing.
- 3 Hold UP.
- 4 Select **Settings > Sensors > Add New**.
- 5 Select an option:
 - Select **Search All**.
 - Select your sensor type.

After the sensor is paired with your device, the sensor status changes from Searching to Connected. Sensor data appears in the data page loop or a custom data field.

tempe

The tempe is an ANT+ wireless temperature sensor. You can attach the sensor to a secure strap or loop where it is exposed to ambient air, and therefore, provides a consistent source of accurate temperature data. You must pair the tempe with your device to display temperature data from the tempe.

Putting On the Heart Rate Monitor

NOTE: If you do not have a heart rate monitor, you can skip this task.

You should wear the heart rate monitor directly on your skin, just below your sternum. It should be snug enough to stay in place during your activity.

- 1 Snap the heart rate monitor module ① onto the strap.




The Garmin logos on the module and the strap should be right-side up.

- 2 Wet the electrodes ② and the contact patches ③ on the back of the strap to create a strong connection between your chest and the transmitter.



- 3 Wrap the strap around your chest, and connect the strap hook ④ to the loop ⑤.

NOTE: The care tag should not fold over.

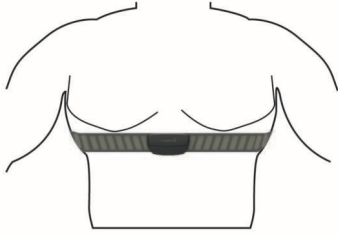

The Garmin logos should be right-side up.

- 4 Bring the device within 3 m (10 ft.) of the heart rate monitor. After you put on the heart rate monitor, it is active and sending data.

TIP: If the heart rate data is erratic or does not appear, see the troubleshooting tips ([Tips for Erratic Heart Rate Data](#)).

Tips for Erratic Heart Rate Data

If the heart rate data is erratic or does not appear, you can try these tips.

- Reapply water to the electrodes and contact patches.
- Tighten the strap on your chest.
- Warm up for 5–10 minutes.
- Follow the care instructions ([Caring for the Heart Rate Monitor](#)).
- Wear a cotton shirt or thoroughly wet both sides of the strap. Synthetic fabrics that rub or flap against the heart rate monitor can create static electricity that interferes with heart rate signals.
- Move away from sources that can interfere with your heart rate monitor.

Sources of interference may include strong electromagnetic fields, some 2.4 GHz wireless sensors, high-voltage power lines, electric motors, ovens, microwave ovens, 2.4 GHz cordless phones, and wireless LAN access points.

Foot Pod

Your device is compatible with the foot pod. You can use the foot pod to record pace and distance instead of using GPS when you are training indoors or when your GPS signal is weak. The foot pod is on standby and ready to send data (like the heart rate monitor).

After 30 minutes of inactivity, the foot pod powers off to conserve the battery. When the battery is low, a message appears on your device. Approximately five hours of battery life remain.

Foot Pod Calibration

The foot pod is self-calibrating. The accuracy of the speed and distance data improves after a few outdoor runs using GPS.

Calibrating Your Foot Pod Manually

Before you can calibrate your device, you must pair your device with the foot pod ([Pairing ANT+ Sensors](#)).

Manual calibration is recommended if you know your calibration factor. If you have calibrated a foot pod with another Garmin product, you may know your calibration factor.

- 1 Hold **UP**.
- 2 Select **Settings > Sensors > Foot Pod > Calibrate > Manual**.

- 3 Adjust the calibration factor:
 - Increase the calibration factor if your distance is too low.
 - Decrease the calibration factor if your distance is too high.

Using an Optional Bike Cadence Sensor

You can use a compatible bike cadence sensor to send data to your device.

- Pair the sensor with your device ([Pairing ANT+ Sensors](#)).
- Update your fitness user profile information ([Setting Up Your User Profile](#)).
- Go for a ride ([Going for a Ride](#)).

Device Information

Viewing Device Information

You can view the unit ID, software version, and license agreement.

- 1 Hold **UP**.
- 2 Select **Settings > System > About**.

Device Care

NOTICE

Do not use a sharp object to clean the device.

Avoid chemical cleaners, solvents, and insect repellents that can damage plastic components and finishes.

Thoroughly rinse the device with fresh water after exposure to chlorine, salt water, sunscreen, cosmetics, alcohol, or other harsh chemicals. Prolonged exposure to these substances can damage the case.

Avoid pressing the keys under water.

Avoid extreme shock and harsh treatment, because it can degrade the life of the product.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Cleaning the Device

NOTICE

Even small amounts of sweat or moisture can cause corrosion of the electrical contacts when connected to a charger. Corrosion can prevent charging and data transfer.

- 1 Wipe the device using a cloth dampened with a mild detergent solution.
- 2 Wipe it dry.

After cleaning, allow the device to dry completely.

Metal Watch Band Adjustment

If your watch includes a metal watch band, you should take your watch to a jeweler or other professional to adjust the length of the metal band.

Specifications

Battery type	Rechargeable, built-in lithium-ion battery
Battery life	Up to 6 wk.
Water rating	10 ATM*
Operating temperature range	From -20° to 55°C (from -4° to 131°F)
Charging temperature range	From 0° to 45°C (from 32° to 113°F)
Radio frequency/protocol	2.4 GHz ANT+ wireless technology Bluetooth Smart device

*The device withstands pressure equivalent to a depth of 100 m. For more information, go to www.garmin.com/waterrating.

Battery Information

The actual battery life depends on the features enabled on your device, such as activity tracking, smartphone notifications, GPS, internal sensors, and connected ANT+ sensors.

Battery Life	Mode
Up to 20 hr.	Normal GPS mode
Up to 50 hr.	UltraTrac GPS mode with one-minute polling interval
Up to 6 wk.	Watch mode

Caring for the Heart Rate Monitor

NOTICE

You must unsnap and remove the module before washing the strap.

A build up of sweat and salt on the strap can decrease the ability of the heart rate monitor to report accurate data.

- Go to www.garmin.com/HRMcare for detailed washing instructions.
- Rinse the strap after every use.
- Machine wash the strap after every seven uses.
- Do not put the strap in a dryer.
- When drying the strap, hang it up or lay it flat.
- To prolong the life of your heart rate monitor, unsnap the module when not in use.

HRM-Run Specifications

Battery type	User-replaceable CR2032, 3 volts
Battery life	1 year (1 hour per day)
Water rating	3 ATM* NOTE: This product does not transmit heart rate data while swimming.
Operating temperature range	From -20° to 60°C (from -4° to 140°F)
Radio frequency/protocol	2.4 GHz ANT+ wireless communications protocol

*The device withstands pressure equivalent to a depth of 30 m. For more information, go to www.garmin.com/waterrating.

User Replaceable Batteries

⚠ WARNING

Do not use a sharp object to remove batteries.

Keep the battery away from children.

Never put batteries in mouth. If swallowed, contact your physician or local poison control center.

Replaceable coin cell batteries may contain perchlorate material. Special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

⚠ CAUTION

Contact your local waste disposal department to properly recycle the batteries.

Replacing the Heart Rate Monitor Battery

- 1 Use a small Phillips screwdriver to remove the four screws on the back of the module.
- 2 Remove the cover and battery.



- 3 Wait 30 seconds.
- 4 Insert the new battery with the positive side facing up.
NOTE: Do not damage or lose the O-ring gasket.
- 5 Replace the back cover and the four screws.
NOTE: Do not overtighten.

After you replace the heart rate monitor battery, you may need to pair it with the device again.

Data Management

NOTE: The device is not compatible with Windows® 95, 98, Me, Windows NT®, and Mac® OS 10.3 and earlier.

Disconnecting the USB Cable

If your device is connected to your computer as a removable drive or volume, you must safely disconnect your device from your computer to avoid data loss. If your device is connected to your Windows computer as a portable device, it is not necessary to safely disconnect.

- 1 Complete an action:
 - For Windows computers, select the **Safely Remove Hardware** icon in the system tray, and select your device.
 - For Mac computers, drag the volume icon to the trash.
- 2 Disconnect the cable from your computer.

Deleting Files

NOTICE

If you do not know the purpose of a file, do not delete it. Your device memory contains important system files that should not be deleted.

- 1 Open the **Garmin** drive or volume.
- 2 If necessary, open a folder or volume.
- 3 Select a file.
- 4 Press the **Delete** key on your keyboard.

Troubleshooting

My daily step count does not appear

The daily step count is reset every night at midnight.

If dashes appear instead of your step count, allow the device to acquire satellite signals and set the time automatically.

The temperature reading is not accurate

Your body temperature affects the temperature reading for the internal temperature sensor. To get the most accurate temperature reading, you should remove the watch from your wrist and wait 20 to 30 minutes.

You can also use an optional temperature external temperature sensor to view accurate ambient temperature readings while wearing the watch.

Resetting Your Device

If the device stops responding, you may need to reset it.

- 1 Hold **LIGHT** for at least 25 seconds.
- 2 Hold **LIGHT** for one second to turn on the device.

Restoring All Default Settings

NOTE: This deletes all user-entered information and activity history.

You can restore all of the device settings to the factory default values.

- 1 Hold **UP**.
- 2 Select **Settings > System > Restore Defaults > Yes**.

Maximizing the Battery Life

You can do several things to extend the life of the battery.

- Reduce the backlight brightness and timeout ([Backlight Settings](#)).
- Use UltraTrac GPS mode for your activity ([UltraTrac](#)).
- Turn off Bluetooth wireless technology when you are not using connected features ([Connected Features](#)).
- When pausing your activity for a longer period of time, use the resume later option ([Stopping an Activity](#)).
- Use a Connect IQ watch face that is not updated every second.
For example, use a watch face without a second hand ([Customizing the Watch Face](#)).
- Limit the smartphone notifications the device displays ([Managing Notifications](#)).

Getting More Information

You can find more information about this product on the Garmin website.

- Go to www.garmin.com/outdoor.
- Go to www.garmin.com/learningcenter.
- Go to <http://buy.garmin.com>, or contact your Garmin dealer for information about optional accessories and replacement parts.

Appendix

Data Fields

%FTP: The current power output as a percentage of functional threshold power.

%HRR: The percentage of heart rate reserve (maximum heart rate minus resting heart rate).

10s Avg. Power: The 10-second moving average of power output.

10s Avg Balance: The 10-second moving average of the left/right power balance.

24-Hour Max.: The maximum temperature recorded in the last 24 hours.

24-Hour Min.: The minimum temperature recorded in the last 24 hours.

30s Avg. Power: The 30-second moving average of power output.

30s Avg Balance: The 30-second moving average of the left/right power balance.

3s Avg. Balance: The three-second moving average of the left/right power balance.

3s Avg. Power: The 3-second moving average of power output.

Ambient Press.: The uncalibrated ambient pressure.

Average HR: The average heart rate for the current activity.

Average Pace: The average pace for the current activity.

Average Power: The average power output for the current activity.

Average SWOLF: The average swolf score for the current activity. Your swolf score is the sum of the time for one length

plus the number of strokes for that length ([Swim Terminology](#)). In open water swimming, 25 meters is used to calculate your swolf score.

Avg. %HRR: The average percentage of heart rate reserve (maximum heart rate minus resting heart rate) for the current activity.

Avg. Ascent: The average vertical distance of ascent since the last reset.

Avg. Balance: The average left/right power balance for the current activity.

Avg. Cadence: Cycling. The average cadence for the current activity.

Avg. Cadence: Running. The average cadence for the current activity.

Avg. Descent: The average vertical distance of descent since the last reset.

Avg. Lap Time: The average lap time for the current activity.

Avg. Speed: The average speed for the current activity.

Avg. Strk/Len: The average number of strokes per length during the current activity.

Avg. Strk Rate: The average number of strokes per minute (spm) during the current activity.

Avg. Stroke Dist.: The average distance traveled per stroke during the current activity.

Avg. Vert. Osc.: The average amount of vertical oscillation for the current activity.

Avg GCT: The average amount of ground contact time for the current activity.

Avg HR %Max.: The average percentage of maximum heart rate for the current activity.

Balance: The current left/right power balance.

Baro. Pressure: The calibrated current pressure.

Bearing: The direction from your current location to a destination. You must be navigating for this data to appear.

Cadence: Cycling. The number of revolutions of the crank arm. Your device must be connected to a cadence accessory for this data to appear.

Cadence: Running. The steps per minute (right and left).

Calories: The amount of total calories burned.

Compass Hdg.: The direction you are moving based on the compass.

Course: The direction from your starting location to a destination. Course can be viewed as a planned or set route. You must be navigating for this data to appear.

Dest. Location: The position of your final destination.

Dest. Name: The last point on the route to the destination. You must be navigating for this data to appear.

Dist. Remaining: The remaining distance to the final destination. You must be navigating for this data to appear.

Distance: The distance traveled for the current track or activity.

Elapsed Time: The total time recorded. For example, if you start the timer and run for 10 minutes, then stop the timer for 5 minutes, then start the timer and run for 20 minutes, your elapsed time is 35 minutes.

Elevation: The altitude of your current location above or below sea level.

ETA: The estimated time of day when you will reach the final destination (adjusted to the local time of the destination). You must be navigating for this data to appear.

ETE: The estimated time remaining until you reach the final destination. You must be navigating for this data to appear.

- GCT:** The amount of time in each step that you spend on the ground while running, measured in milliseconds. Ground contact time is not calculated while walking.
- Glide Ratio:** The ratio of horizontal distance traveled to the change in vertical distance.
- Glide Ratio Dest.:** The glide ratio required to descend from your current position to the destination elevation. You must be navigating for this data to appear.
- GPS Elevation:** The altitude of your current location using GPS.
- GPS Heading:** The direction you are moving based on GPS.
- Grade:** The calculation of rise (elevation) over run (distance). For example, if for every 3 m (10 ft.) you climb you travel 60 m (200 ft.), the grade is 5%.
- Heading:** The direction you are moving.
- Heart Rate:** Your heart rate in beats per minute (bpm). Your device must be connected to a compatible heart rate monitor.
- HR %Max.:** The percentage of maximum heart rate.
- HR Zone:** The current range of your heart rate (1 to 5). The default zones are based on your user profile and maximum heart rate (220 minus your age).
- Int. Distance:** The distance traveled for the current interval.
- Int. Pace:** The average pace for the current interval.
- Int. SWOLF:** The average swolf score for the current interval.
- Intensity Factor:** The Intensity Factor™ for the current activity.
- Interval Lengths:** The number of pool lengths completed during the current interval.
- Interval Time:** The stopwatch time for the current interval.
- Int Strk/Len:** The average number of strokes per length during the current interval.
- Int Strk Dist:** The average distance traveled per stroke during the current interval.
- Int Strk Rate:** The average number of strokes per minute (spm) during the current interval.
- Int Strk Type:** The current stroke type for the interval.
- Int Strokes:** The total number of strokes for the current interval.
- L. Int. Stk. Dist.:** The average distance traveled per stroke during the last completed interval.
- L. Int. Stk. Rate:** The average number of strokes per minute (spm) during the last completed interval.
- L. Int. Stk. Type:** The stroke type used during the last completed interval.
- L. Int. Strokes:** The total number of strokes for the last completed interval.
- L. Int. SWOLF:** The average swolf score for the last completed interval.
- L. Len. Stk. Rate:** The average number strokes per minute (spm) during the last completed pool length.
- L. Len. Stk. Type:** The stroke type used during the last completed pool length.
- L. Len. Strokes:** The total number of strokes for the last completed pool length.
- Lap %HRR:** The average percentage of heart rate reserve (maximum heart rate minus resting heart rate) for the current lap.
- Lap Ascent:** The vertical distance of ascent for the current lap.
- Lap Balance:** The average left/right power balance for the current lap.
- Lap Cadence:** Cycling. The average cadence for the current lap.
- Lap Cadence:** Running. The average cadence for the current lap.
- Lap Descent:** The vertical distance of descent for the current lap.
- Lap Distance:** The distance traveled for the current lap.
- Lap GCT:** The average amount of ground contact time for the current lap.
- Lap HR:** The average heart rate for the current lap.
- Lap HR %Max.:** The average percentage of maximum heart rate for the current lap.
- Lap NP:** The average Normalized Power for the current lap.
- Lap Pace:** The average pace for the current lap.
- Lap Power:** The average power output for the current lap.
- Laps:** The number of laps completed for the current activity.
- Lap Speed:** The average speed for the current lap.
- Lap Time:** The stopwatch time for the current lap.
- Lap Vert. Osc.:** The average amount of vertical oscillation for the current lap.
- Last Int. Dist.:** The distance traveled for the last completed interval.
- Last Int. Pace:** The average pace for the last completed interval.
- Last Int. Time:** The stopwatch time for the last completed interval.
- Last Lap Ascent:** The vertical distance of ascent for the last completed lap.
- Last Lap Cad.:** Cycling. The average cadence for the last completed lap.
- Last Lap Cad.:** Running. The average cadence for the last completed lap.
- Last Lap Descent:** The vertical distance of descent for the last completed lap.
- Last Lap Dist.:** The distance traveled for the last completed lap.
- Last Lap HR:** The average heart rate for the last completed lap.
- Last Lap NP:** The average Normalized Power for the last completed lap.
- Last Lap Pace:** The average pace for the last completed lap.
- Last Lap Power:** The average power output for the last completed lap.
- Last Lap Speed:** The average speed for the last completed lap.
- Last Lap Time:** The stopwatch time for the last completed lap.
- Last Len. Pace:** The average pace for your last completed pool length.
- Last Len. SWOLF:** The swolf score for the last completed pool length.
- Lat/Lon:** The current position in latitude and longitude regardless of the selected position format setting.
- Lengths:** The number of pool lengths completed during the current activity.
- Location:** The current position using the selected position format setting.
- Max. Ascent:** The maximum rate of ascent in feet per minute or meters per minute since the last reset.
- Max. Descent:** The maximum rate of descent in meters per minute or feet per minute since the last reset.
- Max. Elevation:** The highest elevation reached since the last reset.
- Max. Lap Power:** The top power output for the current lap.
- Maximum Speed:** The top speed for the current activity.
- Max Power:** The top power output for the current activity.
- Min. Elevation:** The lowest elevation reached since the last reset.

Nautical Dist: The distance traveled in nautical meters or nautical feet.

Nautical Speed: The current speed in knots.

Normalized Power: The Normalized Power™ for the current activity.

Off Course: The distance to the left or right by which you have strayed from the original path of travel. You must be navigating for this data to appear.

Pace: The current pace.

Pedal Smoothness: The measurement of how evenly a rider is applying force to the pedals throughout each pedal stroke.

Power: The current power output in watts.

Power to Weight: The current power measured in watts per kilogram.

Power Zone: The current range of power output (1 to 7) based on your FTP or custom settings.

Repeat On: The timer for the last interval plus the current rest (pool swimming).

Rest Timer: The timer for the current rest (pool swimming).

Speed: The current rate of travel.

Steps: The number of steps recorded by the foot pod.

Stroke Rate: The number of strokes per minute (spm).

Strokes: The total number of strokes for the current activity.

Sunrise: The time of sunrise based on your GPS position.

Sunset: The time of sunset based on your GPS position.

Temperature: The temperature of the air. Your body temperature affects the temperature sensor.

Time in Zone: The time elapsed in each heart rate or power zone.

Time of Day: The time of day based on your current location and time settings (format, time zone, daylight saving time).

Timer: The current time of the countdown timer.

Torque Effectiveness: The measurement of how efficiently a rider is pedaling.

Total Ascent: The total elevation distance ascended since the last reset.

Total Descent: The total elevation distance descended since the last reset.

Training Effect: The current impact (1.0 to 5.0) on your aerobic fitness.

Training Stress Score: The Training Stress Score™ for the current activity.

V Dist to Dest: The elevation distance between your current position and the final destination. You must be navigating for this data to appear.

Vertical Osc.: The amount of bounce while you are running. The vertical motion of your torso, measured in centimeters for each step.

Vertical Speed: The rate of ascent or descent over time.

Vert Spd to Tgt: The rate of ascent or descent to a predetermined altitude. You must be navigating for this data to appear.

VMG: The speed at which you are closing on a destination along a route. You must be navigating for this data to appear.





Work: The accumulated work performed (power output) in kilojoules.

Garmin Ltd. and its subsidiaries (“Garmin”) grant you a limited license to use the software embedded in this device (the “Software”) in binary executable form in the normal operation of the product. Title, ownership rights, and intellectual property rights in and to the Software remain in Garmin and/or its third-party providers.

You acknowledge that the Software is the property of Garmin and/or its third-party providers and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software, for which source code is not provided, are valuable trade secrets of Garmin and/or its third-party providers and that the Software in source code form remains a valuable trade secret of Garmin and/or its third-party providers. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America or the export control laws of any other applicable country.

Symbol Definitions

These symbols may appear on the device or accessory labels.

	Alternating current. The device is suitable for alternating current.
	Direct current. The device is suitable for direct current only.
	Fuse. Indicates a fuse specification or location.
	WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.

Software License Agreement

BY USING THE DEVICE, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

Index

- A**
 - accessories **18**
 - activities **1, 12**
 - saving **2, 4**
 - starting **2, 4**
 - activity tracking **5, 6**
 - alarms **10, 13**
 - alerts **13**
 - altimeter **5, 14**
 - calibrating **14**
 - ANT+ sensors **15**
 - applications **10, 11**
 - smartphone **1**
 - Auto Lap **13**
 - Auto Pause **13**
 - auto scroll **14**
- B**
 - backlight **1, 15**
 - bands **16**
 - barometer **5, 14**
 - battery **16**
 - charging **1**
 - life **17**
 - maximizing **11, 14, 18**
 - replacing **17**
 - bike sensors **16**
 - Bluetooth technology **10, 11**
- C**
 - cadence **2, 7, 8**
 - alerts **13**
 - sensors **16**
 - calendar **6**
 - calibrating
 - altimeter **14**
 - compass **14**
 - calorie, alerts **13**
 - charging **1**
 - cleaning the device **16, 17**
 - clock **10**
 - compass **4, 14**
 - calibrating **14**
 - Connect IQ **11, 12**
 - coordinates **4**
 - countdown timer **10**
 - customizing the device **12**
 - cycling **3**
- D**
 - data
 - pages **12**
 - storing **11**
 - transferring **11**
 - uploading **11**
 - data fields **2, 11**
 - deleting
 - all user data **17**
 - history **10**
 - personal records **7**
 - distance **14**
 - alerts **13**
 - drills **3**
- F**
 - fitness **9**
 - foot pod **15, 16**
- G**
 - Garmin Connect **1, 6, 10–12**
 - storing data **11**
 - Garmin Express **1, 11**
 - registering the device **1**
 - updating software **1**
 - GLONASS **14**
 - goals **7**
 - GPS **14**
 - ground contact time **8**
- H**
 - heart rate
 - alerts **13**
 - monitor **8, 9, 15–17**
 - zones **5, 10**
 - hiking **2**
 - history **3, 4, 10**
 - deleting **10**
 - sending to computer **11**
- I**
 - intervals **3**
 - workouts **6, 7**
- K**
 - keys **1, 14**
- L**
 - language **14**
 - lengths **3**
 - lifetime athlete **5**
 - locations **4**
 - saving **4**
- M**
 - main menu, customizing **14**
 - maps **13**
 - browsing **4**
 - navigating **4, 5**
 - updating **1**
 - menu **1**
 - metronome **2**
 - multisport **4, 10**
- N**
 - navigation **13**
 - Sight 'N Go **4**
 - north reference **14**
 - notifications **11**
- O**
 - open-water swimming **3**
- P**
 - pairing
 - ANT+ sensors **15**
 - smartphone **1**
 - personal records **7**
 - deleting **7**
 - pool size **3**
 - power (force)
 - alerts **13**
 - meters **9**
 - product registration **1**
 - profiles **1**
 - user **5**
 - projected finish time **9**
- R**
 - racing **7**
 - recovery **9**
 - registering the device **1**
 - replacing the battery **17**
 - resetting the device **17, 18**
 - routes **4**
 - running dynamics **7, 8**
- S**
 - saving activities **2–4**
 - screen **15**
 - settings **12, 14, 15, 18**
 - Sight 'N Go **4**
 - skiing **2**
 - alpine **2**
 - snowboarding **2**
 - sleep mode **6**
 - smartphone **11, 12**
 - applications **10, 11**
 - pairing **1**
 - snowboarding **2**
 - software
 - license **16**
 - updating **1**
 - version **16**
 - software license agreement **20**
 - specifications **16, 17**
 - speed **14**
 - stopwatch **10**
 - strokes **3**
 - swimming **3**
 - swolf score **3**
 - system settings **14**
- T**
 - target **7**
 - tempe **15, 17**
 - temperature **15, 17**
 - time
 - alerts **13**
 - settings **15**
 - zones and formats **15**
 - timer **2–4, 10**
 - countdown **10**
 - tones **2, 10**
 - TracBack **2, 5**
 - tracks **2, 4**
 - training **6, 7, 10**
 - pages **2**
 - plans **6**
 - Training Effect **9**
 - triathlon training **4**
 - troubleshooting **8, 16–18**
- U**
 - UltraTrac **14**
 - unit ID **16**
 - units of measure **15**
 - uploading data **11**
 - USB, disconnecting **17**
 - user data, deleting **17**
 - user profile **5**
- V**
 - vertical oscillation **7, 8**
 - VIRB remote **12**
 - Virtual Partner **7**
 - VO2 max. **8, 9**
- W**
 - watch faces **11, 14**
 - watch mode **14**
 - water resistance **16**
 - Wi-Fi, connecting **11**
 - widgets **11, 12**
 - workouts **6**
 - loading **6**
- Z**
 - zones, heart rate **5**
 - zooming **1**

www.garmin.com/support



+43 (0) 820 220230



+ 32 2 672 52 54



0800 770 4960



1-866-429-9296



+385 1 5508 272
+385 1 5508 271



+420 221 985466
+420 221 985465



+ 45 4810 5050



+ 358 9 6937 9758



+ 331 55 69 33 99



+ 39 02 36 699699



(+52) 001-855-792-7671



0800 0233937



+47 815 69 555



00800 4412 454
+44 2380 662 915



(+35) 1214 447 460



+386 4 27 92 500



0861 GARMIN (427 646)
+27 (0)11 251 9999



+34 93 275 44 97



+ 46 7744 52020



+886 2 2642-9199 ext 2



0808 238 0000
+44 (0) 870 8501242



+49 (0)180 6 427646
20 ct./Anruf. a. d.
deutschen Festnetz,
Mobilfunk max. 60 ct./Anruf



913-397-8200
1-800-800-1020

