



Agilent N5399A HDMI Electrical Performance Validation and Compliance Software for Infiniium Oscilloscopes

Data Sheet

Verify and debug your HDMI designs more easily

Agilent Technologies N5399A HDMI electrical performance validation and compliance software for Infiniium 80000 and 90000 Series oscilloscopes provides you with a fast and easy way to verify and debug your High Definition Multi-media Interface (HDMI) designs for set-top boxes, Digital Video Recorders, DVD players, entertainment systems, and motherboard systems. The HDMI electrical test software is designed for use in HDMI Authorized Test Centers (ATCs) so you can confidently use it to execute HDMI electrical checklist tests as well as employ it as a development tool. It displays the measurement data results in a flexible report format and the report also provides a margin analysis that shows how closely your device passed or failed each test.

To make measurements with the N5399A HDMI electrical test software, you may also need the N1080A HDMI TPA Fixtures for signal access.



The N5399A HDMI electrical test software performs a wide range of tests required to meet the HDMI 1.3 electrical specifications for various home theater components (DVD players, set top boxes, etc), entertainment, and motherboard systems as documented in section 4.2 of the base specification by the HDMI Standards Body¹. To introduce an HDMI product to the market your product must successfully pass compliance testing based on the HDMI specification and it is expected that you have performed the tests included on the checklist before you

submit your product for full compliance testing at one of the compliance test labs. The N5399A HDMI electrical test software helps you execute the most difficult physical layer tests on the transmitter (Tx) checklist that can be measured with an oscilloscope. As an HDMI adopter, you must submit your first HDMI product to the HDMI ATC for certification; the N5399A software is targeted to ensure that product has been debugged and well characterized prior to the certification and to become the sole HDMI test environment for all of your subsequent HDMI transmitter products.

1 High Definition Multi-media Interface Organization (www.hdmi.org)



Agilent Technologies

Features

The N5399A HDMI electrical test software offers several features to simplify the validation of HDMI designs:

- Test setup wizard for ease-of-use
- Wide range of electrical tests
- Measurement process configurability
- Automated scope measurement setup
- Test results report generation
- Pass/fail margin analysis

With the HDMI electrical test software, you can use the same oscilloscope you use for everyday debugging to perform automated testing and margin analysis based on the HDMI-specified test checklist.

N5399A saves you time

The N5399A HDMI electrical test software saves you time by setting the stage for automatic execution of HDMI electrical tests. Part of the difficulty of performing electrical tests for HDMI is connecting the oscilloscope to the target device, configuring the instrument for measurement, executing the test procedure, and then analyzing the measured results by comparing them to limits published in the specification. The HDMI electrical test software does almost all of this work for you. Further, new filtering constructs (such as the reference equalizer) adopted in HDMI 1.3 which are extremely difficult to design, are implemented in the software. In addition, if you discover a problem with your device, debug tools are available to aid in root-cause analysis.

The N5399A HDMI electrical test software offers the eight required HDMI Transition Minimized Differential Signaling (TMDS) electrical tests as well as two important tests for cable and receiver tolerance testing. The software automatically configures the oscilloscope for each test, and it provides an informative results report that includes margin analysis indicating how close your product is to passing or failing that specification. Clock recovery of the TMDS clock is accomplished according to the standard by the oscilloscope using proprietary software techniques. See Table 2 for a complete list of the measurements made by the HDMI electrical test software.

Easy test definition

The N5399A HDMI electrical test software extends the ease-of-use advantages of Agilent's Infiniium oscilloscopes to testing HDMI designs. The Agilent automated test engine walks you quickly through the steps required to define the tests, set up the test, perform the tests, and view the test results. The user is allowed to pick high level test parameters to suit test process objectives, and then can proceed to select a category of tests all at once, or specify individual tests. The user interface is oriented to minimize your reconnections necessary which saves time as well as minimizes potential for operator error. You can save tests and configurations as project files and recall them later for quick testing and review of previous test results. Straightforward menus let you perform tests with a minimum of mouse clicks.

Test environment setup and test selection

The N5399A now allows the user to select test environment variables to better suit testing goals as well as improving documentation. Three selection areas are offered: Test Setup, Device Under Test, and Probe Offset Calibration. The Test Setup offers channel connection models of 2 or 4 channel connection. The 2 channel connection is the standard user connection model, however, the 4 channel model provides the capability to test all differential parameters on all 4 HDMI high-speed lanes with only one test connection. This selection also allows entry of the test fixture type used which is important for probe selection and for total compliance test configuration tracking. Also selectable is the HDMI specification version (1.2 or 1.3) and whether you want to hide informative tests. The current version for HDMI is 1.3, however you may wish to correlate results to 1.2 and find the option useful. Informative tests are provided for additional characterization capability (such as jitter separation measurement if you have the EZJIT Plus analysis package, N5400A).

The Device Under Test section allows selection of device type tested (transmitter, receiver or cable). Though the primary use of this compliance software is for the transmitter, there are use models requiring receiver eye measurement or calibration, cable eye evaluation and cable equalization where other options are useful.

The Device Identifier targets the type of DUT and will enable only those tests for the device type chosen. The Device Name and Comments allows you to name the device or to identify key configuration details. All of these are captured in the final report.

The Probe Offset calibration procedure is provided to make precision measurements when measuring the eye at TP2 (at the receiver). The offset calibration can be zeroed manually and, if performed, will be used in all measurements for greater accuracy.

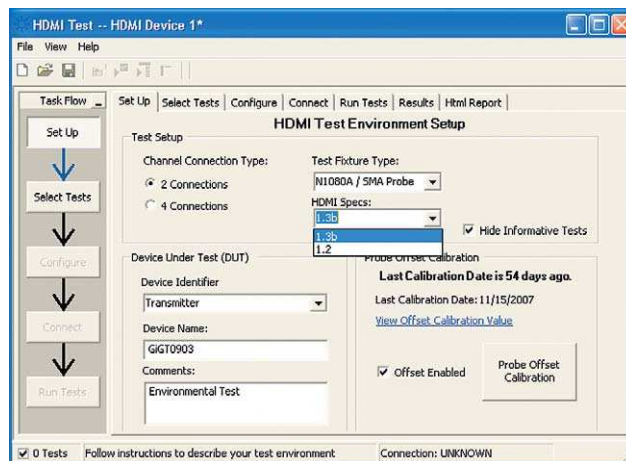


Figure 1. The New Test Setup Screen. Selection for 2 or 4 channel connection model, test fixture selection and device type.

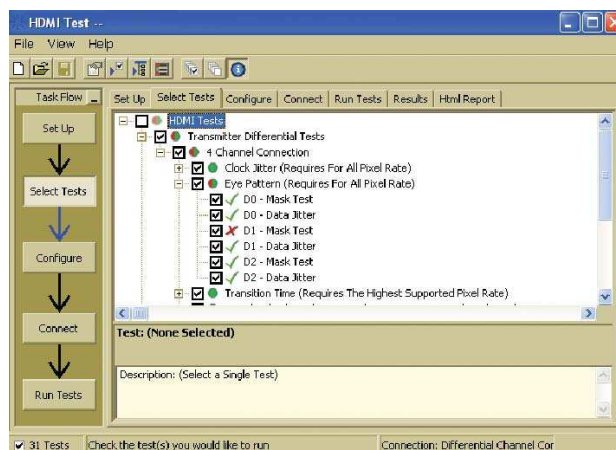


Figure 2. The Agilent automated test engine guides you quickly through selecting and configuring tests, setting up the connection, running the tests, and viewing the results. You can easily select individual tests or groups of tests with a mouse-click. Also easily seen is the test status for the device under test.

Configurability and guided connections

The N5399A HDMI electrical test software provides flexibility in your test setup. It guides you to make connection changes with hookup diagrams when the tests you select require it. For test parameters such as Bandwidth reduction or data channel selection, the user can select values deemed appropriate; for the more critical parameters, such as rise time trigger pattern, default values are tied to the compliance standard and so these can only be altered in the debug screen. Shown in Figure 3 is the selection for the various mask test functions that the N5399A offers. The default for compliance mode is 'Find passing condition' which will horizontally search for a passing condition of the mask.

After configuring the test according to your needs, the N5399A User Interface will then present you the connection screen which is specific to the configuration data you have selected. Figure 4 illustrates the typical connection guidance provided for a two channel connection model.

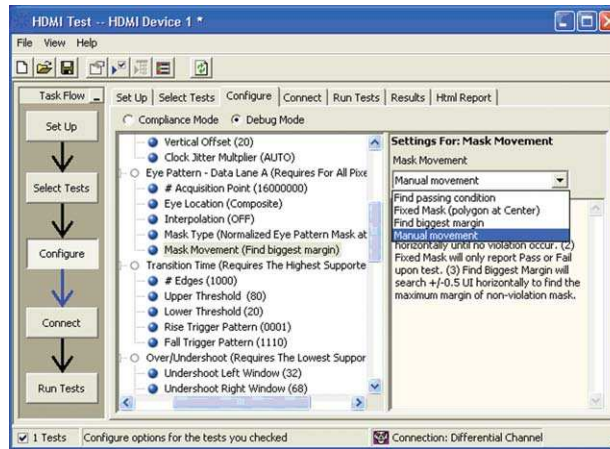


Figure 3. In configuring the tests, you define the device to test, its configuration, and how the oscilloscope is connected. Shown here is the N5399A's Debug Mode selection for Eye analysis.

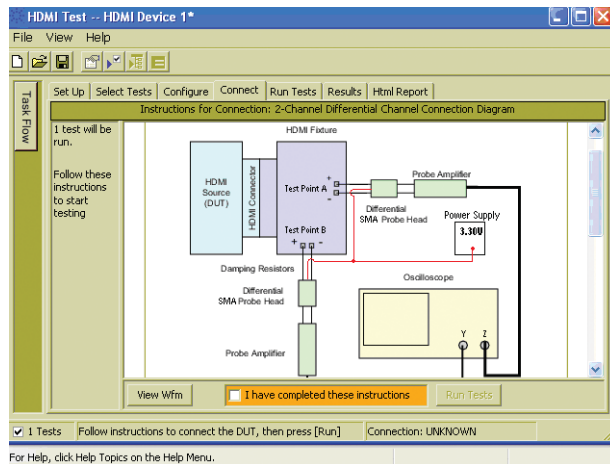


Figure 4. When you make multiple tests where the connections must be changed, the software prompts you with connection diagrams and/or photographs.

N1080A HDMI TPAs

The N1080A H01 HDMI TPA Test fixture is also available to simplify the measurement process by providing access the electrical measurement points required for the compliance tests. It breaks out the TMDS (transition minimized differential signaling) lines to SMA connectors for high bandwidth probing with the InfiniiMax SMA differential probes and allows for the single ended measurements required as well. To support the Digital Display Channel where the Electronic Display Identification data is exchanged, the N1080A H03 can be used. This is shown in Figure 5b. For more information see publication number 5989-5118EN.

Margin analysis

In addition to providing you with measurement results, the N5399A HDMI electrical test software provides a report format that shows you not only where your product passes or fails, but also reports how close you are to the limits specified for a particular test assertion. You select the margin test report parameter, which means you can specify the level at which warnings are issued to alert you to the electrical tests where your product is operating close to the official test limit defined by the HDMI 1.3 specification for a given test assertion.



Figure 5b. The N1080A H03 test point adapter

Margin is calculated:

Single-sided specification:

$$\text{Margin} = (\text{Value}_{\text{Specification}} - \text{Value}_{\text{actual}}) / \text{Value}_{\text{Specification}}$$

Double-sided specification:

$$\text{Margin} = \text{lowest of: } (\text{Value}_{\text{Specification_High}} - \text{Value}_{\text{actual}}) / \text{Range}_{\text{Specification}}$$

$$\text{and } (\text{Value}_{\text{Specification_Low}} - \text{Value}_{\text{actual}}) / \text{Range}_{\text{Specification}}$$

Eye margin: another method of evaluating the eye is provided by sweeping the eye horizontally with the specified mask and determining the last locations on the left and right portions of the interior eye where there are no violations in the mask. The distance from the center mask location is a measure of design margin and is reported as Eye margin if that eye mask mode is chosen in the configuration screen.

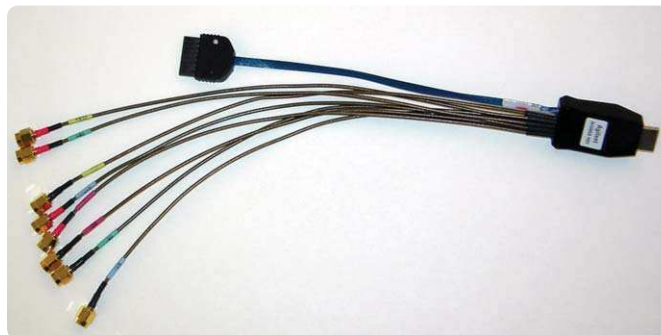


Figure 5a. The Agilent N1080A H01 HDMI test fixture.

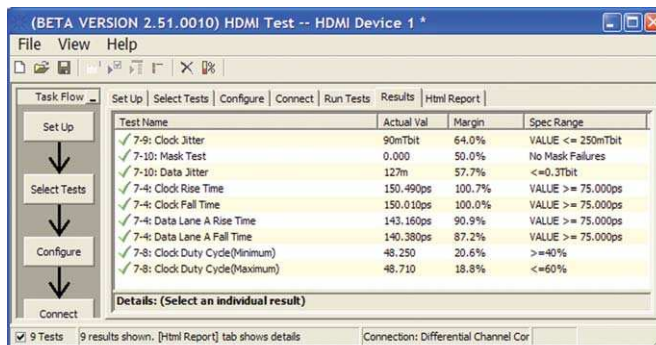


Figure 6. The HDMI electrical test software results report documents your test, indicates the pass/fail status, the test specification range, the measured values, and the margin.

Thorough performance reporting

The N5399A HDMI Compliance and Validation software generates thorough reports that not only capture the performance and status of the device under test, but also the screen shots of the your most significant measurements for your perusal and

evaluation. The first page of the report lists equipment and configuration details required in standard quality assurance programs. It also provides a hot-linked results table that will quickly get you to the measurement report section of interest.

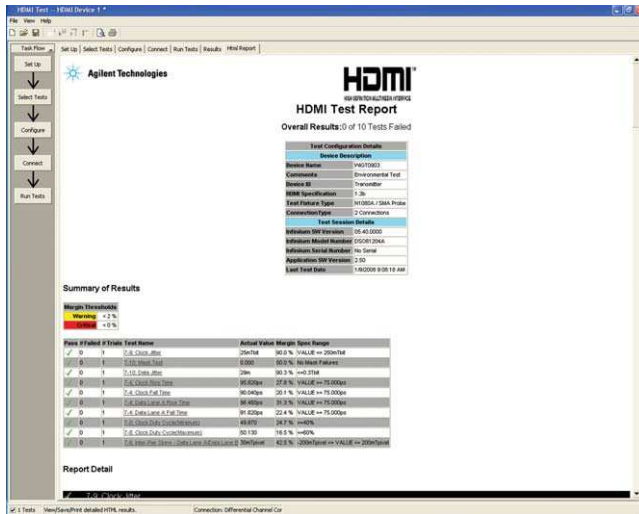


Figure 7a. The N5399A software generates a summary report where you can see the total test results for your device quickly and clearly. This is the title page illustrating the important session information regarding the connection, device and measurement equipment.

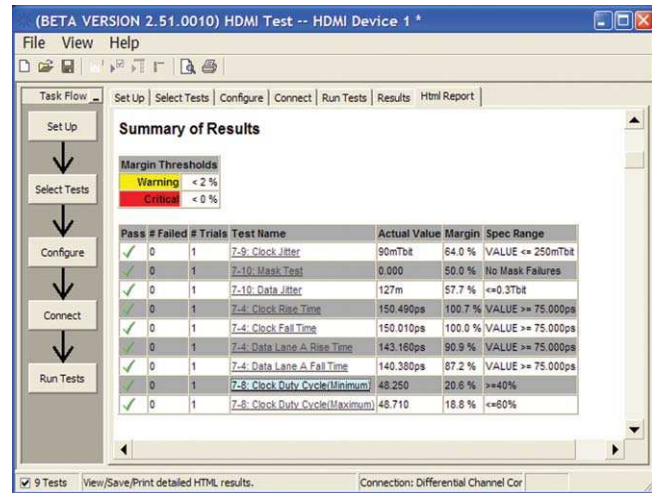


Figure 7b. Additional details are available for each test including the test limits, test description, and test results, including waveforms, if appropriate. In addition, the margin of the result is indicated to provide further insight.

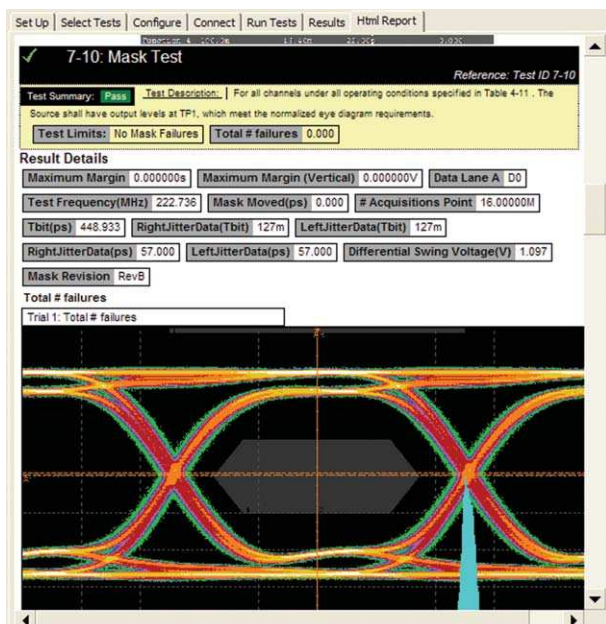


Figure 8. Summary Report Detail: the N5399A software's summary report yields all the screen shots of all the measurements that have been performed. In this figure you can see the Data-Eye. Observe the clear status and description at top and the measurement data just above the eye.

Cable equalization feature

The N5399A software is implemented with the latest features required for HDMI 1.3b CTS compliance. Among the many new changes is the equalization of the cable for receiver eye analysis. This feature can be turned on and off for further insight into cable performance. The figure below illustrates the performance of a non-equalized HDMI cable versus equalization for a 5 meter cable. A use of this feature is to evaluate receiver design comparing actual or modeled results against the HDMI reference equalizer.

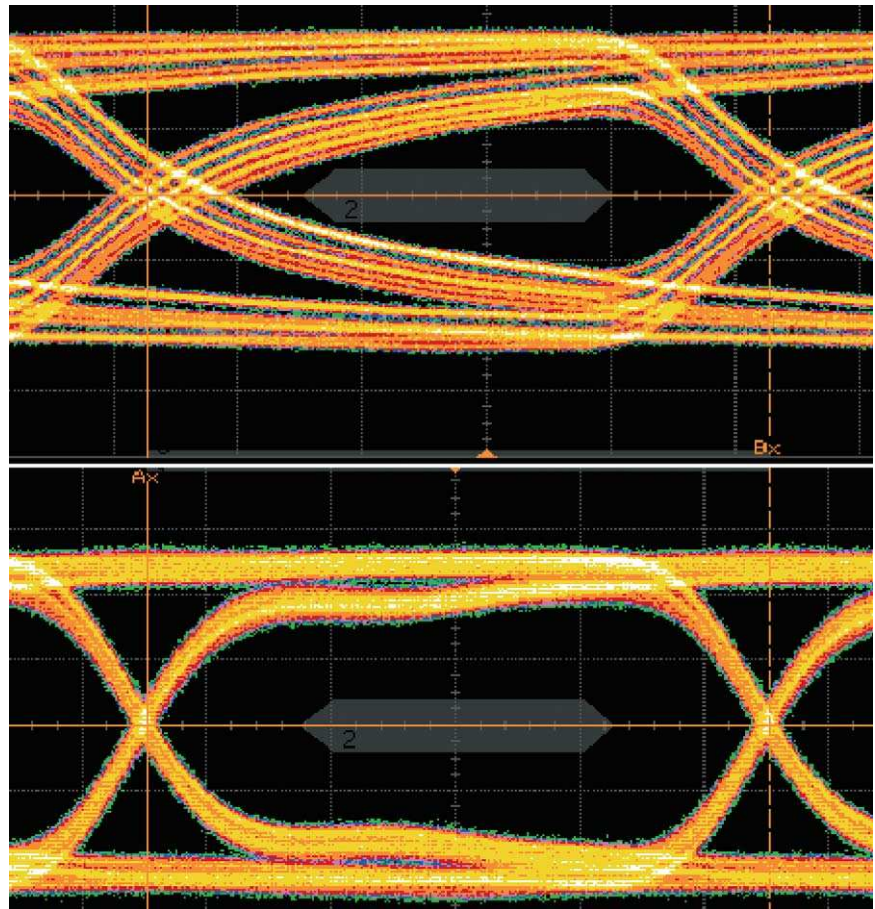


Figure 9. Cable Equalization Model for receiver eye or cable analysis. Top: no equalization. Bottom: 5 meter HDMI equalization model applied.

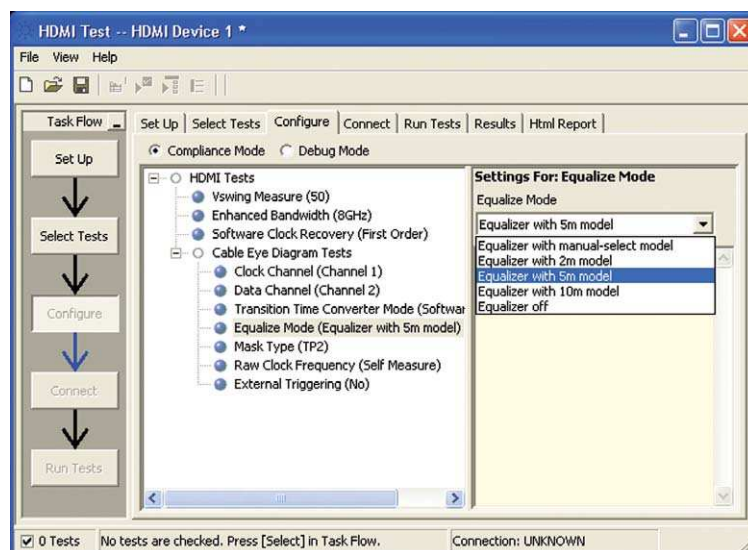


Figure 10. Selecting the cable length to be equalized in the configuration screen when performing cable and eye measurements.

Measurement requirements

To use the N5399A HDMI electrical performance validation and compliance software with the Agilent N1080A HDMI TPA Fixture, you will need at least two 7 GHz or higher InfiniiMax differential probe amplifiers (1134A, 1168A, or 1169A) with appropriate SMA probe heads (N5380A). If not using the N1080A H01 test fixture, you will need to select the appropriate probe head to interface with your fixture. For instance, if the TMDS signals are accessible through a terminated 50 ohm transmission line for testing for example, silicon devices, you will need to use the E2678A socketed probe head, or the E2677 or N5381A solder-in differential probe head for high impedance probing.

Test time can be minimized by using four InfiniiMax probes to measure all three differential data lanes (D0, D1, D2) and clock without having to reposition or reconnect probes. This is called the 'Four Probe Connection' and is selectable in the Setup screen.

Oscilloscope compatibility

The N5399A HDMI electrical performance validation and compliance software is compatible with Agilent 54850, 80000 and 90000 Series oscilloscopes with operating software revision A.05.10 or higher (for 54850 or DSO80000 Series) or A.1.2.0 or higher (for DSO90000 Series). For oscilloscopes with earlier software revisions, free upgrade software is available at http://www.agilent.com/find/infiniium_software.

Table 1. Recommended oscilloscopes and bandwidth for HDMI 1.3 specification

Agilent oscilloscopes for HDMI 1.3 compliance test*			
Data rate	Bandwidth	Suitable oscilloscopes	Recommended new purchase
Up to 740 Mb/s	4 GHz	54854A	DSO90404A
		DSO80404A/B	
	6 GHz	54855A	DSO90604A
Up to 3.4 Gb/s	8 GHz	DSO80604A/B	
		DSO80804A/B	DSO90804A
	10 GHz	DSO80404A/B	DSO90804A
	12 GHz	DSO81004A/B	
	13 GHz	DSO81204A/B	DSO91204A
		DSO81304A/B	DSO91304A

† The N5399A software will automatically control the bandwidth setting of the oscilloscope if the N5403A noise reduction software is enabled (for DSO80000A/B or Option 005 for DSO90000A Series).

* The HDMI 1.3 CTS Specification supersedes the previous 1.2a HDMI version.

†† The DSO90000A Series of Oscilloscopes are upgradable in bandwidth from 2 to 13 GHz

Tests performed

The N5399A HDMI electrical performance validation and compliance software performs the following tests as per the HDMI Compliance Test Specifications 1.3 (CTS1.3) as documented in section 4.2 of the base specification.

Table 2. HDMI electrical tests performed by the N5399A software

Assertion No.	Description
Section 7.0	Transmitter tests
Test ID 7.2	TMDS V_L
Test ID 7.4	TMDS T_{Rise} and T_{Fall}
Test ID 7.5*	TMDS Over/Undershoot
Test ID 7.6	TMDS Inter Pair Skew
Test ID 7.7	TMDS Intra Pair Skew
Test ID 7.8	TMDS Clock Duty Cycle
Test ID 7.9	TMDS Clock Jitter
Test ID 7.10	TMDS Data Eye Diagram
Sections 5.0 and 8.0	Cable and Receiver Tests
Test ID 5.3	Cable Eye Diagram Test
Test ID 8.5	Min/Max Differential Swing Tolerance
Test ID 8.7	TMDS Jitter Tolerance Calibrations

*This test omitted in HDMI 1.3 Specification.

Note: The N5399A HDMI test software can make measurements for Digital Visual Interface (DVI) 1.0 devices. However, those devices are governed by the DVI specification which calls out different test methodologies and test fixturing. For DVI, Agilent offers the N5394A DVI electrical performance validation and compliance software.

Ordering information

To purchase the N5399A HDMI electrical performance validation and compliance software with a new or existing Infiniium 90000 Series oscilloscope, order the following:

Table 3a. HDMI Oscilloscope solution ordering information

Model number	Description	Quantity
DSO90804A	Oscilloscope (see Table 1)	1
1168A/1169A	10/12 GHz Probe Amplifiers. (1169A recommended)	4
N5380A	12 GHz SMA probe heads for differential and single-ended measurements	5
N5399A	HDMI Test Compliance software for Infiniium 54850A, DSO80000 and DSO90000 Series oscilloscopes	1

For physical connection to an HDMI device to perform tests with the N5399A HDMI compliance test software, order the following:

Table 3b. HDMI Test Adapter solution ordering information

Model number	Description	Quantity
N1080A H01	HDMI Plug Test Adapter	1
N1080A H03	DDC/CEC Test Adapter board	1
N1080A H02	HDMI Receptacle Test Adapter For cable evaluation or receiver eye tests/analysis	1 (optional)

Measurement and test accessories

To complete your test setup, Agilent provides a wide range of cables, adapters, terminations, etc.

Table 4. Recommended test accessories

Model number	Description
11667B	Power splitter, DC to 26.5 GHz, 3.5-mm (f) connectors
11636B	Power divider, DC to 26.5 GHz, 3.5-mm (f) connectors
8493B	Coaxial attenuator (3, 6, 10, 20 or 30 dB), DC to 18-GHz, SMA connector
1250-1158	SMA (f - f) adapter, DC to 18 GHz
1250-1159	SMA (m - m) adapter, DC to 18 GHz
1250-1397	Right-angle adapter, SMA (m - m)
1250-1741	Right-angle adapter, SMA (f - m)
1250-1698	SMA tee adapter (m, f, f), DC to 12.4 GHz
1250-1694	SMA (m) to SMA (f) adapter
15442A	Cable kit, four 90-cm (36-inch) SMA (m - m) cables
15443A	Matched cable pair, two 90-cm (36-inch) SMA (m - m) cables, propagation delay within 25 ps
1810-0118	SMA (m) 50 Ω termination
33SMA-Q50-0-4	SMA push-on adaptors from S.M. Electronics (or equivalent)
ZX85-12G-S+	Bias Tee from Mini-Circuits Corporation
BIT-GEN-SCK-0070	Snap on Connector Kit from Bitifeye corporation. www.Bitifeye.com
BIT-HDMI-PPD-7373	Probe Power Distribution Kit from Bitifeye corporation. www.bitifeye.com

Product Web site

For the most up-to-date and complete application and product information, please visit our product Web site at: www.agilent.com/find/scope-apps

Related literature

Publication title	Publication type	Publication number
<i>Agilent Infiniium DSO/DSA90000A Series</i>	Data sheet	5989-7819EN
<i>Infiniium 80000 Series Oscilloscopes</i> <i>InfiniMax Series Probes</i>	Data Sheet	5989-4604EN
<i>Agilent Technologies N5394A DVI Electrical Performance Validation and Compliance Software for Infiniium Oscilloscopes</i>	Data Sheet	5989-1526EN
<i>Agilent N1080A HDMI Test Point Access Adapters</i>	Data Sheet	5989-5118EN
<i>Agilent Technologies N5990A Automation Software Platform</i>	Data Sheet	5989-5483EN

For copies of this literature, contact your Agilent representative or visit www.agilent.com/find/scope-apps



Agilent Email Updates

www.agilent.com/find/emailupdates

Get the latest information on the products and applications you select.



Agilent Direct

www.agilent.com/find/agilentdirect

Quickly choose and use your test equipment solutions with confidence.



www.agilent.com/find/open

Agilent Open simplifies the process of connecting and programming test systems to help engineers design, validate and manufacture electronic products. Agilent offers open connectivity for a broad range of system-ready instruments, open industry software, PC-standard I/O and global support, which are combined to more easily integrate test system development.



www.lxistandard.org

LXI is the LAN-based successor to GPIB, providing faster, more efficient connectivity. Agilent is a founding member of the LXI consortium.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation.

Pentium is a U.S. registered trademark of Intel Corporation.

Remove all doubt

Our repair and calibration services will get your equipment back to you, performing like new, when promised. You will get full value out of your Agilent equipment throughout its lifetime. Your equipment will be serviced by Agilent-trained technicians using the latest factory calibration procedures, automated repair diagnostics and genuine parts. You will always have the utmost confidence in your measurements.

Agilent offers a wide range of additional expert test and measurement services for your equipment, including initial start-up assistance, onsite education and training, as well as design, system integration, and project management.

For more information on repair and calibration services, go to:

www.agilent.com/find/removealldoubt

www.agilent.com

www.agilent.com/find/hdmi

For more information on Agilent Technologies' products, applications or services, please contact your local Agilent office. The complete list is available at:

www.agilent.com/find/contactus

Americas

Canada	(877) 894-4414
Latin America	305 269 7500
United States	(800) 829-4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Thailand	1 800 226 008

Europe & Middle East

Austria	01 36027 71571
Belgium	32 (0) 2 404 93 40
Denmark	45 70 13 15 15
Finland	358 (0) 10 855 2100
France	0825 010 700*
	*0.125 €/minute
Germany	07031 464 6333**
	**0.14 €/minute
Ireland	1890 924 204
Israel	972-3-9288-504/544
Italy	39 02 92 60 8484
Netherlands	31 (0) 20 547 2111
Spain	34 (91) 631 3300
Sweden	0200-88 22 55
Switzerland	0800 80 53 53
United Kingdom	44 (0) 118 9276201

Other European Countries:

www.agilent.com/find/contactus

Revised: July 17, 2008

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 2008
Printed in USA, August 19, 2008
5989-3047EN



Agilent Technologies