

Photo IC diode

S7183, S7184

Linear current amplification of photodiode output



S7183 and S7184 consist of a photodiode and a signal processing circuit for amplifying the photocurrent generated from the photodiode up to 1300 times. Despite a small active area, these photo ICs provide an output nearly equal to that from photodiodes with a 20×20 mm active area. Both S7183 and S7184 can be used the same way as a reverse-biased photodiode, and in most cases, they deliver a sufficient output voltage by just connecting a load resistor.

Features

- Clear plastic package
- Operation just as easy as using photodiodes
- Large output current rivaling that of a phototransistor
- Good linearity

Applications

- Energy saving sensors for TV brightness controls, etc.
- Light dimmers for liquid crystal panels
- Various types of light level measurement

■ Absolute maximum ratings ($T_a=25^\circ\text{C}$)


Parameter	Symbol	Value	Unit
Reverse voltage	V_R	-0.5 to 16	V
Photocurrent	I_L	10	mA
Forward current	I_F	10	mA
Power dissipation *1	P	250	mW
Operating temperature	T_{opr}	-30 to +80	$^\circ\text{C}$
Storage temperature	T_{stg}	-40 to +85	$^\circ\text{C}$
Soldering	-	S7183 260 $^\circ\text{C}$, 3 s, at least 2.5 mm away from package surface S7184 230 $^\circ\text{C}$, 5 s,	-

*1: Derate power dissipation at a rate of 3.3 mW/ $^\circ\text{C}$ above $T_a=25^\circ\text{C}$


■ Electrical and optical characteristics ($T_a=25^\circ\text{C}$)

Parameter	Symbol	Condition	Min.	Typ.	Max.	Unit
Spectral response range	λ		-	300 to 1000	-	nm
Peak sensitivity wavelength	λ_p		-	650	-	nm
Operating reverse voltage	V_R		3	-	12	V
Dark current	I_D	$V_R=5$ V	-	0.5	10	nA
Photocurrent	I_L	$V_R=5$ V 2856 K	S7183, 100 I_x 0.75	1.0	1.25	mA
			S7184, 1000 I_x 1.4	1.8	2.2	
Rise/fall time	t_r, t_f	10 to 90 %, *2 $V_R=5$ V, $R_L=10$ k Ω $\lambda=660$ nm	-	0.6	-	ms


*2: Rise/fall time measurement method

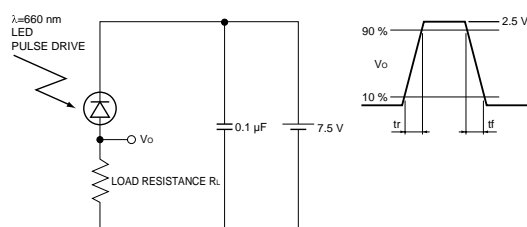


Spectral response

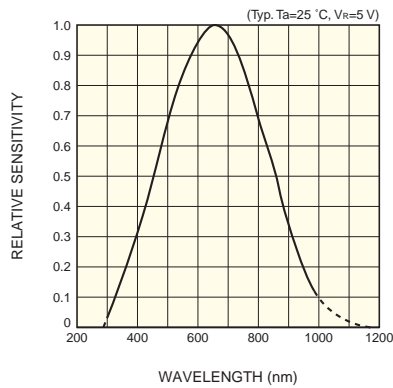


Dark current vs. ambient temperature

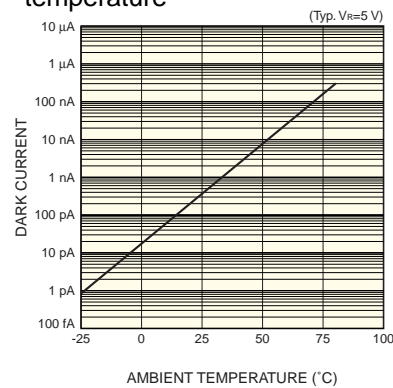

Rise/fall time vs. load resistance

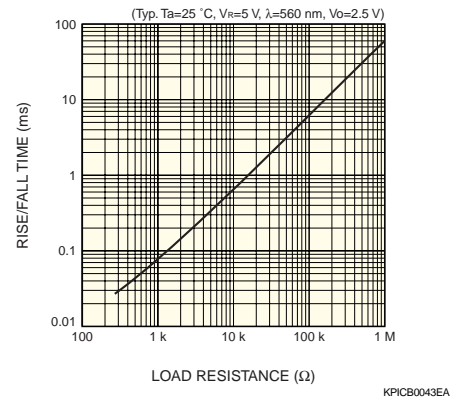

Operating circuit example

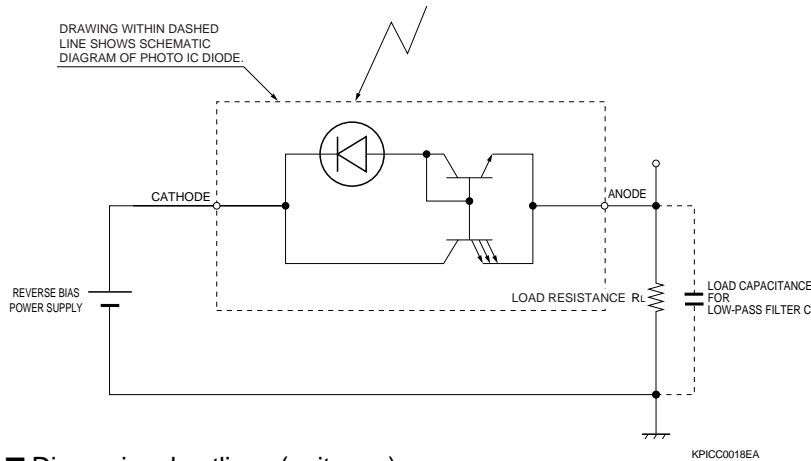


The photodiode must be reverse-biased so that a positive potential is applied to the cathode. To eliminate high-frequency components, we recommend placing a load capacitance C_L in parallel with load resistance R_L as a low-pass filter.


$$\text{Cut-off frequency } f_c \doteq \frac{1}{2\pi C_L R_L}$$

Dimensional outlines (unit: mm)

S7183

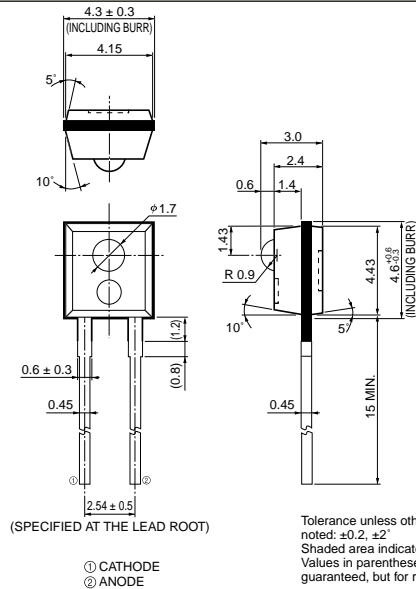

S7184

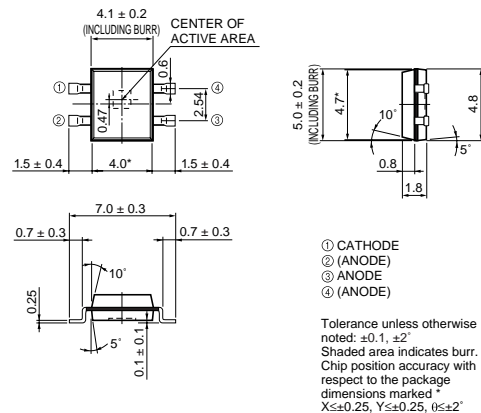

Pins ② and ④ must be connected to ③ on the PC board.

KPICA0018EB

HAMAMATSU

Information furnished by HAMAMATSU is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions. Specifications are subject to change without notice. No patent rights are granted to any of the circuits described herein.

Type numbers of products listed in the specification sheets or supplied as samples may have a suffix "(X)" which means tentative specifications or a suffix "(Z)" which means developmental specifications. ©2009 Hamamatsu Photonics K.K.

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81) 53-434-3311, Fax: (81) 53-434-5184, www.hamamatsu.com

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, P.O.Box 6910, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1) 908-231-0960, Fax: (1) 908-231-1218

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49) 8152-375-0, Fax: (49) 8152-265-8

France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trappu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: 33-(1) 69 53 71 00, Fax: 33-(1) 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44) 1707-294888, Fax: (44) 1707-325777

North Europe: Hamamatsu Photonics Norden AB: Smidesvägen 12, SE-171 41 Solna, Sweden, Telephone: (46) 8-509-031-00, Fax: (46) 8-509-031-01

Italy: Hamamatsu Photonics Italia S.R.L.: Strada della Moia, 1/E, 20020 Arese, (Milano), Italy, Telephone: (39) 02-935-81-733, Fax: (39) 02-935-81-741