



## GSM Power Socket

### Features

- SMS Text operated Power Outlet
- Sends Texts to upto five users
- Monitors Temperature & sends Text on Preset Value
- Sends Text on power Fail / Restored
- Easy User Setup
- Automatic time and date sync
- Switching Capability 3Kw
- EMC Compliant for Europe

### Applications

- Heating Controls
- Reboot PC / Servers
- Air Conditioning Control
- Appliances ON/OFF Control
- Remote Temperature Reporting



PLUGTEXT can be used to control any appliance upto 30A / 230Vac. Power can be switched by an sms Text, or by pressing the switch on the side of the unit. PLUGTEXT can also monitor ambient temperature and the presence of a mains power supply, it will automatically send an sms Text on a preset temperature or if power has failed / restored.


Part No	Description
PLUGTEXT	GSM Power Socket 230Vac

# PLUGTEXT GSM Socket



## Setup & Operation

Simply insert a simcard, send a text message and the GSM Power socket is ready to go. Operation can be by sending Text Message or pressing the switch on the unit.

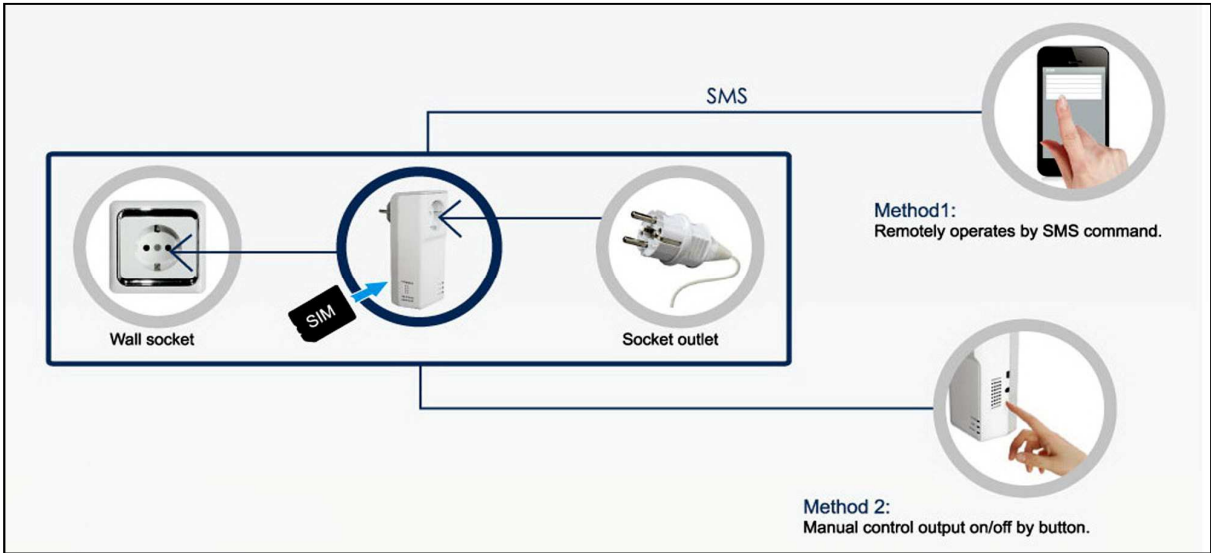

## Mechanical Data




# PLUGTEXT GSM Socket



## Quickstart Guide

1. On the rear of the unit **insert a simcard**,
2. Slide the power switch to ON

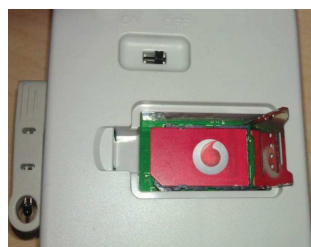

3. **Plug unit into wall socket** and switch on
4. The unit will now register with the network, see LEDs below
5. When Blue LED is ON unit ready for instructions



LED Status	ON	Flashing	OFF
<b>GREEN LED (POWER)</b>	Unit is switched ON		Unit is switched OFF
<b>BLUE LED (GSM Status)</b>	Registered onto mobile Network OK	Searching for Network or Sending SMS	No Sim card or no network available
<b>RED LED (Output)</b>	Output is ON		Output is OFF

### Add a Master number to the socket

The user must edit and send the following SMS to socket via his/her mobile phone (the phone number will be the **Master** number) in order to:

**Add a Master number to the socket: #00#**

**Successful SMS reply**

Welcome to use EMATE E3011.

Your Password is:1234

### To Switch Output ON

Send an SMS with the command **#01#**

The unit will reply with "The socket power output has been switched on"

### To Switch Output OFF

Send an SMS with the command **#02#**

The unit will reply with "The socket power output has been switched off"

### To perform a factory reset

Send an SMS with the command **#08#**

Or, press and hold the manual override button for 5 seconds.

For Full set of instructions (and many more features) please see User Manual

# PLUGTEXT GSM Socket



## Technical Characteristics

Parameter	Min	Typical	Max	Units
Supply Voltage	110		230	Vac
Operating Temperature	-10		+50	°C
External Temperature Sensor	-10		+50	°C
Sim Card		1.8 or 3.0		V
GSM Working Bands	EGSM900 DCS1800			

### RF Solutions Ltd. Recycling Notice

Meets the following EC Directives:

**DO NOT** Discard with normal waste, please recycle.

### ROHS Directive 2002/95/EC

Specifies certain limits for hazardous substances.

### WEEE Directive 2002/96/EC

Waste electrical & electronic equipment. This product must be disposed of through a licensed WEEE collection point. RF Solutions Ltd., fulfils its WEEE obligations by membership of an approved compliance scheme.

Waste Batteries and Accumulators

### Directive 2006/66/EC

Where batteries are fitted, before recycling the product, the batteries must be removed and disposed of at a licensed collection point.

Environment Agency producer registration number: WEE/JB0104WV.

**R F Solutions Ltd. ,  
Unit 21, Cliffe Industrial Estate,  
Lewes, E. Sussex. BN8 6JL. England.**

**Email : [sales@rfsolutions.co.uk](mailto:sales@rfsolutions.co.uk) <http://www.rfsolutions.co.uk>**

**Tel Sales: 01273 898 020 Tel Technical: 01273 898 007**

**Tel Gen Enq: 01273 898 000**

Whilst the information in this document is believed to be correct at the time of issue, RF Solutions Ltd does not accept any liability whatsoever for its accuracy, adequacy or completeness. No express or implied warranty or representation is given relating to the information contained in this document. RF Solutions Ltd reserves the right to make changes and improvements to the product(s) described herein without notice. Buyers and other users should determine for themselves the suitability of any such information or products for their own particular requirements or specification(s). RF Solutions Ltd shall not be liable for any loss or damage caused as a result of user's own determination of how to deploy or use RF Solutions Ltd's products. Use of RF Solutions Ltd products or components in life support and/or safety applications is not authorised except with express written approval. No licences are created, implicitly or otherwise, under any of RF Solutions Ltd's intellectual property rights. Liability for loss or damage resulting or caused by reliance on the information contained herein or from the use of the product (including liability resulting from negligence or where RF Solutions Ltd was aware of the possibility of such loss or damage arising) is excluded. This will not operate to limit or restrict RF Solutions Ltd's liability for death or personal injury resulting from its negligence.

[www.rfsolutions.co.uk](http://www.rfsolutions.co.uk)

### RF Solutions Ltd

Unit 21 Cliffe Industrial Estate, Lewes, East Sussex, United Kingdom, BN8 6JL  
Tel. Sales: +44 (0)1273 898 000 • Tech. Support: +44 (0)1273 898 007

