### IOTA ENGINEERING

PRODUCT SPECIFICATION SHEET

DLS-54-13

120VAC - 48VDC CHARGER/CONVERTER



# DESCRIPTION

The **DLS-54-13** battery charger/power converter from IOTA Engineering converts nominal 120V A.C. voltage to 54.4V D.C. As a power supply, its tightly controlled regulation allows the user to operate any appropriate nominal D.C. load up to the converter's rated output current. As a battery charger, the **DLS-54-13** will maintain the battery, delivering its full-rated current when the battery capacity falls sufficiently low. The voltage is set to deliver its maximum current for the necessary period of time that minimizes undue stress to the battery caused by heating of its cells. This helps to ensure the longest possible life of the battery. Over time, as the battery nears its full capacity, the converter will float-charge the battery to prevent self-discharge of its cells.

#### **TECHNICAL SPECIFICATIONS**

	1
DC Output Voltage (No Load) approx.	54.4V (DC)
Output Voltage Tolerance (No Load)	+ or5%
Output Amperage, Max Continuous	13 Amps
Output Voltage (Full Load) approx.	>54V (DC)
Maximum Power Output, Continuous	700 Watts
Ripple and Noise	<100 mV rms
Input Voltage Range	108 - 132 AC
Input Voltage Frequency	47-63
Maximum AC Current (@108VAC)	12.6 Amps
Typical Efficiency	>80%
Max Inrush Current, Single Cycle	30 Amps
Short Circuit Protection	Yes
Overload Protection	>100%
Line Regulation	100 mV rms
Load Regulation	<1%
Fan Control*	Proportional
Thermal Protection	YES
Working Temperature Range	0° - 40° C
Storage Temperature	-20° to 80° C
Withstand Voltage**	1700/1700/500
Dimensions <sup>†</sup>	9.7″ x 6.7″ x 3.4″
Weight	5.0 lbs

<sup>\*</sup>Proportional = Fan speed proportional to case temperature.

\*\*Primary to Chassis/Primary to Secondary/Secondary to Chassis

#### **PRODUCT OVERVIEW**

Output Amperage 13 Amps   Input Voltage Range 108 - 132 AC   Input Voltage Frequency 47-63 Hz	DC Output Voltage	54.4V (DC) @ FULL LOAD
	Output Amperage	13 Amps
Input Voltage Frequency 47-63 Hz	Input Voltage Range	108 - 132 AC
	Input Voltage Frequency	47-63 Hz

#### FEATURES

Switch-mode technology

Exceptionally clean DC output

Tight line-load regulation

Quickly and efficiently charges batteries

Designed to withstand low transient AC line voltage

Current limit and thermal/overload protection

Lower operating temperature

Proportional fan control circuitry allows fan to start and stop slowly for quiet fan operation

External reverse polarity fuse protection from incorrect battery connection

Charging Jack allows for normal and high-stage charging

Compatible with IOTA IQ Smart Charger<sup>++</sup> for automatic three-stage charging



P.O. BOX 11846 TUCSON, AZ 85734 (520) 294-3292 • FAX (520) 741-2837 www.iotaengineering.com

 <sup>&</sup>quot;See reverse side for detailed mounting specifications.
"Use only the IQ-54V Model Smart Charger in conjunction with the DLS-54-13.

# DLS-54-13

BATTERY CHARGER/POWER CONVERTER

#### OPTIONS

# MODELS

DLS-54-13


DLS-54-13/IQ4 (with integrated IQ Smart Charger)

# DUAL VOLTAGE JACK

The **DLS-54-13** is equipped with a Dual Voltage Jack and Dual Voltage Plug that allows manual switching from a long-term float voltage of 54.4vdc to 59vdc. When the Dual Voltage Plug is inserted in the jack, the voltage increases to 59vdc for occasional fast charging. When the plug is removed, the voltage drops to 54.4vdc to reduce battery water loss.

The Dual Voltage Jack also allows for easy installation of an external IQ4 Smart Charger\* for automatic 3-stage charging (optional). If the unit is equipped with an internal IQ4 smart charger, two-step charging is not needed and the Dual Voltage Jack is disabled. For details on 3-stage charging voltages, refer to the IQ4 instruction manual.


\*Use only the IQ-54V Model Smart Charger in conjunction with the DLS-54-13.

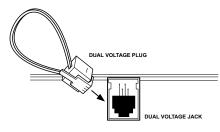

#### INSTALLATION OVERVIEW

Disconnect the positive side of the battery before installation. Connect the positive (red) and negative (black) terminal lugs to battery or load. Always use the proper size wire based on the amperage of the converter and the battery. When connecting to a battery, a breaker should be installed within 18" of the battery, connecting the battery positive to the line side of the breaker, and the DLS to the load side. Connect "Chassis Bonding Lug" on the DLS to vehicle chassis or other grounding source.


Plug the DLS A.C. input cord into a 120 volt 3-wire grounded source. See chart for maximum current draw and required input voltages. For complete installation guidelines, refer to the installation manual.

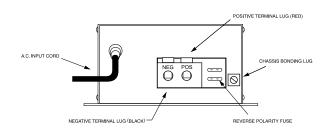

#### WARRANTY

The DLS Series Battery Charger/Power Converter is warranted from defects in materials or workmanship for two years from date of retail purchase, and limits the remedies to repair or replacement. This warranty is valid only in the continental United States and Canada. For complete warranty details, contact Customer Service or visit www.iotaengineering.com.

# MOUNTING FOOTPRINT

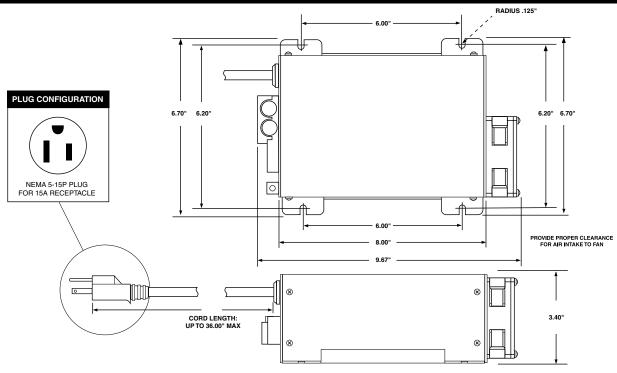

IOTA REV 011315